


Fuel Rail Pressure (FRP) Sensor — 3.5L GTDI



Material	
Item	Specification
Motorcraft® SAE 5W-20 Premium Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

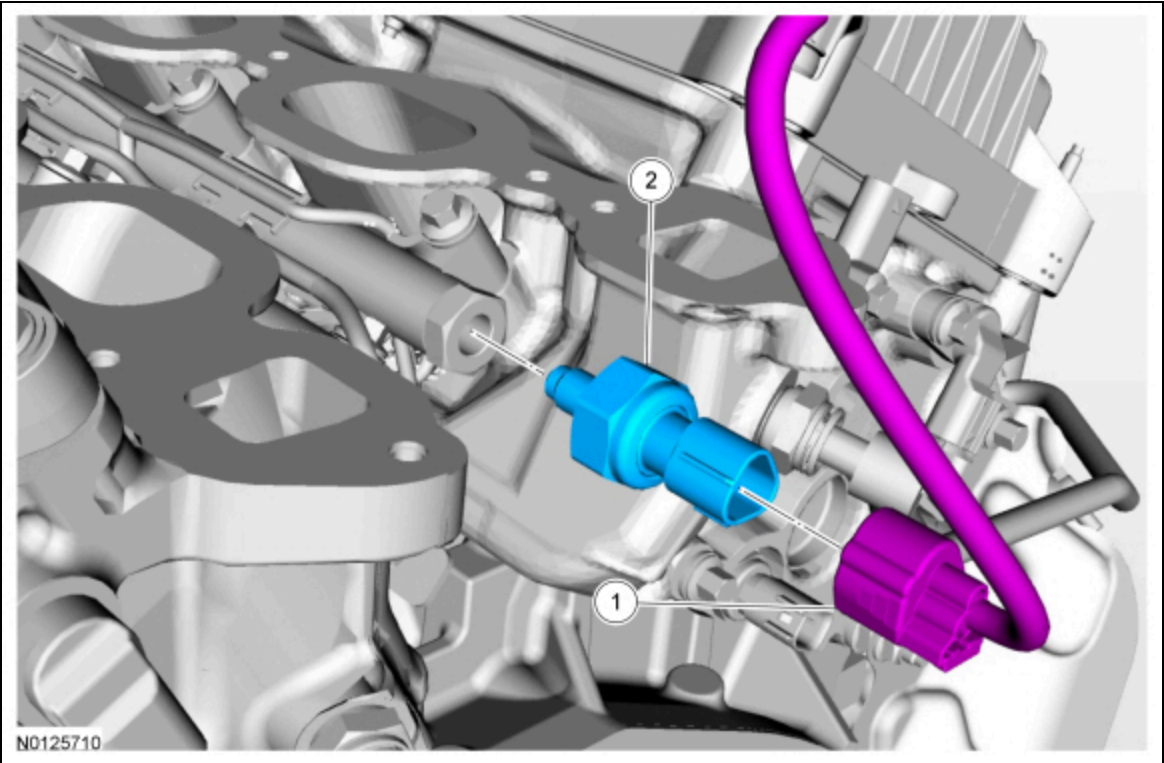

Item	Part Number	Description
1	—	Fuel Rail Pressure (FRP) sensor electrical connector (part of 12C508)
2	9G7569G756	FRP sensor

Removal

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even

when the engine is not running. Failure to follow this instruction may result in serious personal injury.


1. Release the fuel system pressure. For additional information, refer to Section 310-00.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Remove the intake manifold. For additional information, refer to Section 303-01A.
4. Disconnect the Fuel Rail Pressure (FRP) sensor electrical connector.
5. **NOTICE: During repair procedure, cleanliness is extremely important. Any foreign material, including any material created while cleaning or removing components that enters the fuel supply passages may cause engine failure.**

NOTE: Use compressed air to remove any foreign material from around the FRP sensor area before removal.

Remove and discard the FRP sensor.

Installation

1. Lubricate the tip and thread area of the new FRP sensor with clean engine oil prior to installation.

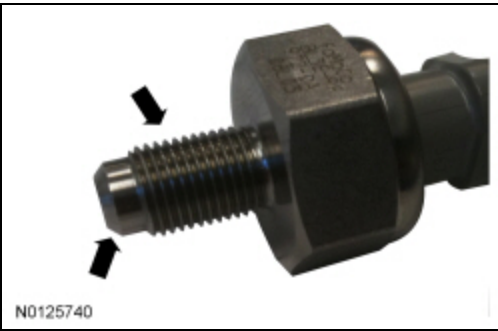

2. **NOTICE: During repair procedure, cleanliness is extremely important. Any foreign material, including any material created while cleaning or removing components that enters the fuel supply passages may cause engine failure.**

Install the FRP sensor.

- To install, tighten to 33 Nm (24 lb-ft).

3. Connect the FRP sensor electrical connector.
4. Install the intake manifold. For additional information, refer to Section 303-01A.
5. Connect the battery ground cable. For additional information, refer to Section 414-01.