


Mass Air Flow (MAF) Sensor — 3.7L, 5.0L (4V), 6.2L (2V)

 [Ford Ecat Electronic Parts Catalog](#)

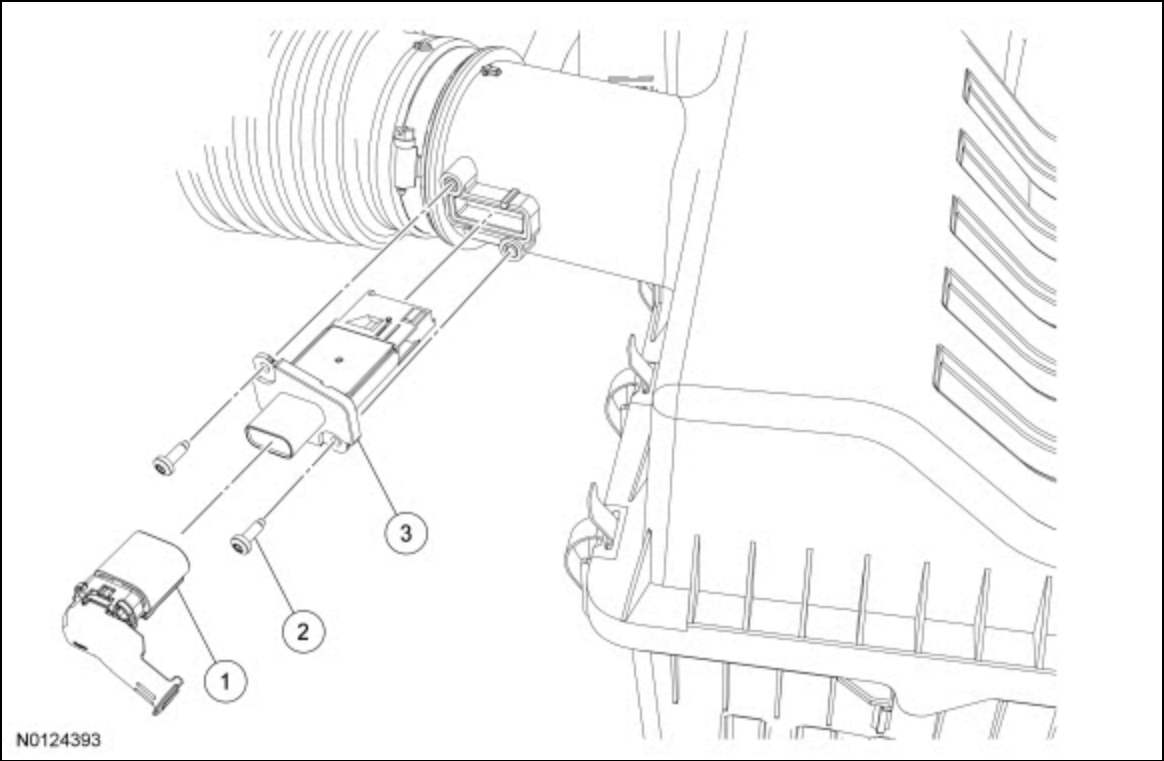

Item	Part Number	Description
1	—	Mass Air Flow (MAF) sensor electrical connector (part of 12A581)
2	W709287 W709287	MAF sensor screw (2 required)
3	12B579 12B579	MAF sensor

Removal and Installation

1. Disconnect the Mass Air Flow (MAF) sensor electrical connector.
2. Remove the 2 screws and the MAF sensor.
3. To install, reverse the removal procedure.