


Ride Height Measurement




Front Ride Height Measurement

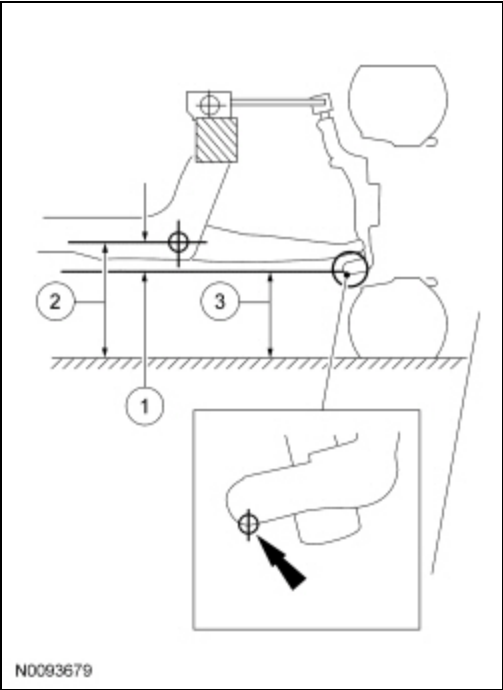


Item	Description
1	Ride height = 2 - 3
2	Measurement 2
3	Measurement 3


1. **NOTE:** Make sure that the vehicle is positioned on a flat, level surface.
- Jounce front and rear suspension vigorously to allow the vehicle to settle.
2. Before measuring ride height check:
 - Tires are inflated to the correct pressure.
 - Vehicle should have at least one-half tank of fuel.
 - All fluids at proper levels
 - No cargo inside the cab or bed.
 - Inspect for aftermarket equipment.
 - Check for aftermarket changes to the steering, suspension, wheel and tire components (such as competition, heavy duty, etc.).
3. Position a suitable surface gauge (such as Starrett 57D Surface Gauge) on a flat, level surface and adjust the gauge arm until the scribe point is located in the center of the rearward lower arm bolt.
 - Lock the surface gauge in this position.

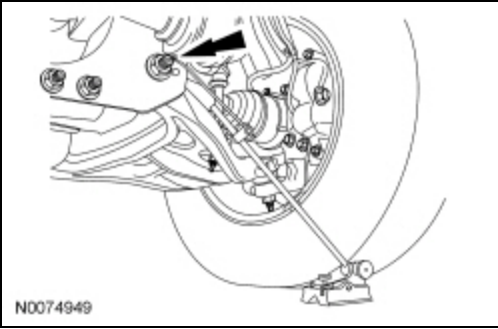


4. With the surface gauge positioned on a flat, level surface, record the measurement of the surface gauge position (measurement 2).

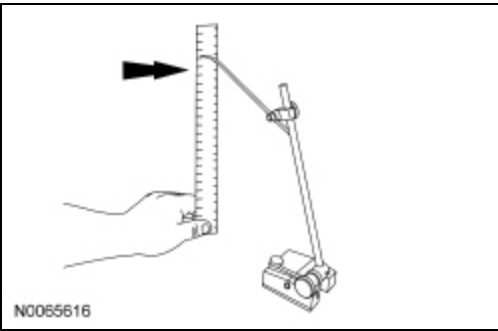

5. Position the surface gauge on the same flat, level surface as used in Step 1 and adjust the gauge arm until the scribe point is located at the lowest point on the wheel knuckle.
 - Lock the surface gauge in this position.

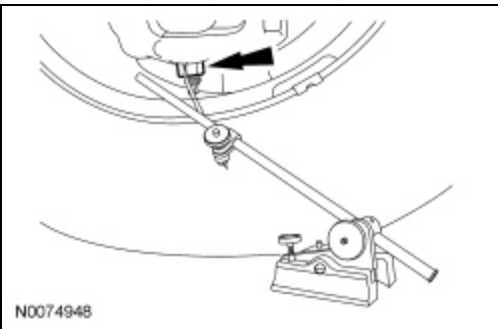


6. With the surface gauge positioned on a flat, level surface, record the measurement of the surface gauge position (measurement 3).

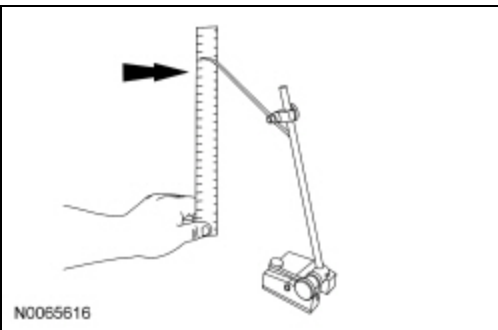

7. Subtract measurement 3 from measurement 2 to obtain the front ride height.
 - Refer to Specifications in this section.

Rear Ride Height Measurement (All Except SVT Raptor)

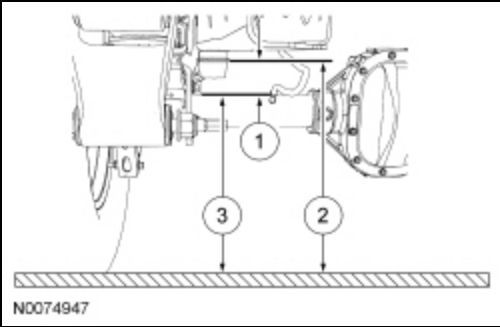

Item	Description
1	Ride height
2	Rear axle jounce stop
3	Top of the rear axle tube

1. **NOTE:** Make sure that the vehicle is positioned on a flat, level surface.


Jounce front and rear suspension vigorously to allow the vehicle to settle.

2. Before measuring ride height check:

- Tires are inflated to the correct pressure.
- Vehicle should have at least one-half tank of fuel.
- All fluids at proper levels
- No cargo inside the cab or bed.
- Inspect for aftermarket equipment.
 - Check for aftermarket changes to the steering, suspension, wheel and tire components (such as competition, heavy duty, etc.).

3. Measure the distance between the rear axle jounce stop (Item 2) and the top of the rear axle tube (Item 3) to obtain the rear ride height (Item 1).

Rear Ride Height Measurement (SVT Raptor)

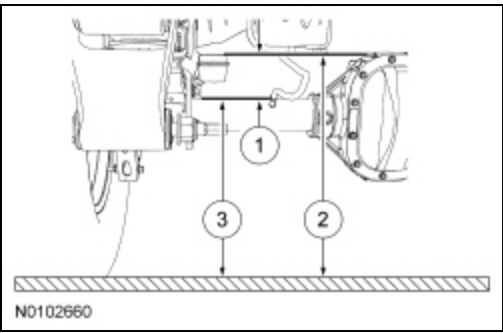

Item	Description
1	Ride height
2	Rear frame rail
3	Top of the rear axle tube

1. **NOTE:** Make sure that the vehicle is positioned on a flat, level surface.

Jounce front and rear suspension vigorously to allow the vehicle to settle.

2. Before measuring ride height check:

- Tires are inflated to the correct pressure.
- Vehicle should have at least one-half tank of fuel.
- All fluids at proper levels
- No cargo inside the cab or bed.
- Inspect for aftermarket equipment.
 - Check for aftermarket changes to the steering, suspension, wheel and tire components (such as competition, heavy duty, etc.).

3. Measure the distance between the rear frame rail (Item 2) and the top of the rear axle tube (Item 3) to obtain the rear ride height (Item 1).