



Toe Adjustment — Front



1. Using alignment equipment and the manufacturer's instructions, measure the front toe.
 - Refer to Alignment Specifications in the Specifications portion of this section for optimal alignment settings.
 - If the front toe values are not within specification, go to the next step.
2. Start the engine and center the steering wheel.
3. Turn the engine off and, using a suitable steering wheel holding device, lock the steering wheel in the straight-ahead position.
4. Remove the steering gear bellows clamp(s).

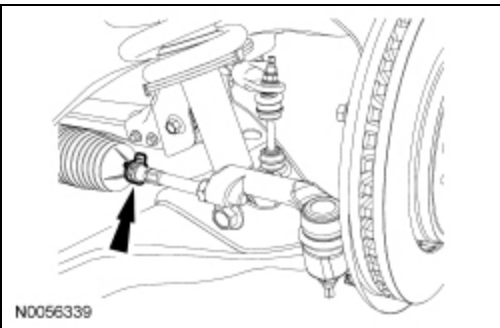


5. Loosen the tie-rod end jam nut(s).

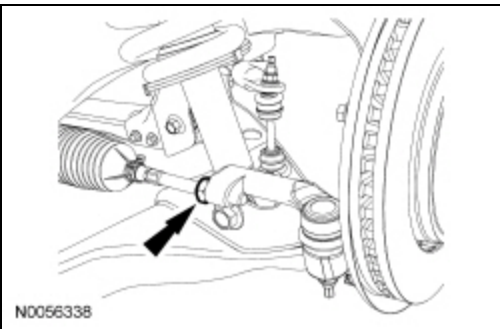

6. **NOTE:** Do not allow the steering gear bellows to twist while rotating the tie rod.


Rotate the tie rod(s) to achieve the desired toe setting.

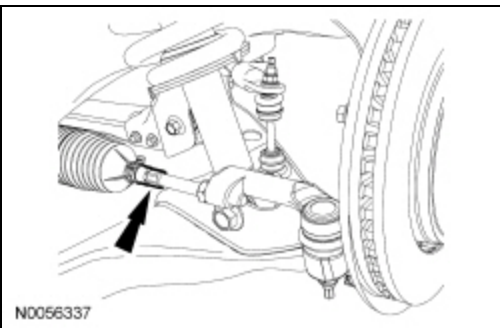

7. **NOTICE:** Make sure to hold the tie-rod end stationary while tightening the jam nut or damage to the boot may occur.

NOTE: Make sure that the toe settings are not disturbed while tightening the jam nuts.

Tighten the tie-rod end jam nut(s) to 103 Nm (76 lb-ft).

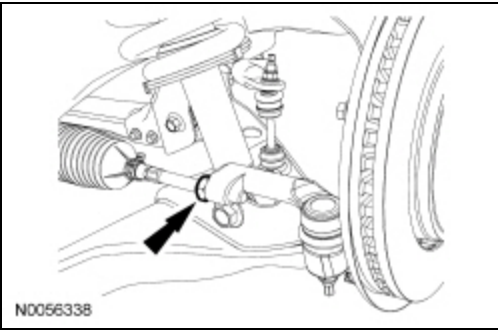

8. Install the steering gear bellows clamp(s).

