


Shock Absorber and Spring Assembly

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2945-A	Separator, Ball Joint 204-592
--	----------------------------------

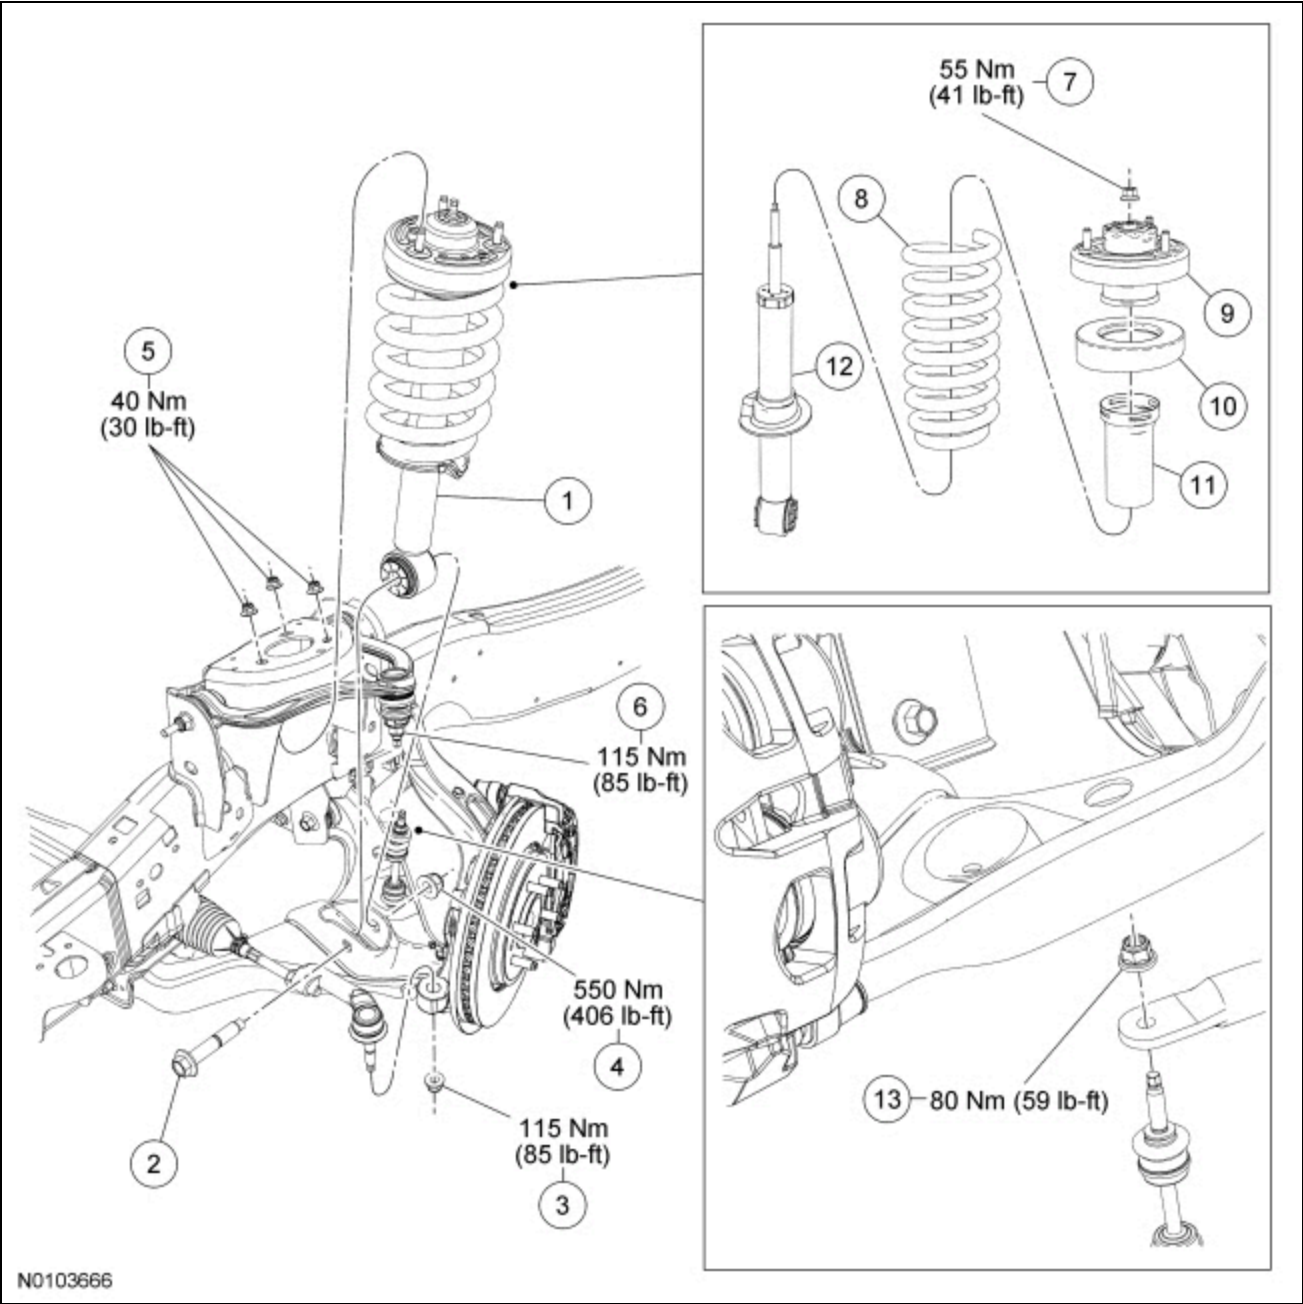


Item	Part Number	Description
1	18B03618B036	Shock absorber and spring assembly

2	W712682 W712682	Shock absorber lower bolt
3	W707251 W707251	Tie-rod end nut
4	W520217 W520217	Shock absorber lower nut
5	W712334 W712334	Shock absorber upper mount nuts (3 required)
6	W520215 W520215	Upper ball joint nut
7	W712134 W712134	Shock rod nut
8	5310 5310	Spring
9	18A099 18A099	Upper mount
10	18A154 18A154	Insulator
11	18A047 18A047	Dust boot
12	18045 18045	Shock absorber
13	N807144 N807144	Stabilizer bar link upper nut


Removal

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

1. Remove and discard the shock absorber upper mount nuts.
2. Remove the wheel and tire. For additional information, refer to Section 204-04.
3. Remove and discard the tie-rod end nut.
4. Using the Ball Joint Separator, separate the tie-rod end from the wheel knuckle.

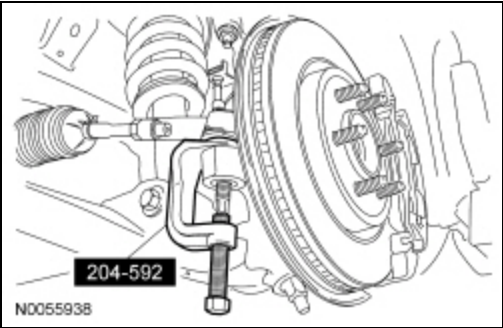


5. Remove and discard the upper ball joint nut.
6. Remove and discard the stabilizer bar link upper nut.
7. Remove and discard the shock absorber lower nut and bolt.
8. Using the Ball Joint Separator, disconnect the upper arm ball joint from the wheel knuckle and remove the shock absorber and spring assembly.

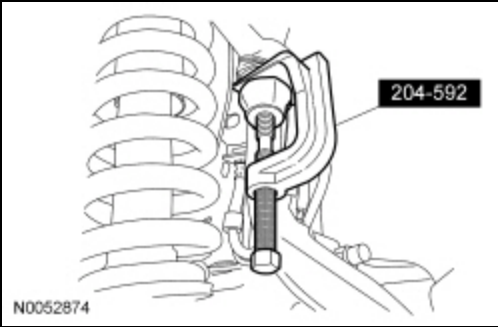

9. **NOTE:** *If the individual spring and/or shock components are not being serviced, continue to the installation procedure.*

NOTE: *For reference during assembly, index the upper mount, spring and shock absorber.*

Using a suitable spring compressor, compress the spring until the tension is released from the shock absorber.

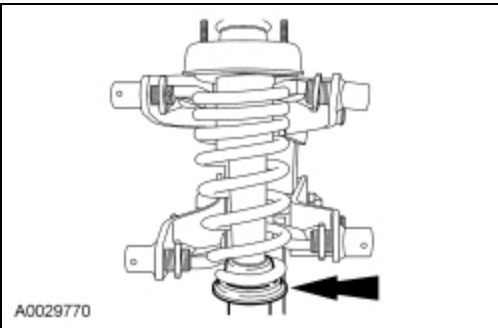


10. **NOTE:** *Use the hex-holding feature to prevent the shock rod from turning while removing the nut.*

While holding the shock rod, remove the nut and the shock absorber.

- Discard the nut.


11. Remove the upper mount, dust boot and insulator.

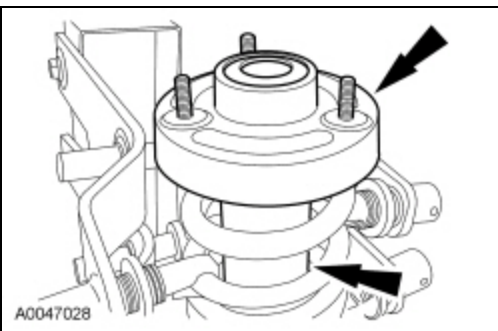

Installation


NOTICE: **Do not tighten the lower shock nut until the installation procedure is complete and the weight of the vehicle is resting on the wheel and tire assemblies or incorrect clamp load and bushing damage may occur.**

1. Position the shock absorber and spring and install the dust boot, insulator and the upper mount.

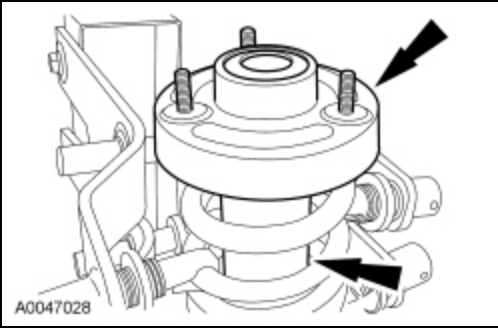

2. **NOTE:** *Align the index marks made during disassembly.*

Using a suitable spring compressor, compress the spring until the tension is released from the shock absorber.

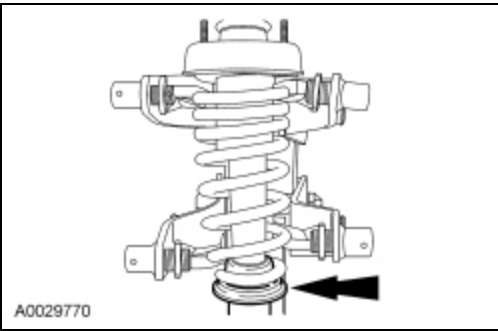

3. **NOTE:** *Use the hex-holding feature to prevent the shock rod from turning while installing the nut.*

While holding the shock rod, install the new shock absorber and the shock rod nut.

- Tighten to 55 Nm (41 lb-ft).

4. **NOTE:** *Do not tighten the nut at this time.*

Position the shock absorber and loosely install the new shock absorber lower nut and bolt.

5. Connect the upper arm ball joint to the wheel knuckle and install the new nut.

- Tighten to 115 Nm (85 lb-ft).

6. Install a new stabilizer bar link upper nut.

- Tighten to 80 Nm (59 lb-ft).

7. Install the new tie-rod end nut.

- Tighten to 115 Nm (85 lb-ft).

8. Install the wheel and tire. For additional information, refer to Section 204-04.

9. Install the new shock absorber upper mount nuts.

- Tighten to 40 Nm (30 lb-ft).

10. With the weight of the vehicle on the wheel and tire, tighten the shock absorber lower nut to 550 Nm (406 lb-ft).