


Wheel Knuckle

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2945-A	Separator, Ball Joint 204-592
--	----------------------------------

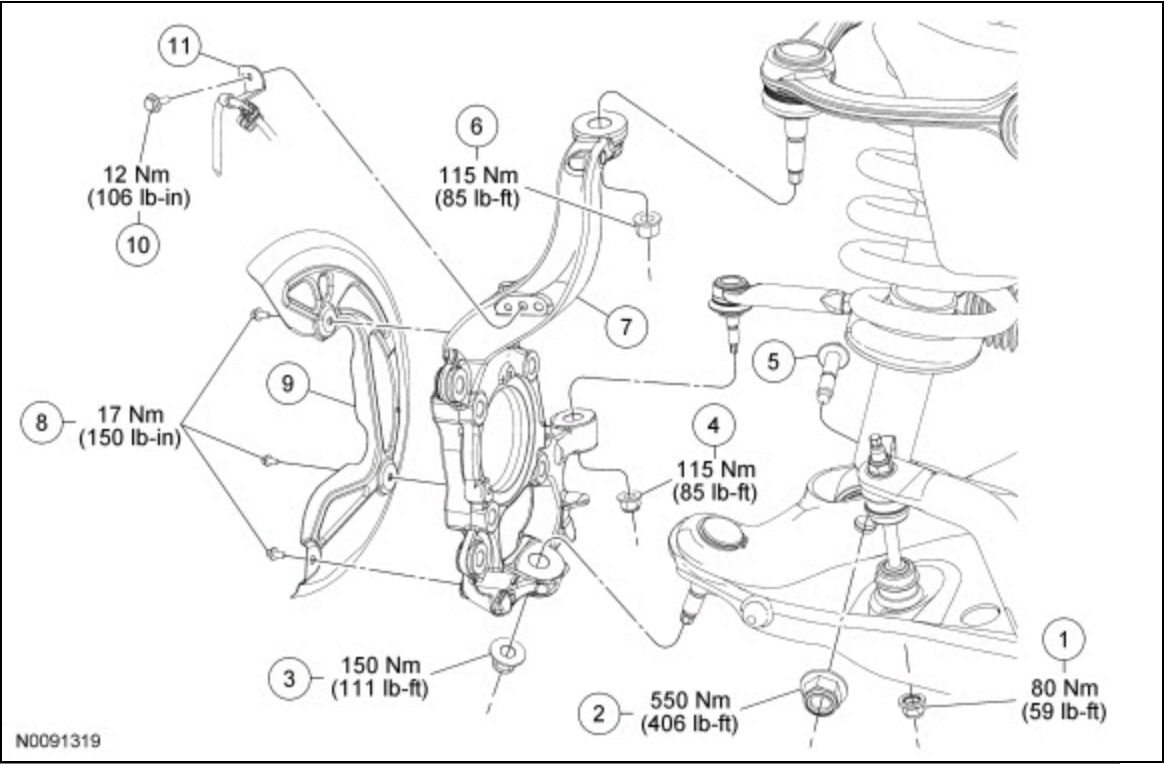


Item	Part Number	Description
1	N807144 N807144	Stabilizer bar link lower nut
2	W520217 W520217	Shock absorber lower nut
3	W707254 W707254	Lower ball joint nut
4	W520215 W520215	Tie-rod end nut
5	W712682 W712682	Shock absorber lower bolt
6	W520215 W520215	Upper ball joint nut
7	3K186 3K186 LH/ 3K185 RH LH/ 3K185 RH	Wheel knuckle
8	W505252 W505252	Brake disc shield bolts (3 required)
9	2K0052 2K005 LH/ 2K004 RH LH/ 2K004 RH	Brake disc shield

10	W710279 W710279	Wheel speed sensor harness bracket bolt
11	—	Wheel speed sensor harness bracket (part of 2C204)


Removal

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

1. Remove the wheel bearing and wheel hub. For additional information, refer to Wheel Bearing and Wheel Hub in this section.
2. Remove and discard the tie-rod end nut.
3. Using the Ball Joint Separator, separate the tie-rod end from the wheel knuckle.

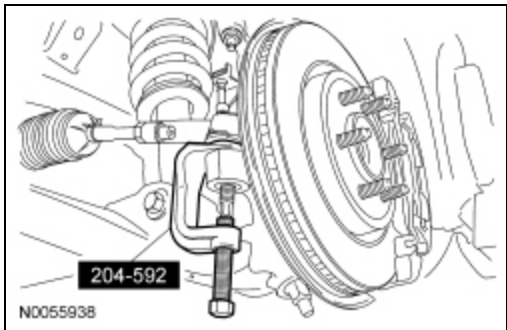

4. Remove the wheel speed sensor harness bracket bolt and position the harness aside.

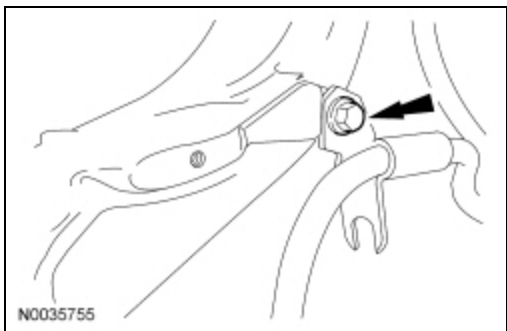


5. **NOTE:** Use the hex-holding feature to prevent the stud from turning while removing the nut.

Remove and discard the stabilizer bar link lower nut.

6. Remove and discard the shock absorber lower nut and bolt.
7. Remove and discard the upper ball joint nut.
8. **NOTE:** Be sure not to damage the ball joint boot when installing the Ball Joint Separator.


Using the Ball Joint Separator, separate the upper ball joint from the wheel knuckle.

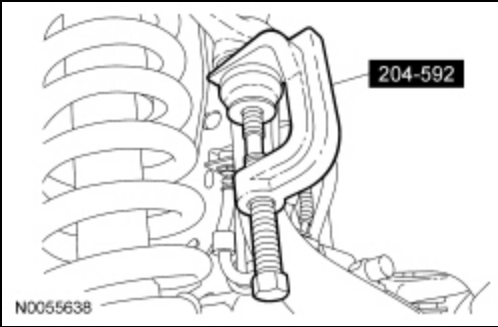

9. Remove and discard the lower ball joint nut.

10. **NOTICE: Make sure to use the Ball Joint Separator when separating the lower ball joint from the knuckle to prevent damage to the ball joint boot.**

Using the Ball Joint Separator, separate the lower ball joint from the wheel knuckle.

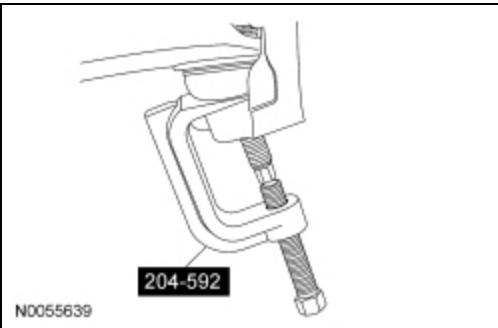

11. If necessary, remove the 3 brake disc shield bolts and remove the brake disc shield.

Installation

NOTICE: Do not tighten the lower shock nut until the installation procedure is complete and the weight of the vehicle is resting on the wheel and tire assemblies or incorrect clamp load and bushing damage may occur.


1. If necessary, install the brake disc shield and the 3 brake disc shield bolts.
 - Tighten to 17 Nm (150 lb-in).
2. Position the lower ball joint into the wheel knuckle and install the new lower ball joint nut.
 - Tighten to 150 Nm (111 lb-ft).
3. Position the upper ball joint into the wheel knuckle and install the new upper ball joint nut.
 - Tighten to 115 Nm (85 lb-ft).
4. **NOTE: Do not tighten the nut at this time.**

Loosely install the new shock absorber lower nut and bolt.

5. **NOTE: Use the hex-holding feature to prevent the stud from turning while installing the nut.**

Position the stabilizer bar link and install the new stabilizer bar link lower nut.

- Tighten to 80 Nm (59 lb-ft).
6. Position the wheel speed sensor harness bracket and install the wheel speed sensor harness bracket bolt.
 - Tighten to 12 Nm (106 lb-in).

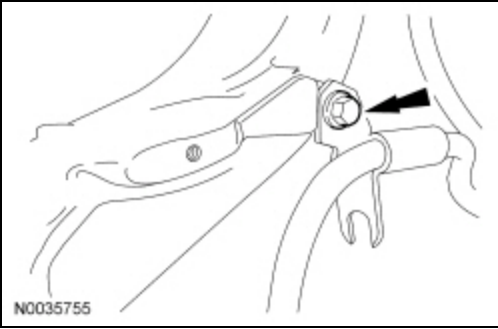

7. Position the tie-rod end and install the new tie-rod end nut.
 - Tighten to 115 Nm (85 lb-ft).
8. Install the wheel bearing and wheel hub. For additional information, refer to Wheel Bearing and Wheel Hub in this section.
9. With the weight of the vehicle on the wheel and tire, tighten the shock absorber lower nut to 550 Nm (406 lb-ft).