

Ball Joint — Lower


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

|                                                                                               |                                                 |
|-----------------------------------------------------------------------------------------------|-------------------------------------------------|
| <br>ST2929-A  | Installer/Remover, Ball Joint<br>204-358        |
| <br>ST1172-A  | Installer/Remover, C-Frame and Screw<br>205-086 |
| <br>ST1855-A | Remover, Ball Joint<br>204-182                  |

Material

| Item                                      | Specification |
|-------------------------------------------|---------------|
| Motorcraft® Metal Surface Prep<br>ZC-31-B | —             |

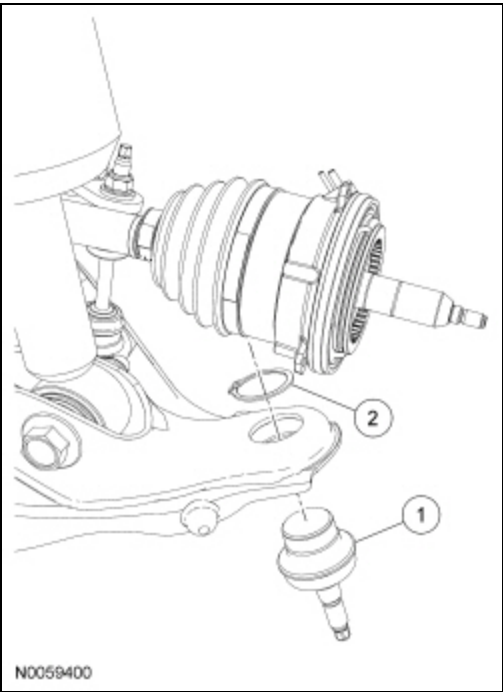


| Item | Part Number | Description |
|------|-------------|-------------|
|------|-------------|-------------|

|   |                           |                                               |
|---|---------------------------|-----------------------------------------------|
| 1 | 3050 <a href="#">3050</a> | Lower ball joint                              |
| 2 | —                         | Lower ball joint snap ring (part of 3050 kit) |

## Removal

### All vehicles

1. Remove the wheel knuckle. For additional information, refer to Wheel Knuckle in this section.
2. Remove and discard the lower ball joint snap ring.
3. Using the C-Frame and Screw Installer/Remover and Ball Joint Remover, remove and discard the lower ball joint.

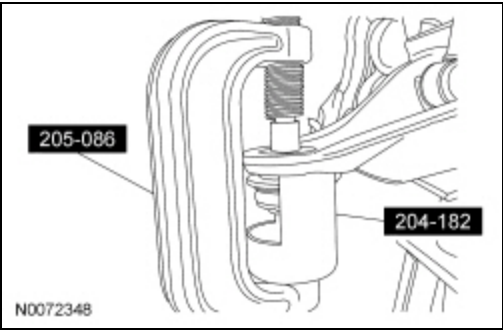

### SVT Raptor

4. Using a clean shop towel and the specified surface cleaner, clean the lower arm ball joint bore and inspect for cracks or damage before installing a new ball joint. If there is evidence of cracks or damage, a new lower arm must be installed.


## Installation

### SVT Raptor

**NOTICE:** Use care to prevent adhesive from contacting the ball joint boot or damage to the boot may occur, causing premature ball joint failure.

**NOTE:** To allow the adhesive to fully cure, the vehicle must not be driven on the road for at least one hour after the installation of a new ball joint.

1. Apply an even coat of adhesive (supplied with the kit) to the lower arm ball joint bore and the ball joint.

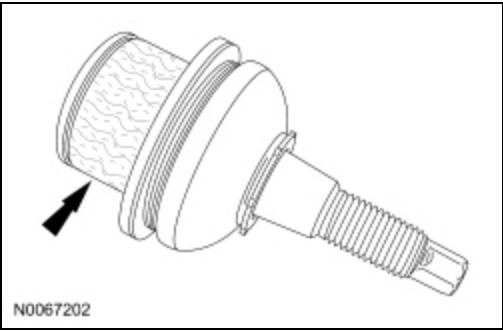


### All vehicles

2. **NOTICE:** Do not damage the lower ball joint boot when installing the C-Frame and Screw Installer/Remover and Ball Joint Installer/Remover or premature failure of the ball joint may occur.

**NOTE:** Make sure the lower ball joint snap ring is fully seated.

Using the C-Frame and Screw Installer/Remover and Ball Joint Installer/Remover, install the new lower ball joint.

- Install the new lower ball joint snap ring.

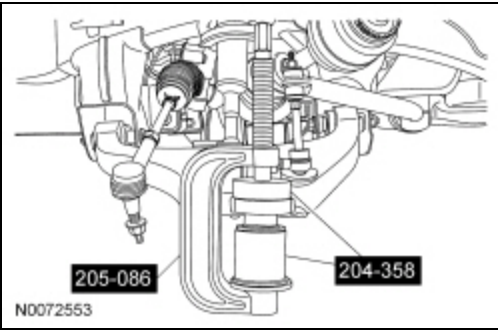

## **SVT Raptor**

3. Using a clean shop towel and the specified surface cleaner, wipe any excess adhesive from the ball joint and lower arm.

## **All vehicles**

4. Install the wheel knuckle. For additional information, refer to Wheel Knuckle in this section.