


Lower Arm


 [Ford Ecat Electronic Parts Catalog](#)

All Except SVT Raptor

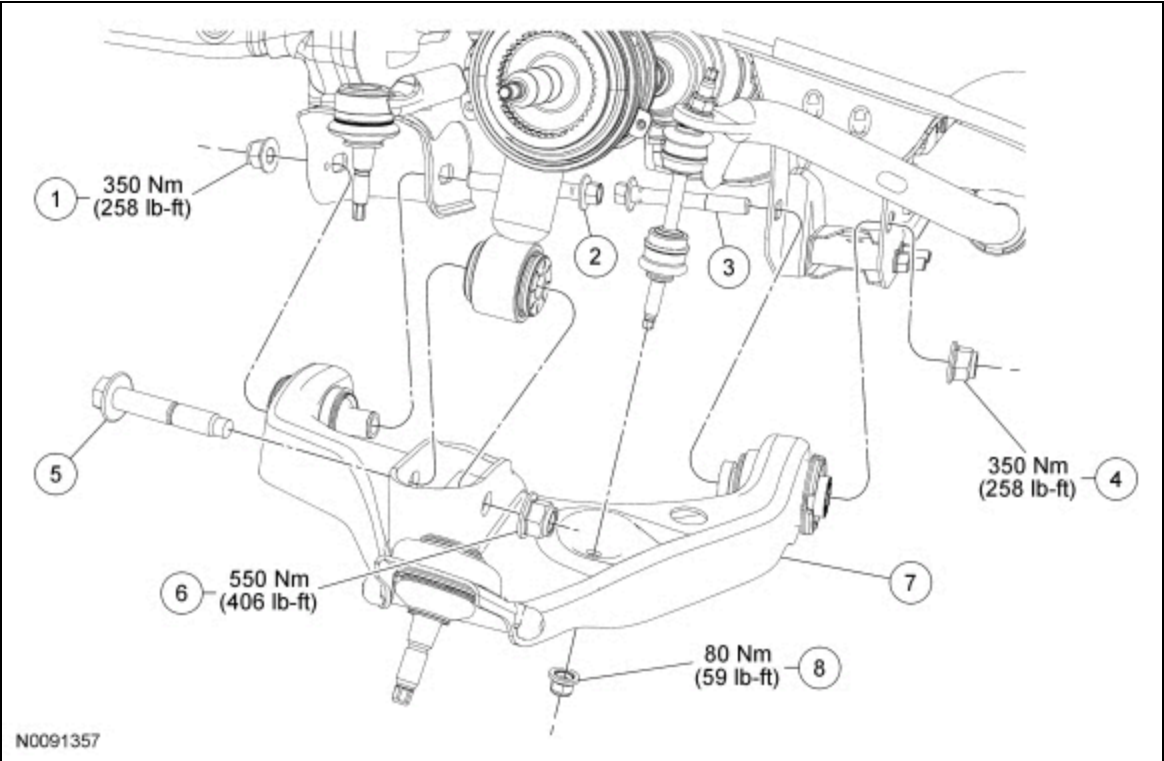

Item	Part Number	Description
1	W711310 W711310	Lower arm forward nut
2	W711399 W711399	Lower arm forward bolt
3	W709877 W709877	Lower arm rearward bolt
4	W711310 W711310	Lower arm rearward nut
5	W712682 W712682	Shock absorber lower bolt
6	W520217 W520217	Shock absorber lower nut
7	3051 3051 LH/ 3042 RH LH/ 3042 RH	Lower arm
8	N807144 N807144	Stabilizer bar link lower nut

SVT Raptor

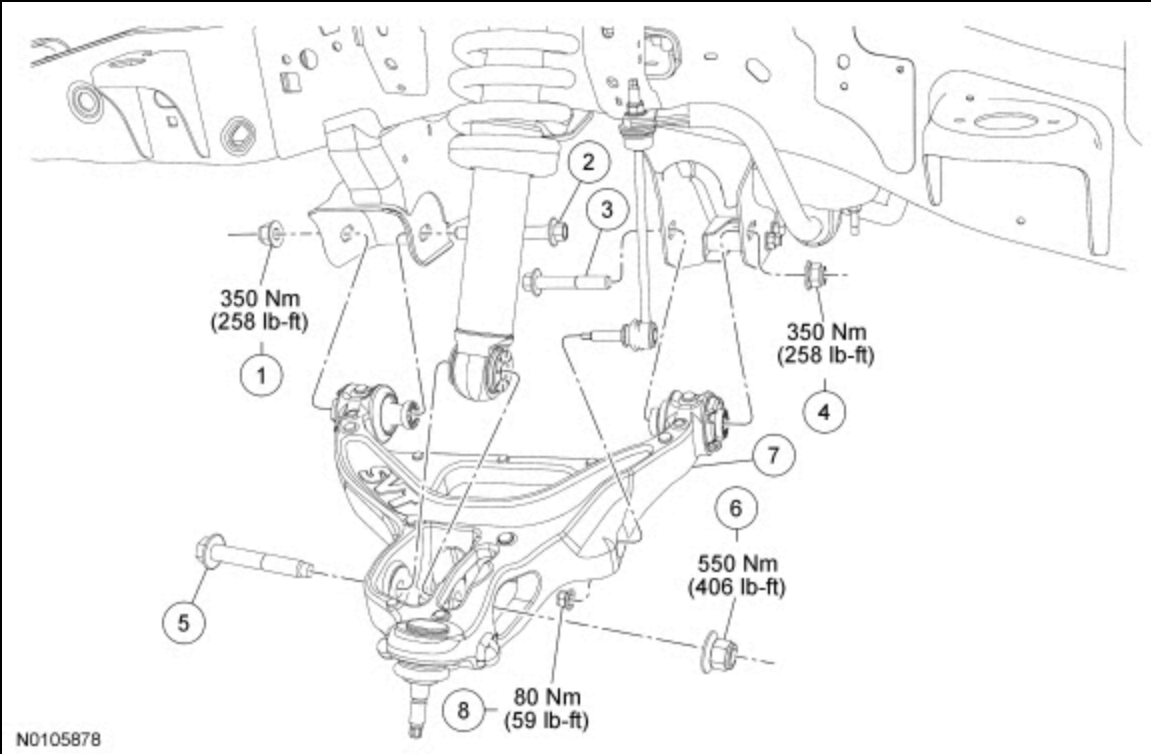


Item	Part Number	Description
1	W707254 W707254	Lower arm forward nut
2	W707843 W707843	Lower arm forward bolt
3	W707202 W707202	Lower arm rearward bolt
4	W707254 W707254	Lower arm rearward nut
5	W712104 W712104	Shock absorber lower bolt
6	W707019 W707019	Shock absorber lower nut
7	3051 3051 LH/ 3042 RH LH/ 3042 RH	Lower arm
8	W520214 W520214	Stabilizer bar link lower nut

Removal

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

1. Measure the distance from the center of the hub to the lip of the fender with the vehicle in a level, static ground position (curb height).

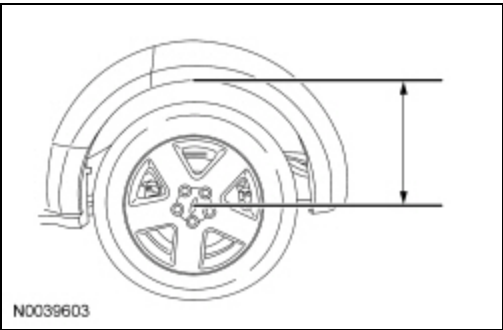

2. Remove the wheel knuckle. For additional information, refer to Wheel Knuckle in this section.

3. **NOTE:** Use the hex-holding feature to prevent the stud from turning while removing the nut.

Remove and discard the stabilizer bar link lower nut.

4. Remove and discard the lower arm rearward nut and bolt.

5. Remove and discard the lower arm forward nut and bolt.

6. Remove the shock absorber lower nut, bolt and the lower arm.

- Discard the shock absorber lower nut and bolt.

Installation

NOTICE: Do not tighten the shock absorber lower nut, lower arm forward nut or lower arm rearward nut until the installation procedure is complete and the weight of the vehicle is resting on the wheel and tire assemblies.

1. Position the lower arm and loosely install the new shock absorber lower bolt and nut.

2. Loosely install the new lower arm forward nut and bolt.


3. Loosely install the new lower arm rearward nut and bolt.

4. **NOTE:** Use the hex-holding feature to prevent the stud from turning while installing the nut.

Install the new stabilizer bar link lower nut.

- Tighten to 80 Nm (59 lb-ft).

5. Use a suitable jack to raise the suspension until the distance between the center of the hub and the lip of the fender is equal to the measurement taken in Step 1 (curb height).

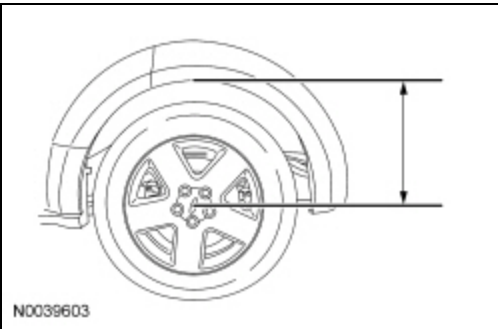

6. **NOTE:** Use a crowfoot wrench to tighten the lower arm rearward nut.

Tighten the lower arm rearward nut to 350 Nm (258 lb-ft).

7. Tighten the lower arm forward nut to 350 Nm (258 lb-ft).

8. Tighten the shock absorber lower nut to 550 Nm (406 lb-ft).

9. Install the wheel and tire. For additional information, refer to Section 204-04.

10. Check and, if necessary, align the front end. For additional information, refer to Section 204-00.