


Shock Absorber and Spring Assembly

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)





 ST2945-A	Separator, Ball Joint 204-592
--	----------------------------------

All Except SVT Raptor

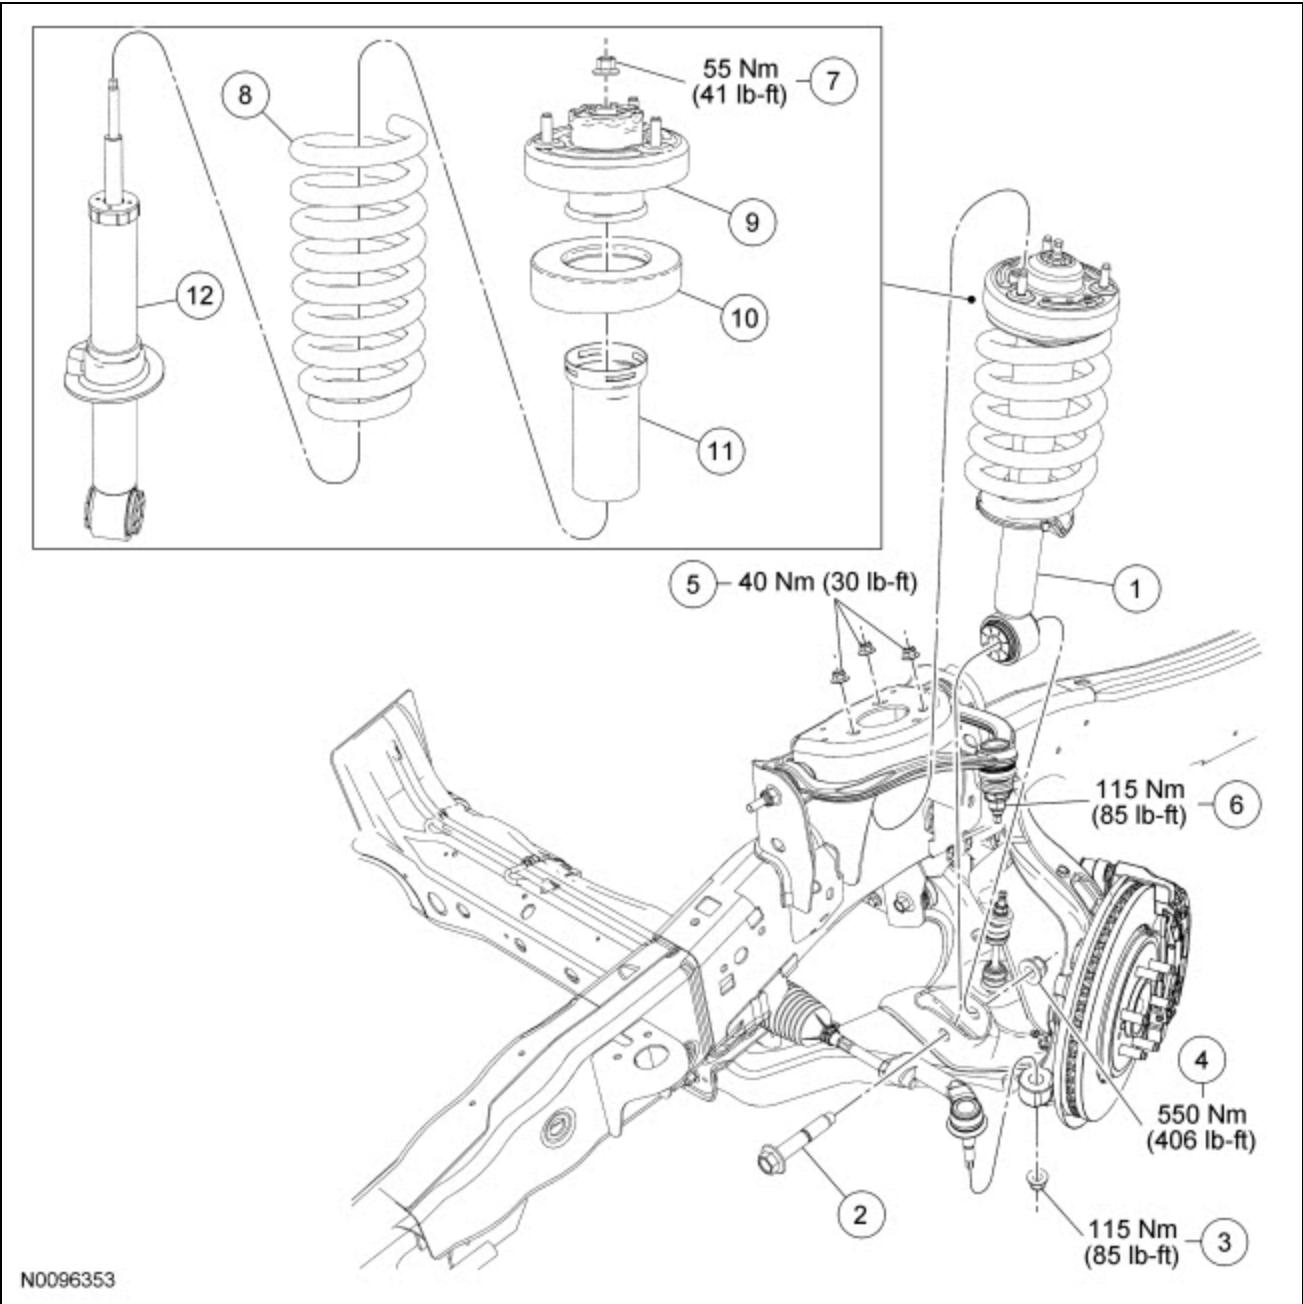

Item	Part Number	Description
1	18124 18124	Shock absorber and spring assembly
2	W712682 W712682	Shock absorber lower bolt
3	W707251 W707251	Tie-rod end nut
4	W520217 W520217	Shock absorber lower nut
5	W712334 W712334	Shock absorber upper mount nuts (3 required)
6	W520215 W520215	Upper ball joint nut
7	W712134 W712134	Shock rod nut
8	5310 5310	Spring
9	18A099 18A099	Upper mount
10	18A154 18A154	Insulator
11	18A047 18A047	Dust boot
12	18045 18045	Shock absorber

SVT Raptor

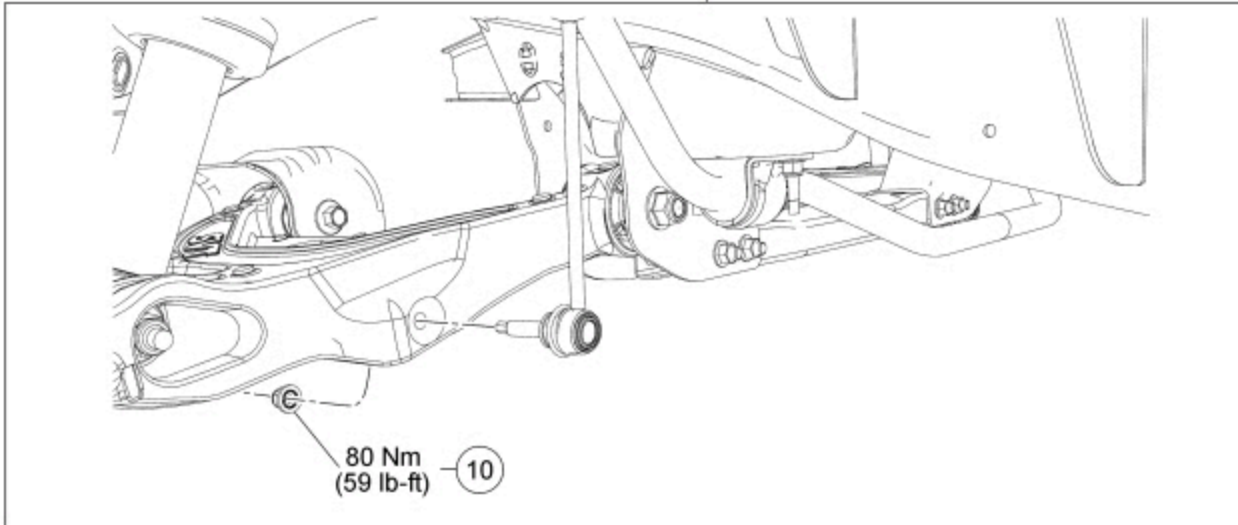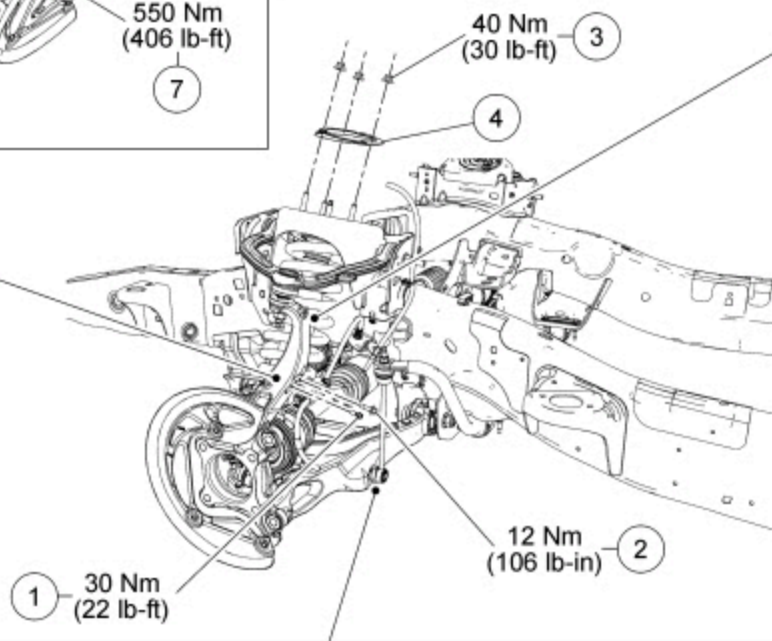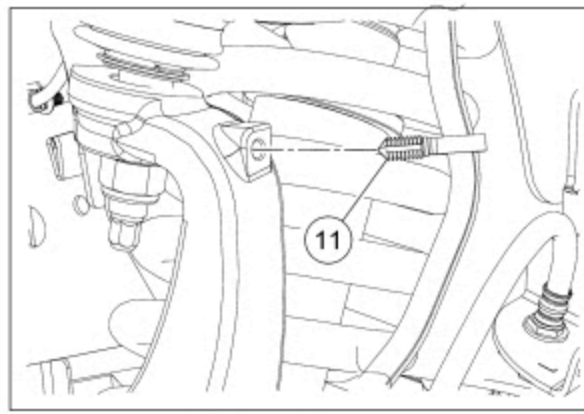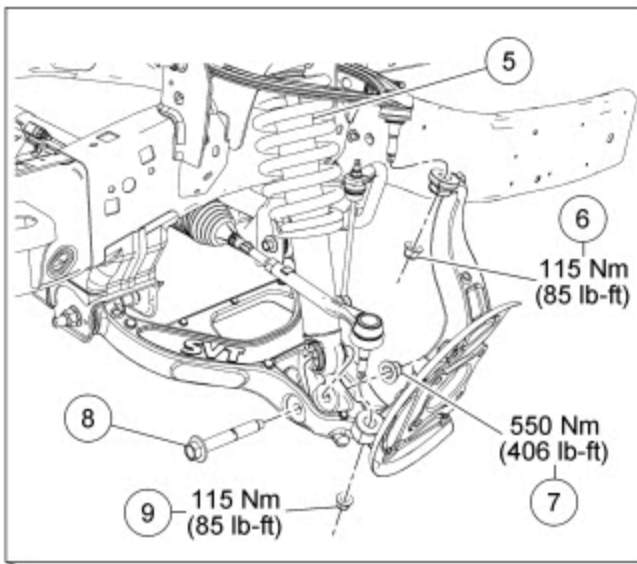


N0105876

Item	Part Number	Description
1	W506423 W506423	Brake hose bracket bolt
2	W710279 W710279	Wheel speed sensor harness bracket bolt
3	W712334 W712334	Shock absorber upper mount nuts (3 required)
4	18073 18073	Shock absorber and spring assembly upper spacer
5	18124 18124	Shock absorber and spring assembly
6	W520215 W520215	Upper ball joint nut
7	W712104 W712104	Shock absorber lower bolt

8	W707019 W707019	Shock absorber lower nut
9	W707251 W707251	Tie-rod end nut
10	W520214 W520214	Stabilizer bar link lower nut
11	—	Integrated Wheel End (IWE) vacuum hose pushpin retainer

SVT Raptor

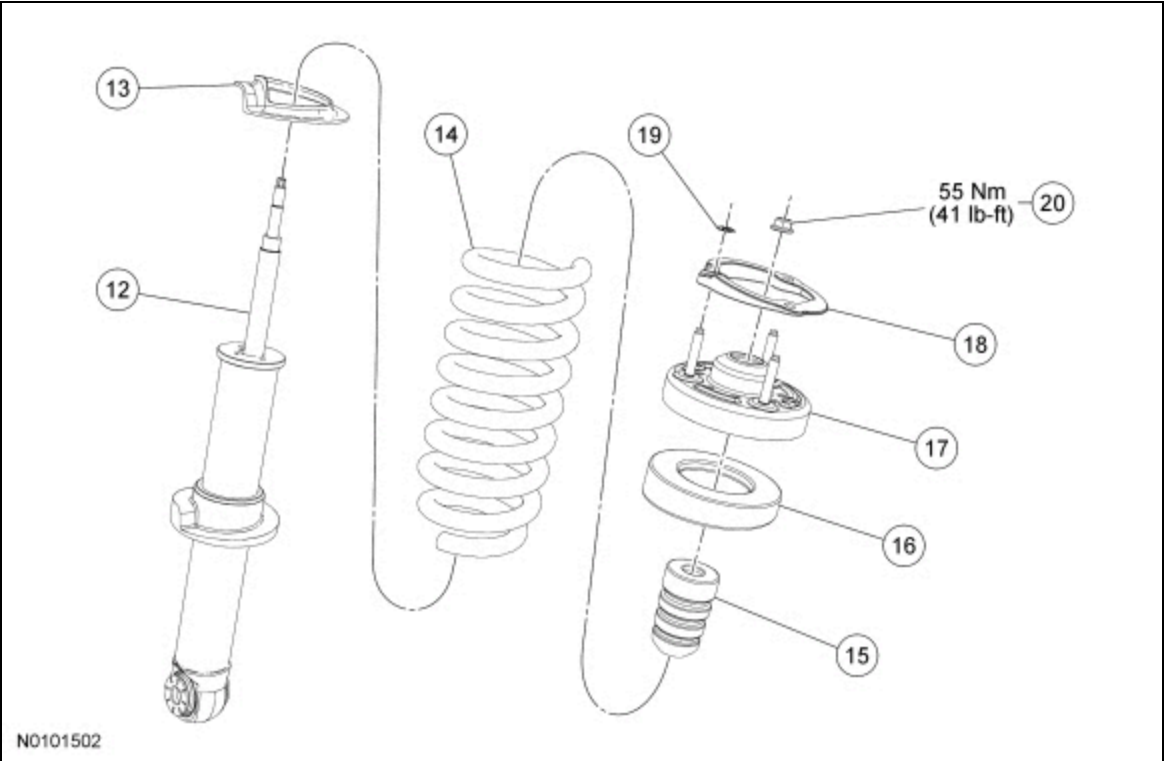

Item	Part Number	Description
12	18045 18045	Shock absorber
13	—	Shock absorber lower seat (part of 18045)
14	5310 5310	Spring
15	—	Dust boot (part of 18045)
16	18A154 18A154	Insulator
17	18A099 18A099	Upper mount
18	18073 18073	Shock absorber and spring assembly lower spacer
19	W623484 W623484	Lock washer
20	W712134 W712134	Shock rod nut

Removal

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.


All vehicles

1. Remove and discard the shock absorber upper mount nuts.

2. Remove the wheel and tire. Refer to Section 204-04.

SVT Raptor

3. Remove the shock absorber and spring assembly upper spacer.

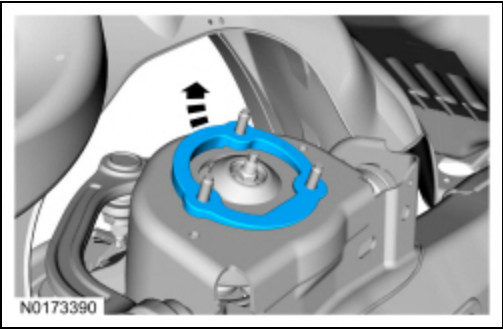


4. Remove the wheel bearing and wheel hub. Refer to Wheel Bearing and Wheel Hub in this section.

All vehicles

5. Remove and discard the tie-rod end nut.


6. Using the Ball Joint Separator, separate the tie-rod end from the wheel knuckle.

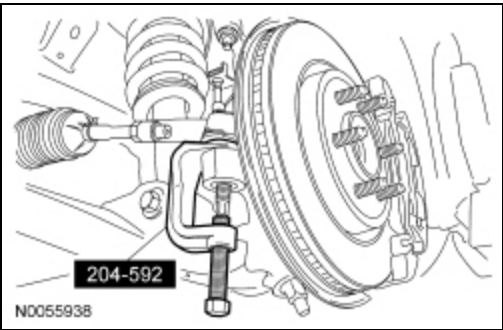

7. Remove and discard the upper ball joint nut.

8. Remove and discard the shock absorber lower nut and bolt.


9. Using the Ball Joint Separator, disconnect the upper arm ball joint from the wheel knuckle and remove the shock absorber and spring assembly.

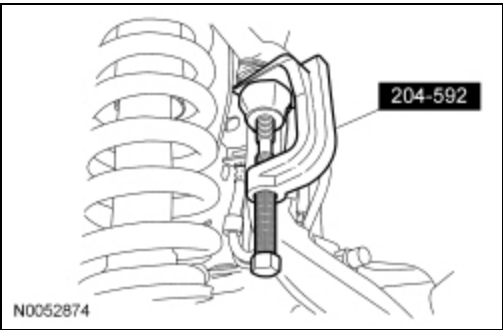

SVT Raptor

10. Remove the lock washer and the shock absorber and spring assembly lower spacer.

- Discard the lock washer.

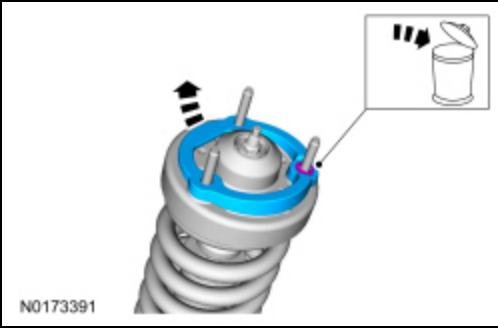


All vehicles

11. **NOTE:** *If the individual spring and/or shock components are not being serviced, continue to the installation procedure.*

NOTE: *For reference during assembly, index the upper mount, spring and shock absorber.*

Using a suitable spring compressor, compress the spring until the tension is released from the shock absorber.

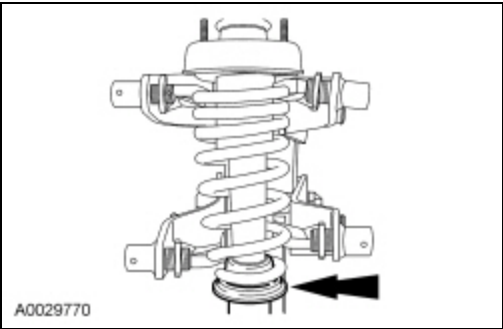


12. **NOTE:** *Use the hex-holding feature to prevent the shock rod from turning while removing the nut.*

While holding the shock rod, remove the nut and the shock absorber.

- Discard the nut.

13. Remove the upper mount, dust boot and insulator.

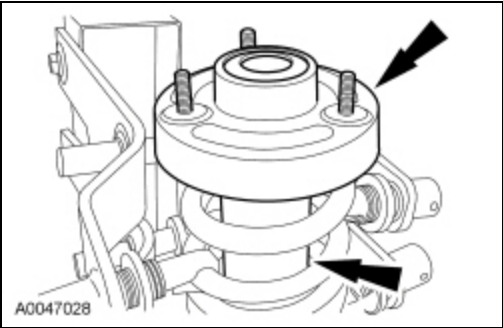


Installation

All vehicles


NOTICE: **Do not tighten the lower shock nut until the installation procedure is complete and the weight of the vehicle is resting on the wheel and tire assemblies or incorrect clamp load and bushing damage may occur.**

1. Position the shock absorber and spring and install the dust boot (if equipped), insulator and the upper mount.

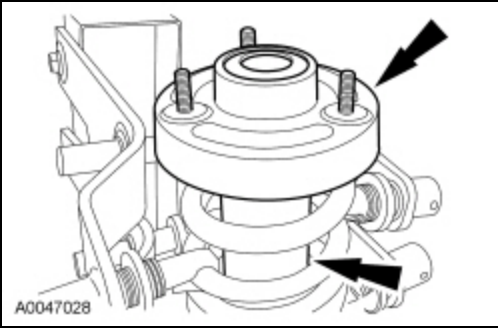

2. **NOTE:** *Align the index marks made during disassembly.*

Using a suitable spring compressor, compress the spring until the tension is released from the shock absorber.

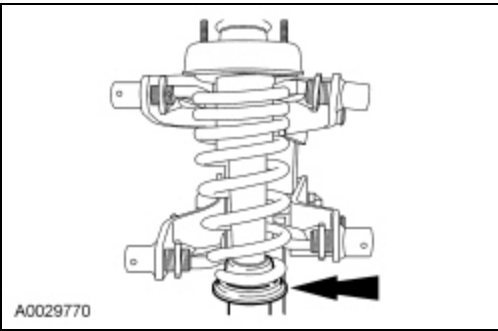

3. **NOTE:** *Use the hex-holding feature to prevent the shock rod from turning while installing the nut.*


While holding the shock rod, install the new shock absorber and the shock rod nut.

- Tighten to 55 Nm (41 lb-ft).

SVT Raptor

4. **NOTE:** *The thickest part of the lower spacer is towards to inside of the vehicle.*

Install the shock absorber and spring assembly lower spacer and a new lock washer.

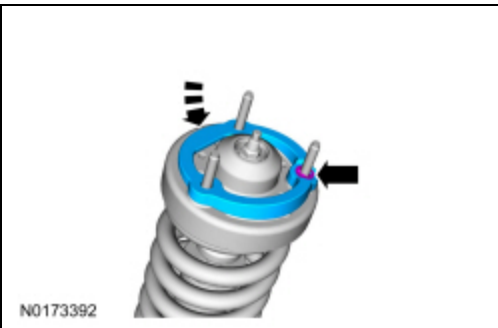

All vehicles

5. **NOTE:** *Do not tighten the nut at this time.*

Position the shock absorber and loosely install the new shock absorber lower nut and bolt.

6. Connect the upper arm ball joint to the wheel knuckle and install the new nut.

- Tighten to 115 Nm (85 lb-ft).

7. Install the new tie-rod end nut.


- Tighten to 115 Nm (85 lb-ft).

SVT Raptor

8. Install the wheel bearing and wheel hub. Refer to Wheel Bearing and Wheel Hub in this section.

9. **NOTE:** *The thickest part of the upper spacer is towards to outside of the vehicle.*

Install the shock absorber and spring assembly upper spacer.

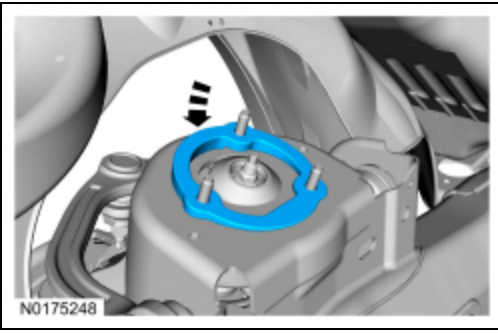

All vehicles

10. Install the wheel and tire. Refer to Section 204-04.

11. Install the new shock absorber upper mount nuts.

- Tighten to 40 Nm (30 lb-ft).

12. With the weight of the vehicle on the wheel and tire, tighten the shock absorber lower nut to 550 Nm (406 lb-ft).