


Stabilizer Bar and Link



All Except SVT Raptor


NOTE: LH side shown, RH side similar.

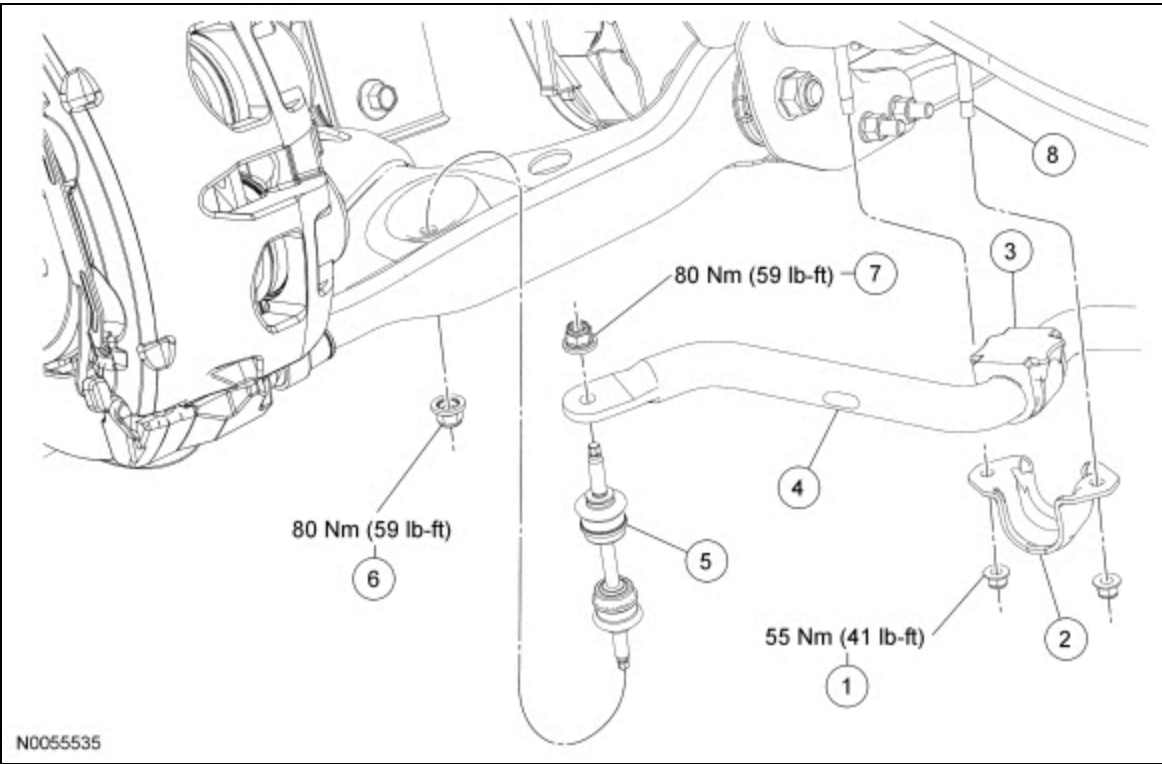

Item	Part Number	Description
1	W520213W520213	Stabilizer bar bracket nut (4 required)
2	3B3533B353	Stabilizer bar bracket (2 required)
3	54845484	Stabilizer bar bushing (2 required)
4	54945494	Stabilizer bar
5	5K4835K483	Stabilizer bar link (2 required)
6	N807144N807144	Stabilizer bar link lower nut (2 required)
7	N807144N807144	Stabilizer bar link upper nut (2 required)
8	W711583W711583	Stabilizer bar bracket bolt plate


SVT Raptor

NOTE: LH side shown, RH side similar.

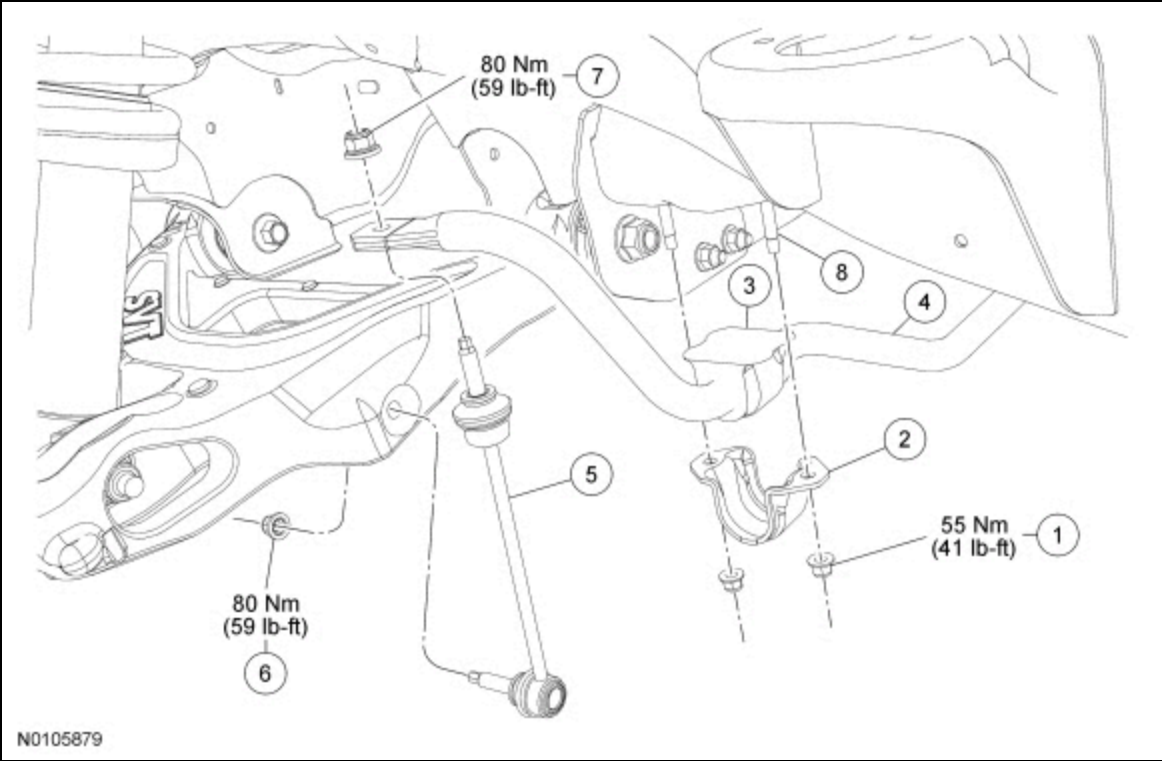

Item	Part Number	Description
1	W520213 W520213	Stabilizer bar bracket nut (4 required)
2	3B353 3B353	Stabilizer bar bracket (2 required)
3	5484 5484	Stabilizer bar bushing (2 required)
4	5494 5494	Stabilizer bar
5	5K483 5K483	Stabilizer bar link (2 required)
6	N807144 N807144	Stabilizer bar link lower nut (2 required)
7	N807144 N807144	Stabilizer bar link upper nut (2 required)
8	W711583 W711583	Stabilizer bar bracket bolt plate

SVT Raptor

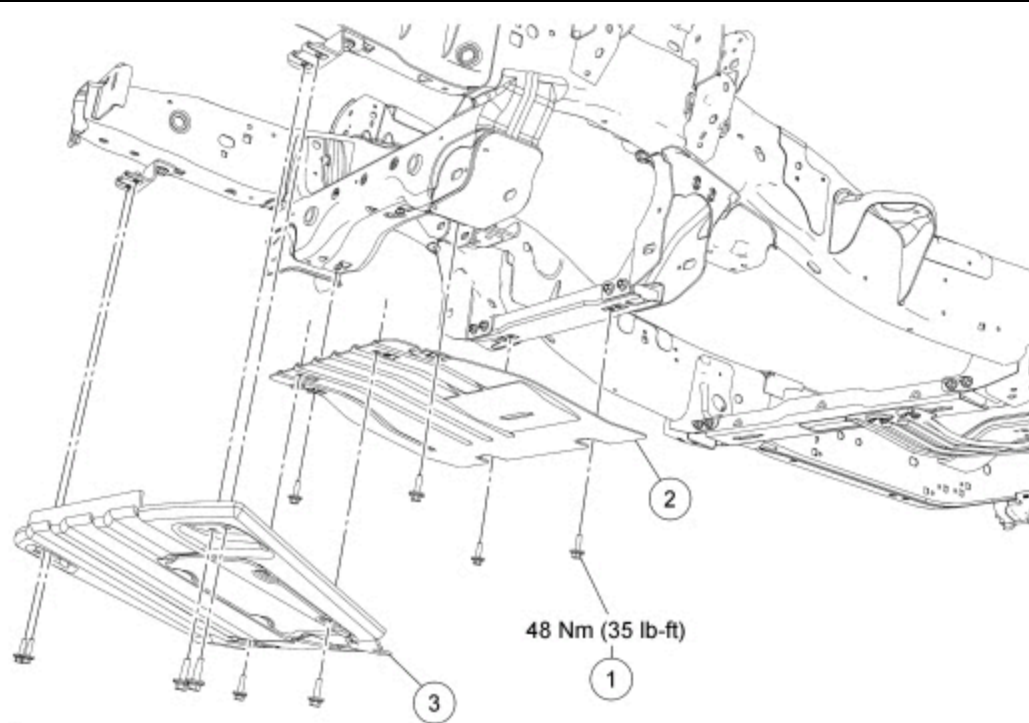

N0102710

Item	Part Number	Description
1	W707640 W707640	Skid plate bolt (10 required)
2	5E154 5E154	Forward skid plate
3	5D032 5D032	Rearward skid plate

Removal and Installation

NOTICE: Suspension fasteners are critical parts because they affect performance of vital components and systems and their failure may result in major service expense. New parts must be installed with the same part numbers or equivalent parts, if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to make sure of correct retention of these parts.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.

2. **NOTE:** Use the hex-holding feature to prevent the stud from turning while removing the nut.

Remove and discard the 2 stabilizer bar link upper nuts.

- Tighten to 80 Nm (59 lb-ft).

3. **NOTICE:** Do not hold the stabilizer link boot with any tool, as damage to the boot will occur.

NOTE: Use the hex-holding feature to prevent the stud from turning while removing the nut.

Remove and discard the 2 stabilizer bar link lower nuts and remove the 2 stabilizer bar links.

- Tighten to 80 Nm (59 lb-ft).

4. If equipped, remove the 10 bolts and the forward and rearward skid plates.

- To install, tighten to 48 Nm (35 lb-ft).

5. Remove the 4 stabilizer bar bracket nuts, brackets and the stabilizer bar.

- Discard the nuts.
- To install, tighten the new nuts to 55 Nm (41 lb-ft).

6. Remove and discard the stabilizer bar bracket bolt plates.

7. **NOTE:** *Make sure the stabilizer bar bushings raised center lip is installed into the bracket groove.*

Inspect and, if necessary, install new stabilizer bar bushings.

8. To install, reverse the removal procedure.