


Tire Pressure Monitor (TPM) Module

 [Ford Ecat Electronic Parts Catalog](#)

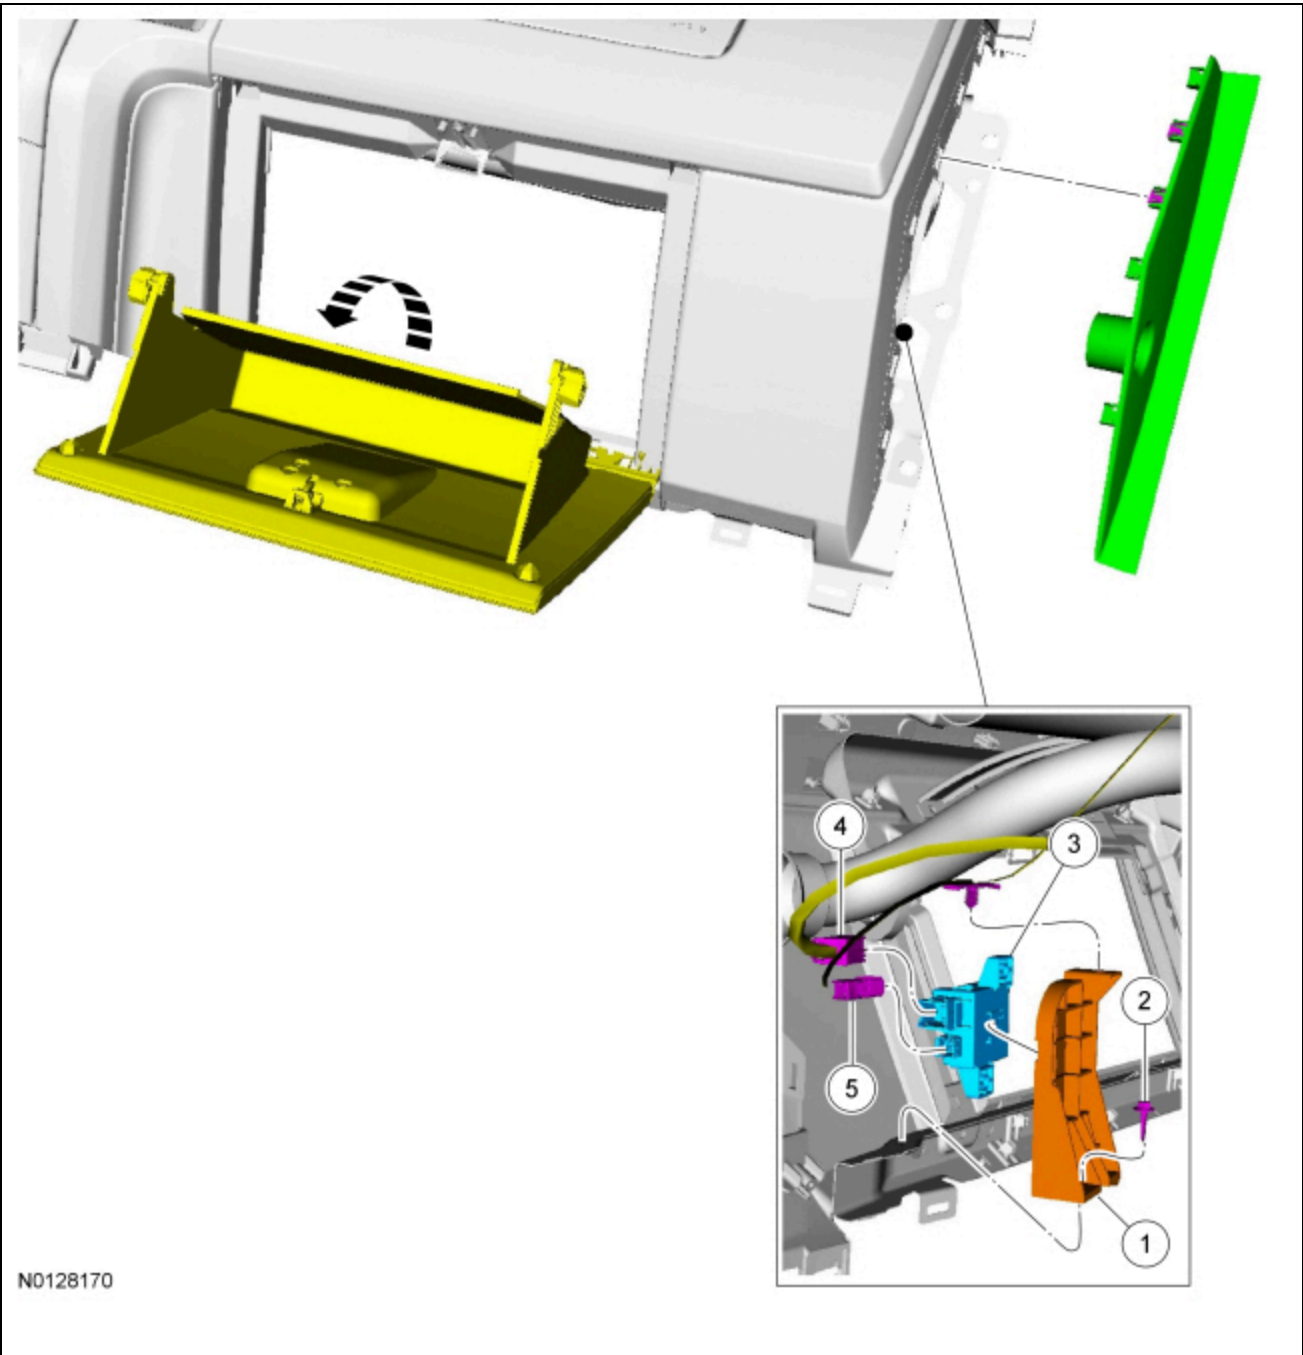

Item	Part Number	Description
1	19A435 19A435	TPMS module mounting bracket
2	W707628 W707628	TPMS screw (1 required)
3	15K602 15K602	Tire Pressure Monitoring System (TPMS) module
4	—	TPMS module electrical connector (part of 14401)
5	—	External antenna coax connector

Removal

NOTICE: Electronic modules are sensitive to static electrical charges. If exposed to these charges, damage may result.

1. Remove the RH instrument panel side finish panel.
2. Open the glove compartment door and while pushing in on the glove compartment tab, position the glove compartment downwards.
3. Remove the screw from the TPMS module mounting bracket.
4. Disconnect the TPMS module electrical connector and the external antenna connector.
5. Separate the TPMS module from the TPMS module mounting bracket.

Installation

1. To install, reverse the removal procedure.