


Driveshaft Slip Yoke Boot

 [Ford Ecat Electronic Parts Catalog](#)

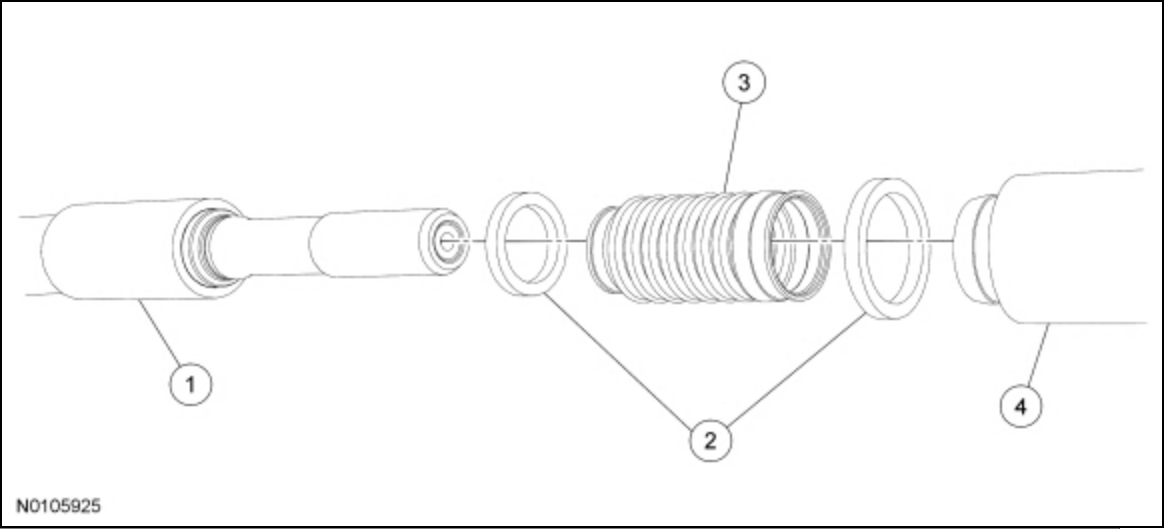


Item	Part Number	Description
1	4R602 4R602	Driveshaft assembly
2	3B478 3B478	Driveshaft slip-yoke boot clamps (2 required)(large clamp also part of kit M1C111)
3	4421 4421	Driveshaft slip-yoke boot
4	4A335 4A335	Slip yoke

Removal

1. **NOTICE:** The driveshaft and slip yoke have to be reassembled in the same phase as it was before disassembly. If the driveshaft and slip yoke isn't assembled in the same phase, a vibration can result.

Mark a straight line down the slip yoke and driveshaft, to help align for reassembly.

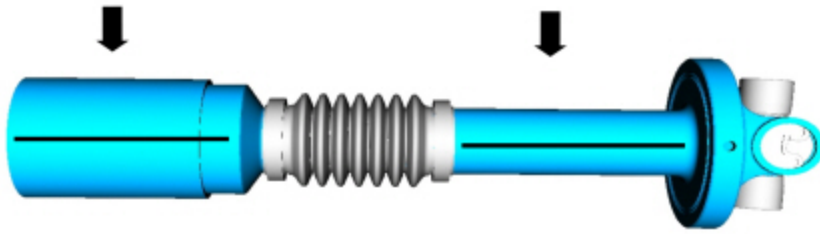

N0130001

2. Remove the driveshaft. Refer to Driveshaft — Front or Driveshaft — Rear, Two-Piece in this section.
3. **NOTICE: Do not, under any circumstance, clamp the driveshaft in the jaws of a vise or similar holding fixture. Denting or localizing fracture can result, causing driveshaft failure during vehicle operation.**

Place the driveshaft on a suitable workbench. Do not damage the tubes.

4. Remove the driveshaft slip yoke from the driveshaft in the following sequence.
 1. Remove and discard the front driveshaft slip-yoke boot clamp.
 2. Remove the driveshaft slip yoke from the driveshaft.
5. Remove the slip-yoke boot from the driveshaft.
 - Inspect the boot for damage. Replace the boot as necessary.
6. Inspect the lubricant on the driveshaft splines and in the driveshaft slip yoke for contamination. If contaminated, inspect the driveshaft splines and the driveshaft slip yoke for wear. Install new components as necessary.

Installation

1. Using a clean, dry lint free shop towel, thoroughly clean old grease from slip yoke splines.
2. Position the new small driveshaft slip-yoke boot clamp on the driveshaft stub shaft.
3. Slide the small opening end of the slip-yoke boot on the driveshaft stub shaft, as far as it will travel.
4. Using boot clamp pliers, crimp the driveshaft slip-yoke boot clamp.
5. **NOTICE: The driveshaft and slip yoke have to be reassembled in the same phase as before disassembly. If the driveshaft and slip yoke aren't assembled in the same phase, a vibration can result.**

Install the driveshaft slip-yoke on the driveshaft.


1. Lubricate the driveshaft splines with long-life grease supplied in part # KT9L3P-M1C111-AA.
2. Pull the slip-yoke boot toward the driveshaft.
3. Position the new large slip-yoke boot clamp supplied in part # KT9L3P-M1C111-AA.
4. Align the marks from disassembly, and install the driveshaft slip yoke on the driveshaft.



N0129982

6. Set the driveshaft assembled length to specification.

1. Remove any excess grease from the slip-yoke boot and driveshaft slip-yoke surfaces.
2. Position the slip-yoke boot in the slip-yoke boot groove.
3. Set the driveshaft assembled length to specification.
 - Measure from the stub shaft weld to the U-joint centerline.
4. Bleed the air from the slip-yoke boot.

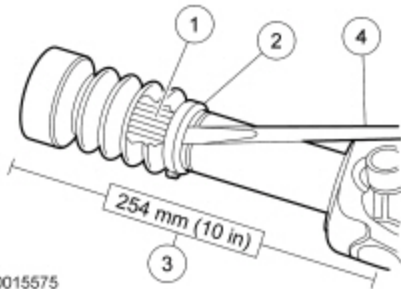

N0015575

7. Using boot clamp pliers, crimp the large driveshaft slip-yoke boot clamp.

8. Install the driveshaft. Refer to Driveshaft — Front or Driveshaft — Rear, Two-Piece in this section.