


Driveshaft — Front


 [Ford Ecat Electronic Parts Catalog](#)

Removal


1. With the vehicle in NEUTRAL, position the vehicle on a hoist. Refer to Section 100-02.
2. If equipped.

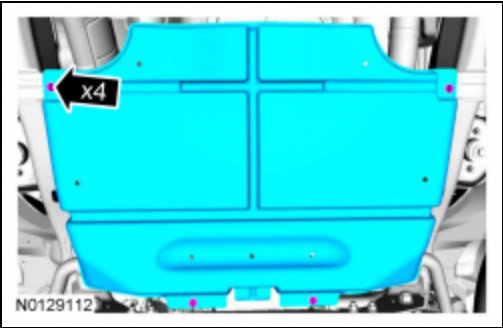

3.

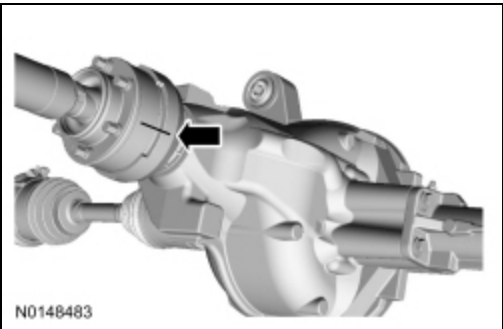


4.

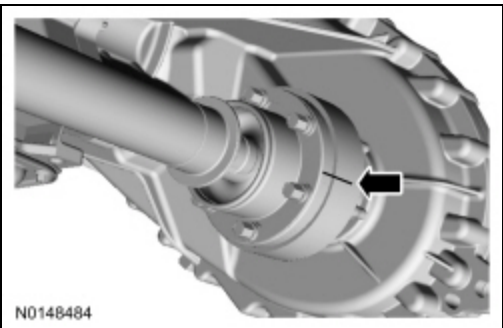


5. **NOTE:** If new bolts are not available, the old bolts and washers can be reused if they are not damaged. When reusing old bolts, the threads need to be cleaned and loctite has to be used on the threads of each bolt.

- To install, tighten to 55 Nm (41 lb-ft).

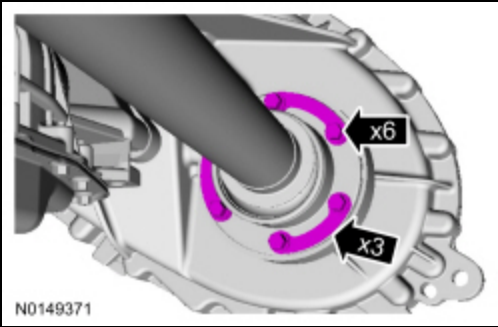


6. **NOTE:** *If new bolts are not available, the old bolts and washers can be reused if they are not damaged. When reusing old bolts, the threads need to be cleaned and loctite has to be used on the threads of each bolt.*

- To install, tighten to 55 Nm (41 lb-ft).

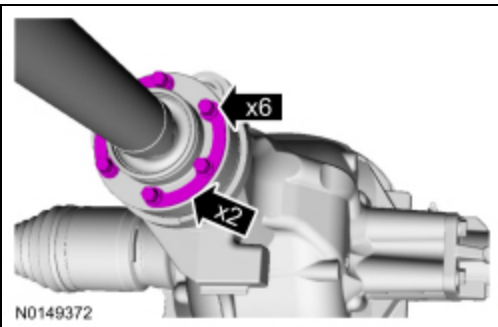


7.

- To install, tighten to 55 Nm (41 lb-ft).

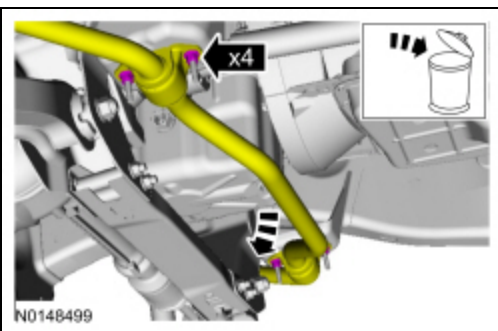

8.

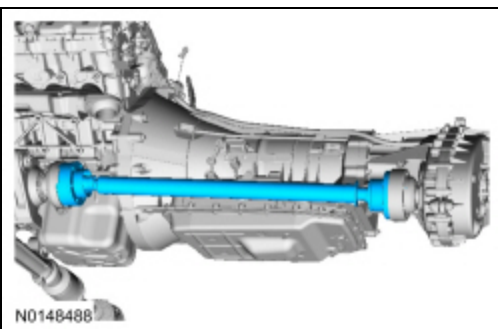

Installation

1. To install, reverse the removal procedure.