


Driveshaft — Rear, Two-Piece

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® Threadlock and Sealer TA-25	WSK-M2G351-A5

NOTE: Front slip yoke shown, front fixed flange similar.

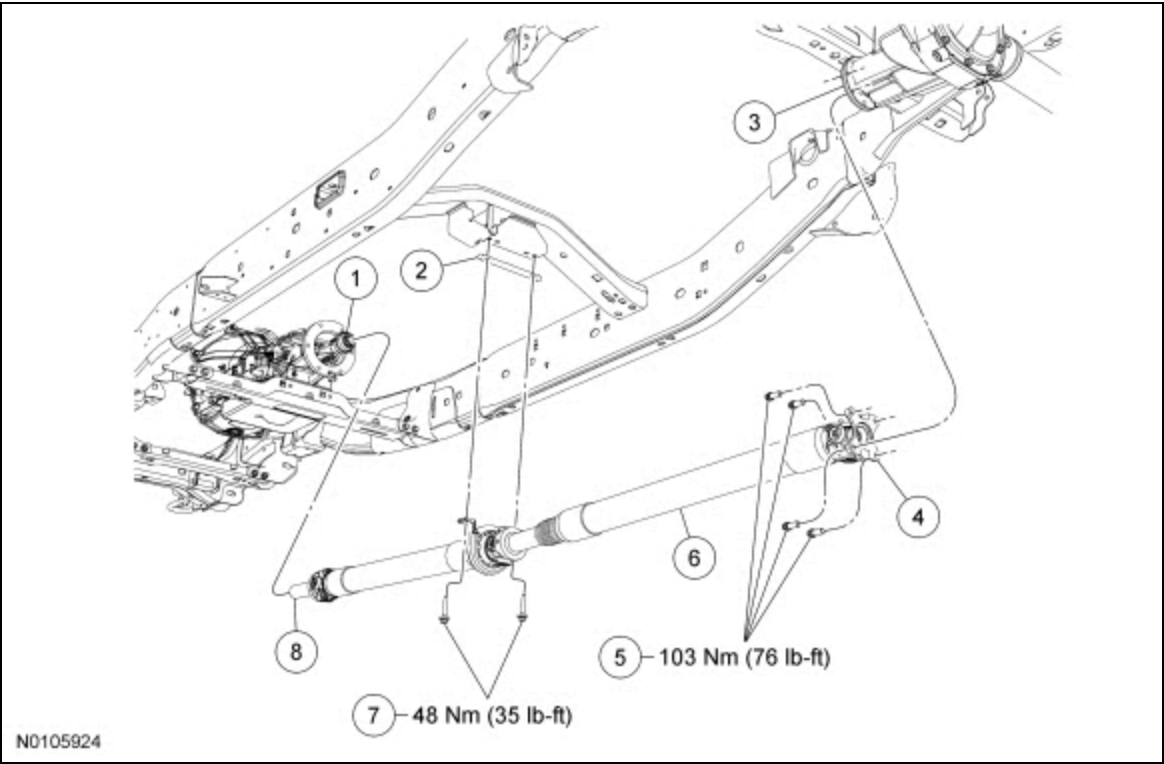


Item	Part Number	Description
1	7A309 7A309	Transmission extension housing
2	4A209 4A209	Center bearing shim (if equipped)
3	4858 4858	Pinion flange
4	4782 4782	Driveshaft flange
5	N800594 N800594	Driveshaft flange-to-pinion bolts (4 required) (front fixed flange [8 required])
6	4R602 4R602	Driveshaft assembly
7	W713078 W713078	Driveshaft center bearing bolts (2 required)
8	4841 4841	Driveshaft slip yoke


NOTE: For automatic transmissions, when installing a new driveshaft, match the yellow dots on the driveshaft to the yellow dots on the pinion flange and the output shaft to maintain balance during installation.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.

2. Index-mark the driveshaft flange to the pinion flange to maintain alignment during installation.

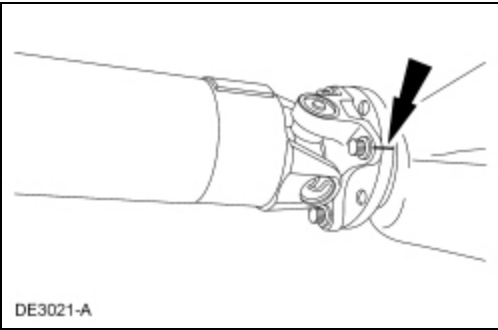


3. Index-mark the driveshaft to the extension housing to maintain alignment during installation.

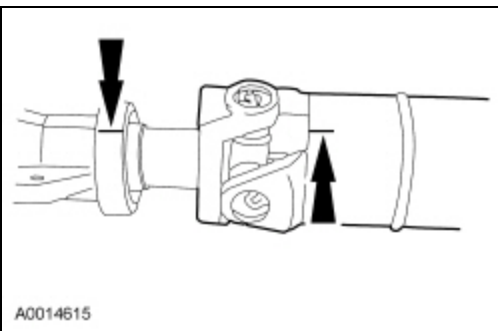


4. Remove and discard the 4 driveshaft flange bolts.

- To install, tighten the 4 new bolts to 103 Nm (76 lb-ft).

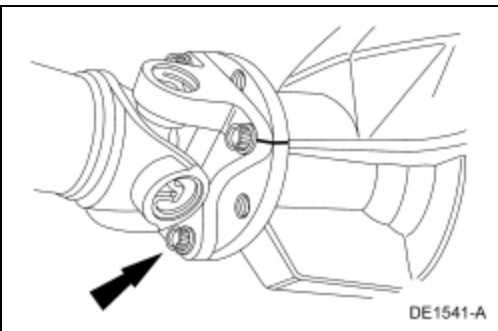

5. **NOTICE:** The driveshaft flange fits tightly on the flange pilot. Never hammer on the driveshaft or any of its components to disconnect the driveshaft flange from the flange pilot. Pry only in the area shown with a suitable tool, to disconnect the driveshaft flange from the flange pilot or damage to the driveshaft flange can occur.

Using a suitable tool as shown, disconnect the driveshaft flange from the flange pilot.

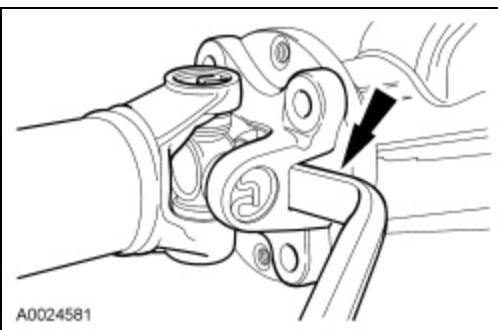

6. Remove the driveshaft in the following sequence.

1. Remove the 2 driveshaft center bearing bolts.

2. Lower the driveshaft and slide the driveshaft slip yoke rearward off of the output shaft.

- To install, tighten to 48 Nm (35 lb-ft).

7. Plug the extension housing to prevent fluid loss.

8. **NOTICE: The driveshaft flange fits tightly on the pinion flange pilots. To make sure that the driveshaft flanges seat squarely on the pinion flange pilots, tighten the driveshaft flange bolts evenly in a cross pattern or damage to the driveshaft flange can occur.**

NOTE: *If new bolts are not available, coat the threads of the original driveshaft flange bolts with threadlock and sealer.*

NOTE: *Align the index marks made during removal.*

NOTE: *Clean any residual lubricant from the component.*

To install, reverse the removal procedure.