


Axle Shaft

 [Ford Ecat Electronic Parts Catalog](#)


Material	
Item	Specification
Motorcraft® Premium Long-Life Grease XG-1-E1	ESA-M1C75-B
Motorcraft® Threadlock and Sealer TA-25-B	WSK-M2G351-A5

Removal and Installation


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the rear wheel and tire. For additional information, refer to Section 204-04.
3. Remove the rear brake disc. For additional information, refer to Section 206-04.
4.
 - To install, tighten to 15 Nm (133 lb-in).

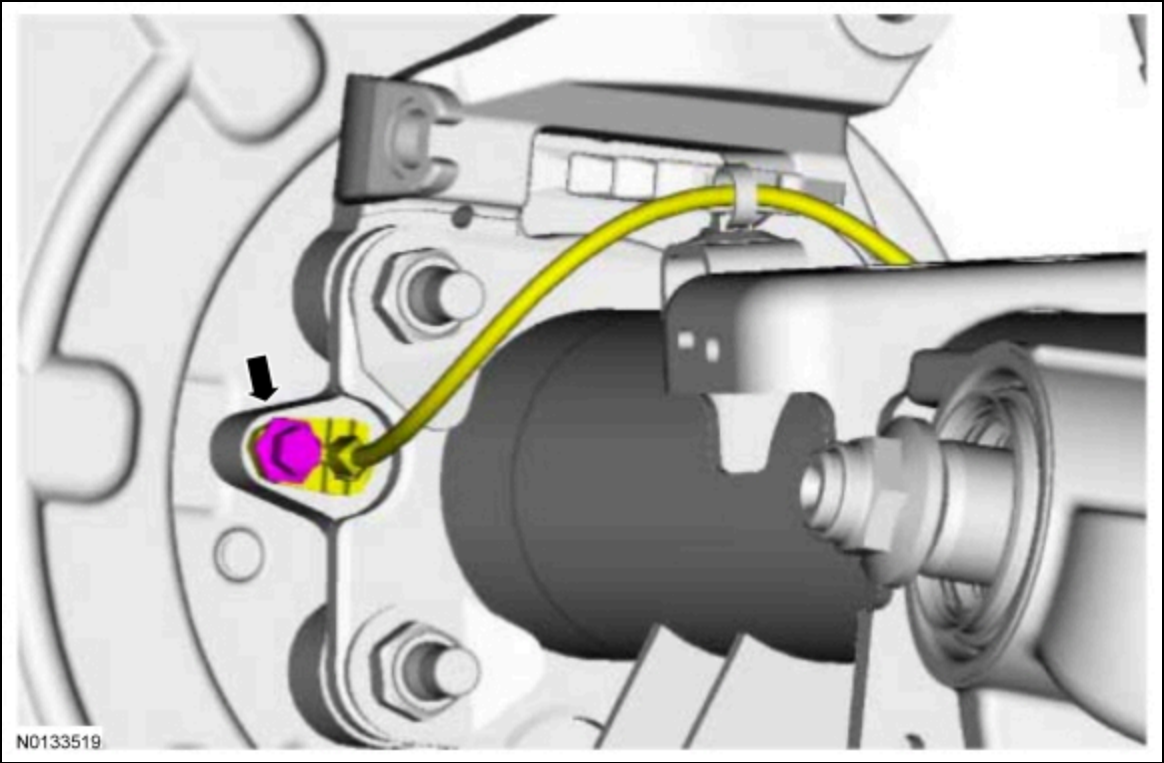


5. Remove the differential housing cover and drain the lubricant. For additional information, refer to Differential Housing Cover in this section.
6. Discard the specified component. Follow local disposal regulations.
 - To install, tighten to 30 Nm (22 lb-ft).

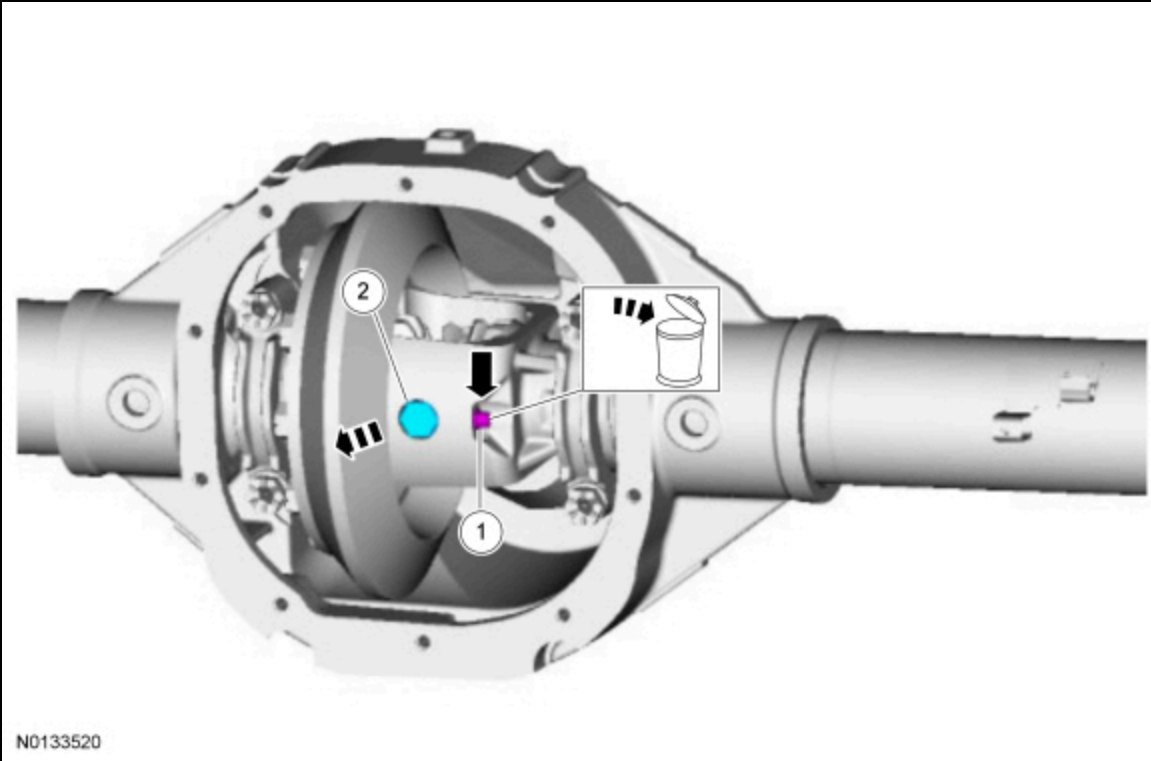

7.

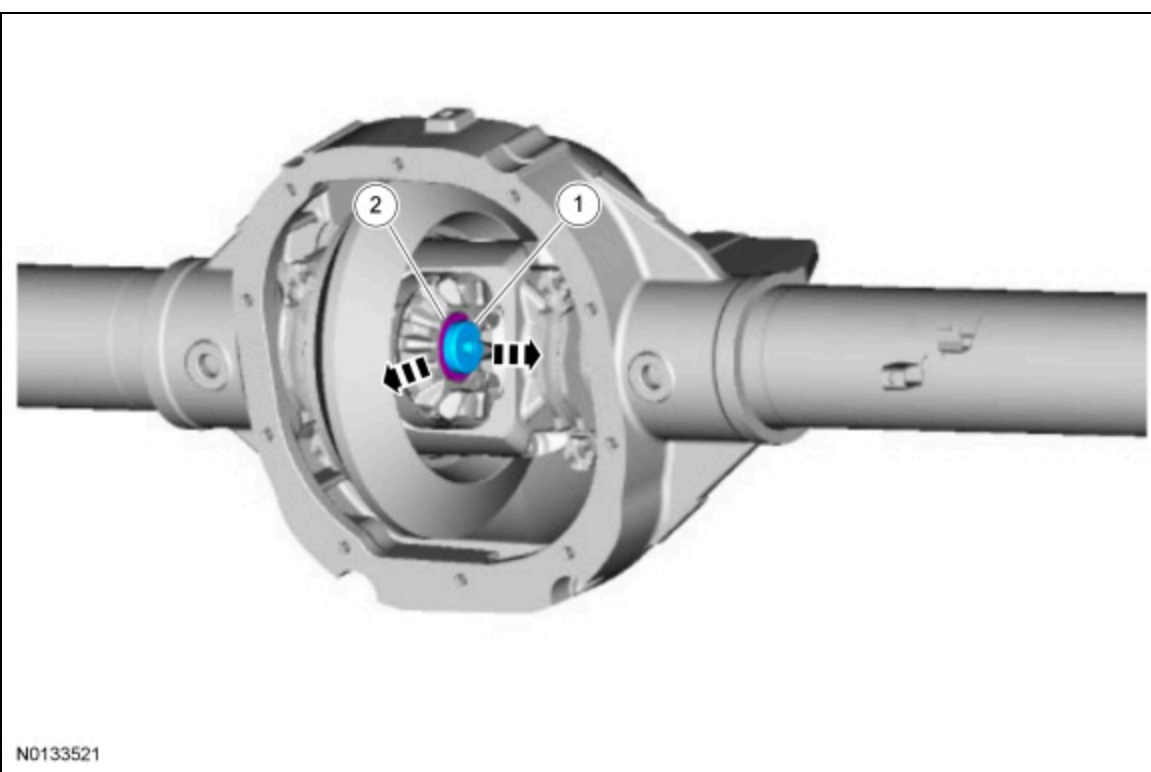

8.

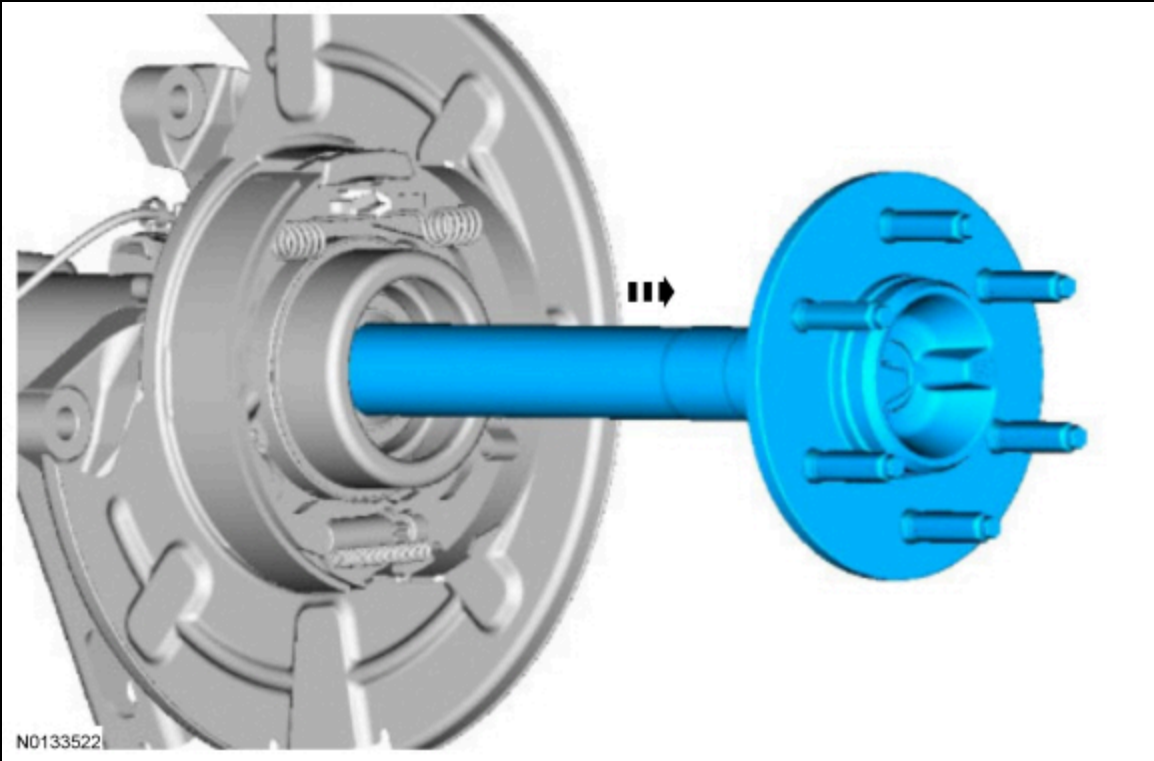

9. To install, reverse the removal procedure.

- Inspect and lubricate the lip of the wheel bearing oil seal with grease.