



Differential Bearings

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2026-A	2 Jaw Puller 205-D072 (D79L-4221-A1) or equivalent
 ST1743-A	Adapter for 205-S127 205-105 (T76P-4020-A3)
 ST1429-A	Adapter for 205-S127 205-109 (T76P-4020-A9)
 ST1431-A	Adapter for 205-S127 205-110 (T76P-4020-A10)
 ST1432-A	Adapter for 205-S127 205-111 (T76P-4020-A11)
 ST1743-A	Adapter for 205-S127 205-129 (T79P-4020-A18)
 ST1434-A	Adapter for 205-S127 205-130 (T79P-4020-A19)



ST1375-A

Installer, Differential Side Bearing
205-010 (T57L-4221-A2)




ST1678-A

Installer, Drive Pinion Bearing Cup
205-024 (T67P-4616-A)




ST1367-A

Installer, Shaft Bearing Cone
308-169 (T88T-7025-B)



ST1254-A

Plate, Bearing Oil Seal
205-090 (T75L-1165-B)

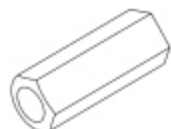

ST1744-A

Protector, Drive Pinion Thread
205-460 or equivalent




ST1368-A

Puller, Bearing
205-D064 (D84L-1123-A) or equivalent



ST1543-A

Step Plate
205-D016 (D80L-630-5) or equivalent

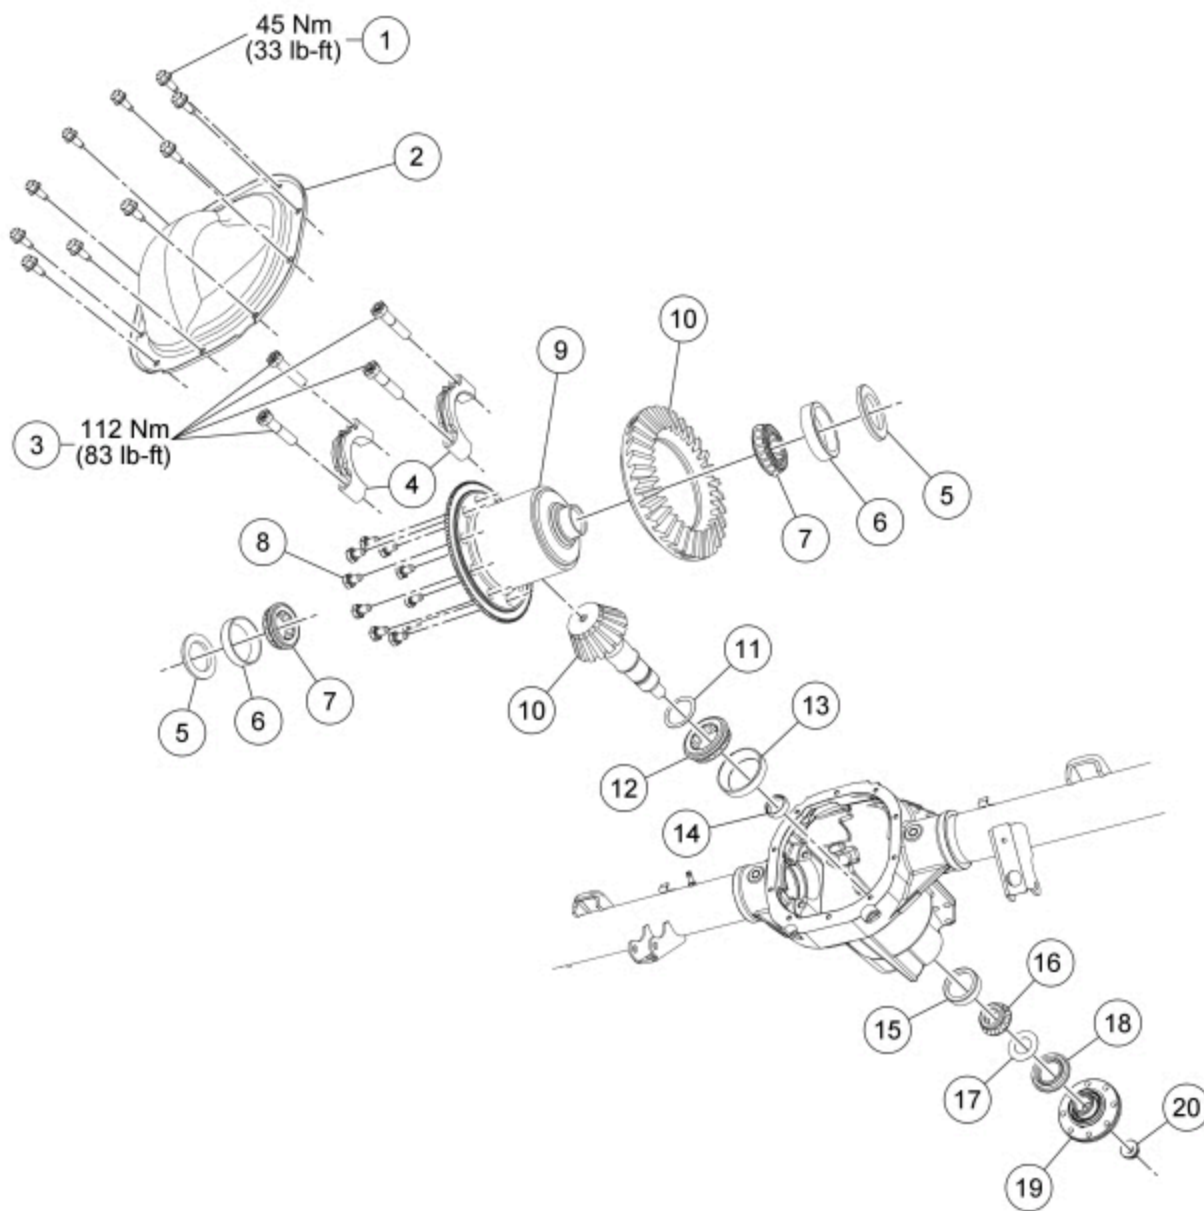


N0133524

Item	Part Number	Description
1	4346 4346	Differential housing cover bolt (10 required)
2	4033 4033	Differential housing cover
3	46108 46108	Differential bearing cap bolts (part of 4010) (4 required)
4	—	Differential bearing caps (part of 4010) (2 required)
5	4067 4067	Differential bearing shims (2 required)
6	4222 4222	Differential bearing cups (2 required)
7	4221 4221	Differential bearings (2 required)
8	4216 4216	Ring gear bolt (10 required)
9	4204 4204	Differential assembly
10	4209 4209	Ring gear
10	4209 4209	Drive pinion
11	4663 4663	Pinion bearing alignment shim
12	—	Inner pinion bearing cup (part of 4625)


13	4625 4625	Inner pinion bearing
14	4662 4662	Collapsible spacer (part of 4320)
15	—	Outer pinion bearing cup (part of 4621)
16	4621 4621	Outer pinion bearing
17	4670 4670	Oil slinger
18	4676 4676	Drive pinion oil seal
19	4851 4851	Drive pinion flange
20	4C121 4C121	Drive pinion nut (part of 4320)

Removal


1. Remove the drive pinion seal. For additional information, refer to Drive Pinion Flange and Drive Pinion Seal in this section.
2. Remove the differential carrier. For additional information, refer to Differential Carrier in this section.
3. Remove the axle drive pinion shaft oil slinger.
4. Using the Drive Pinion Thread Protector and a soft-faced hammer, drive the pinion assembly out of the outer pinion bearing and remove it through the rear of the differential housing.

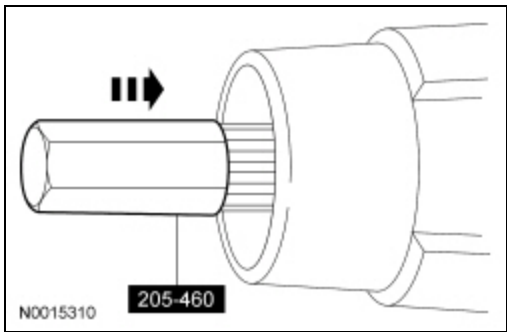


5. Remove the outer pinion bearing.
6. Remove the drive pinion collapsible spacer and discard it.

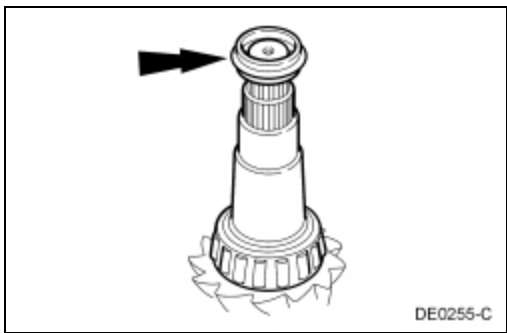


7. Using the Bearing Puller and a suitable press, remove the inner pinion bearing.

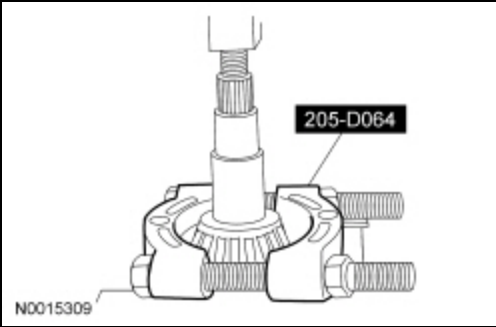

8. Using a brass drift, remove the pinion bearing cups by tapping alternately on opposite sides of the bearing cups.

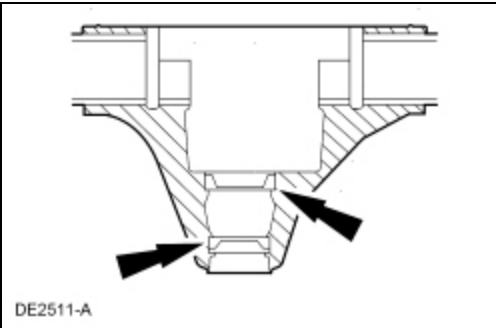


9. Using the 2 Jaw Puller and Step Plate, remove the 2 differential bearings.

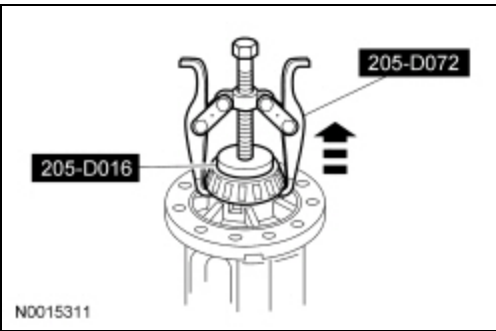


Installation

1. Position the Drive Pinion Bearing Cup Installer and the inner and outer bearing cups in their respective bores.
 1. After placing the inner and outer bearing cups in their respective bores, place the Drive Pinion Bearing Cup Installer on the inner bearing cup.
 2. Place the Drive Pinion Bearing Cup Installer on the outer bearing cup.
 3. Install the Drive Pinion Bearing Cup Installer.

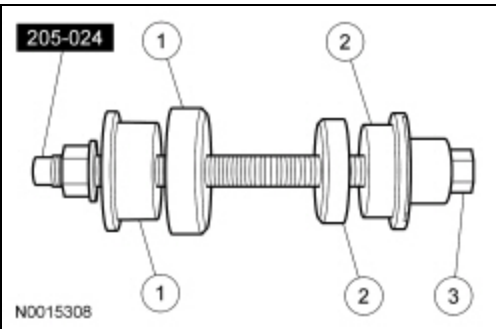


2. Tighten the Drive Pinion Bearing Cup Installer to seat the pinion bearing cups in their bores.

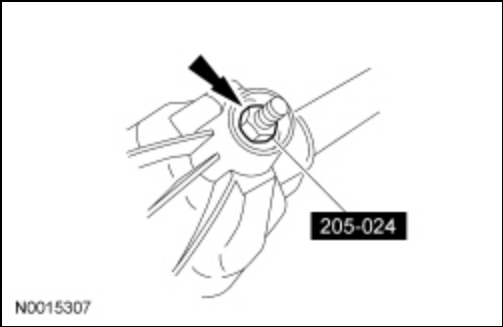

3. **NOTE:** *If a feeler gauge of the specification shown can be inserted between a cup and the bottom of its bore at any point around the cup, the cup is not correctly seated.*


Make sure the differential pinion bearing cups are correctly seated.

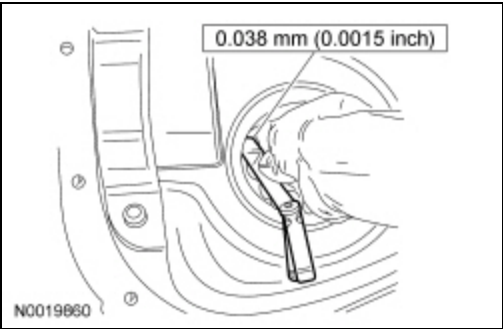

4. **NOTE:** *Install new drive pinion bearings without any additional lubricant since the anti-rust oil provides adequate lubricant without upsetting the drive pinion bearing preload settings.*

Assemble and position the Adapters.


Item	Part Number	Description
1	205205-105-105	Adapter for 205-S127 (1.612 in OD) (T76P-4020-A3)
2	205205-111-111	Adapter for 205-S127 (T76P-4020-A11)
3	46214621	Drive pinion bearing (outer)
4	205205-109-109	Adapter for 205-S127 (T76P-4020-A9)
5	46304630	Drive pinion bearing (inner)
6	205205-129-129	Adapter for 105-S127 (1.1884 in thick) (T79P-4020-A18)
7	205205-110-110	Adapter for 205-S127 (1.7 in thick) (T76P-4020-A10)

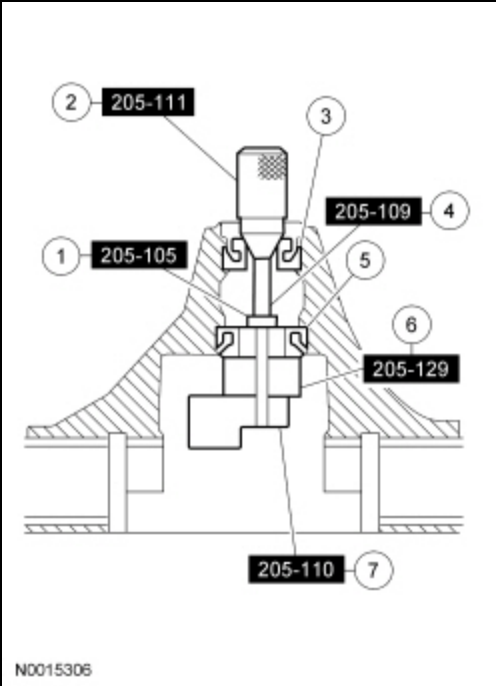

5. **NOTE:** *This step duplicates final drive pinion bearing preload.*


Tighten the Adapter.

- Tighten to 2.2 Nm (20 lb-in) rotational torque.

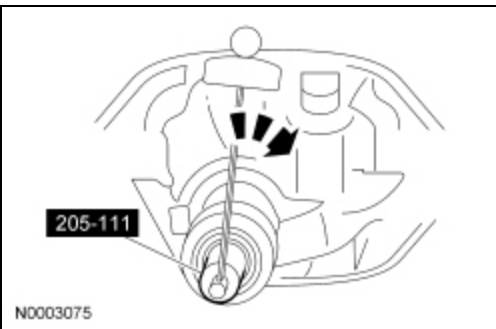


6. **NOTE:** *The Adapter must be offset to obtain an accurate reading.*

Rotate the Adapter several half turns to make sure of correct seating of the drive pinion bearings and position the Adapter.

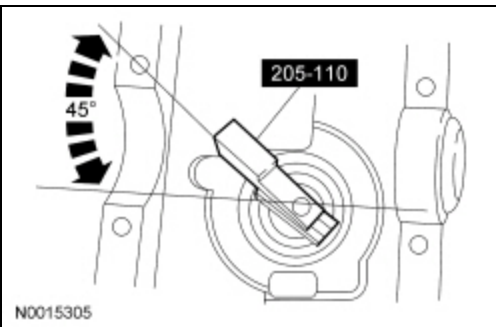

7. Install the Adapter.

1. Position the gauge tube.
2. Install the 2 differential bearing caps.
3. Install the 4 differential bearing cap bolts.
 - Tighten to 112 Nm (83 lb-ft).

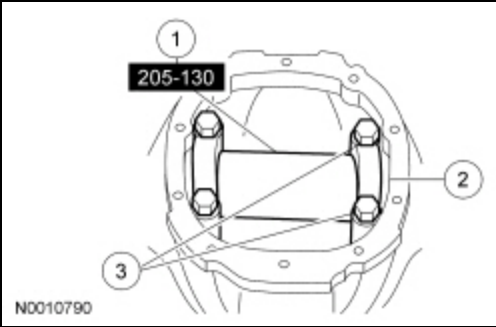


8. **NOTE:** Drive pinion bearing adjustment shims must be flat and clean.


NOTE: A slight drag should be felt for correct drive pinion bearing adjustment shim selection. Do not attempt to force the drive pinion bearing adjustment shim between Adapter and gauge tube. This will minimize selection of a drive pinion bearing adjustment shim thicker than required, which results in a deep tooth contact in final assembly of integral axle assemblies.

Use a drive pinion bearing adjustment shim as a gauge for drive pinion bearing adjustment shim selection.


- After the correct drive pinion bearing adjustment shim thickness has been determined, remove all of the Adapters.

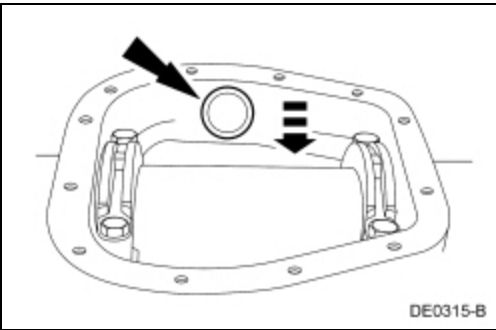


9. Using the Shaft Bearing Cone Installer and Bearing Oil Seal Plate and a shop press, drive the inner drive pinion bearing and drive pinion bearing adjustment shim until they are firmly seated on the pinion shaft.

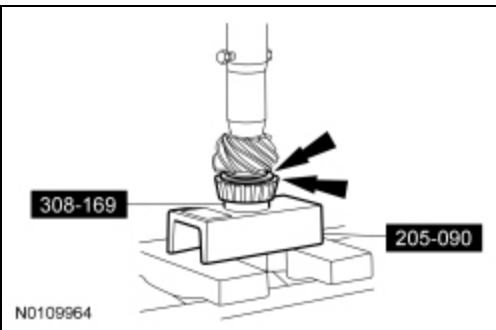

10. Install a new drive pinion collapsible spacer on the pinion shaft against the pinion shaft shoulder.

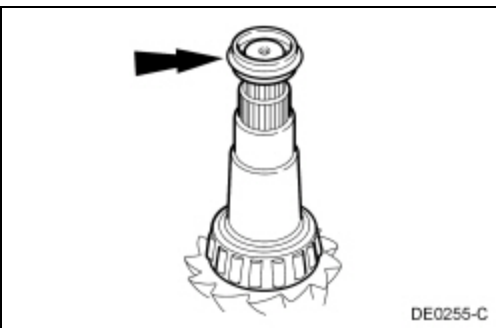


11. Install the drive pinion assembly into the axle housing.

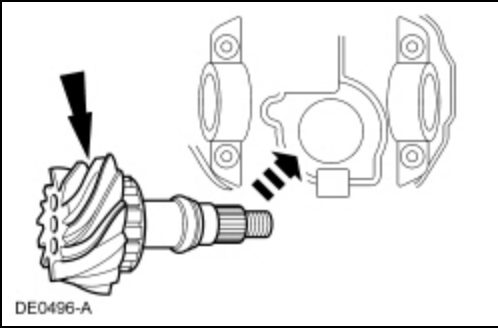

12. Install the outer drive pinion bearing and the drive pinion shaft oil slinger.

13. Install the drive pinion seal and flange. For additional information, refer to Drive Pinion Flange and Drive Pinion Seal in this section.

14. Using the Differential Side Bearing Installer, install the 2 new differential bearings.

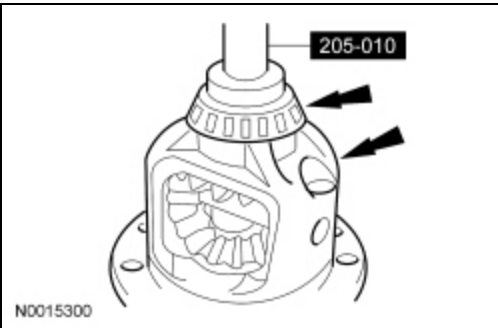

15. Install the differential carrier. For additional information, refer to Differential Carrier in this section.