


Differential Housing Cover

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® Additive Friction Modifier XL-3 (US); CXL-3 (Canada)	EST-M2C118-A
Motorcraft® SAE 75W-140 Synthetic Rear Axle Lubricant XY-75W140-QL (US); CXY-75W140-1L (Canada)	WSL-M2C192-A and GL-5
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

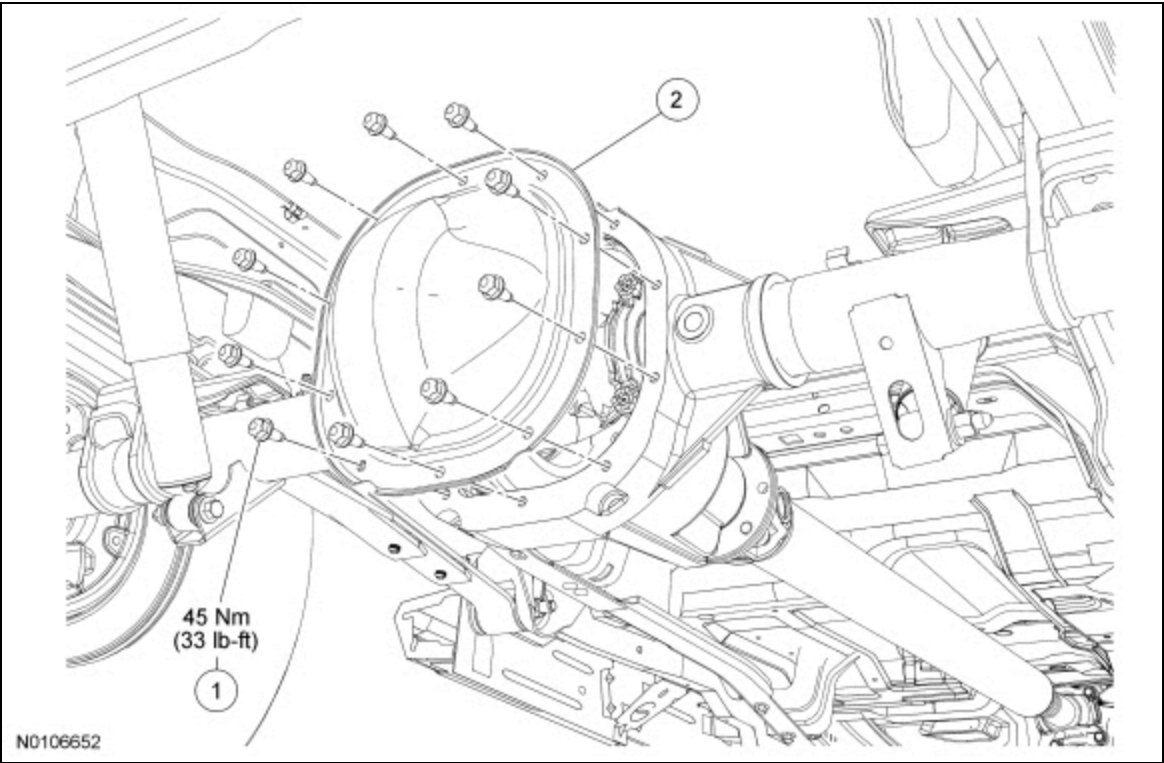


Item	Part Number	Description
1	4346 4346	Differential housing cover bolt (10 required)
2	4033 4033	Differential housing cover

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the differential housing cover.

1. Remove the 10 differential housing cover bolts and drain the lubricant from the axle housing.
2. Remove the differential housing cover.

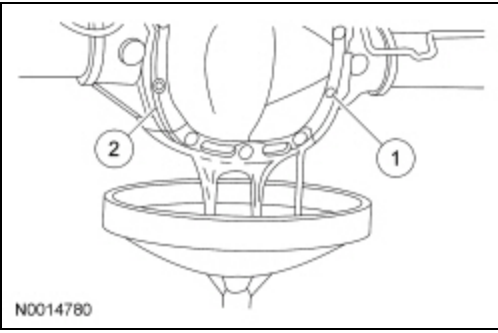


Installation

1. **NOTE:** *The machined surfaces on the differential housing and the differential housing cover must be clean and free of oil before applying the silicone sealant. Cover the inside of the rear axle prior to cleaning the machined surface to prevent contamination.*

Clean the gasket mating surfaces.


2. Apply a new continuous bead of sealant to the differential housing cover.

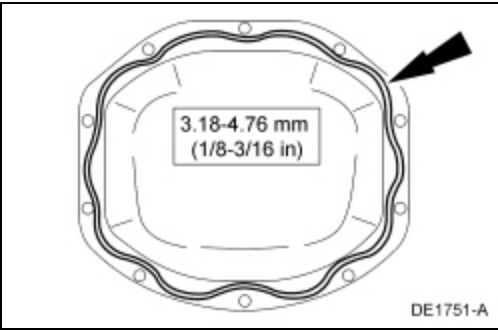

3. **NOTE:** *The differential housing cover must be installed within 15 minutes of application of the silicone sealant, or new sealant must be applied. If possible, allow one hour before filling the axle housing with axle lubricant to make sure the silicone sealant has correctly cured.*

Install the differential housing cover and the 10 differential housing cover bolts.

- Tighten to 45 Nm (33 lb-ft).

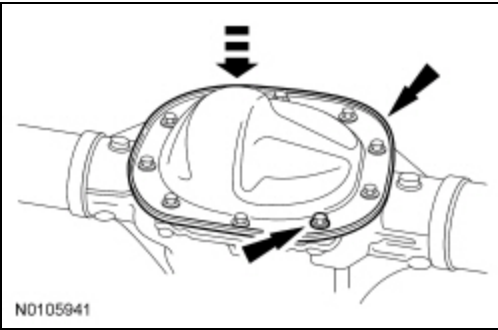

4. **NOTE:** *When filling a Traction-Lok axle with new lubricant, first fill the axle with 118 ml (4 oz) of friction modifier.*

Remove the filler plug, fill the axle with 2.8L (6.0 pt) of axle lubricant and install the filler plug.

- Tighten to 52 Nm (38 lb-ft).