

Rear Wheel Bearing and Axle Shaft Seal


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST1326-A	Adapter For 303-224 (Handle) 205-153 (T80T-4000-W)
 ST1322-A	Installer, Axle Bearing 205-194 (T83T-1225-B)
 ST1736-A	Installer, Axle Oil Seal 205-381 (T97T-1177-A)
 ST1283-A	Remover, Axle Bearing 205-193 (T83T-1225-A)
 ST1185-A	Slide Hammer 100-001 (T50T-100-A)

Material

Item	Specification
Motorcraft® SAE 75W-140 Synthetic Rear Axle Lubricant XY-75W140-QL (US); CXY-75W140-1L (Canada)	WSL-M2C192-A and GL-5
Motorcraft® Premium Long-Life Grease XG-1-E1	ESA-M1C75-B

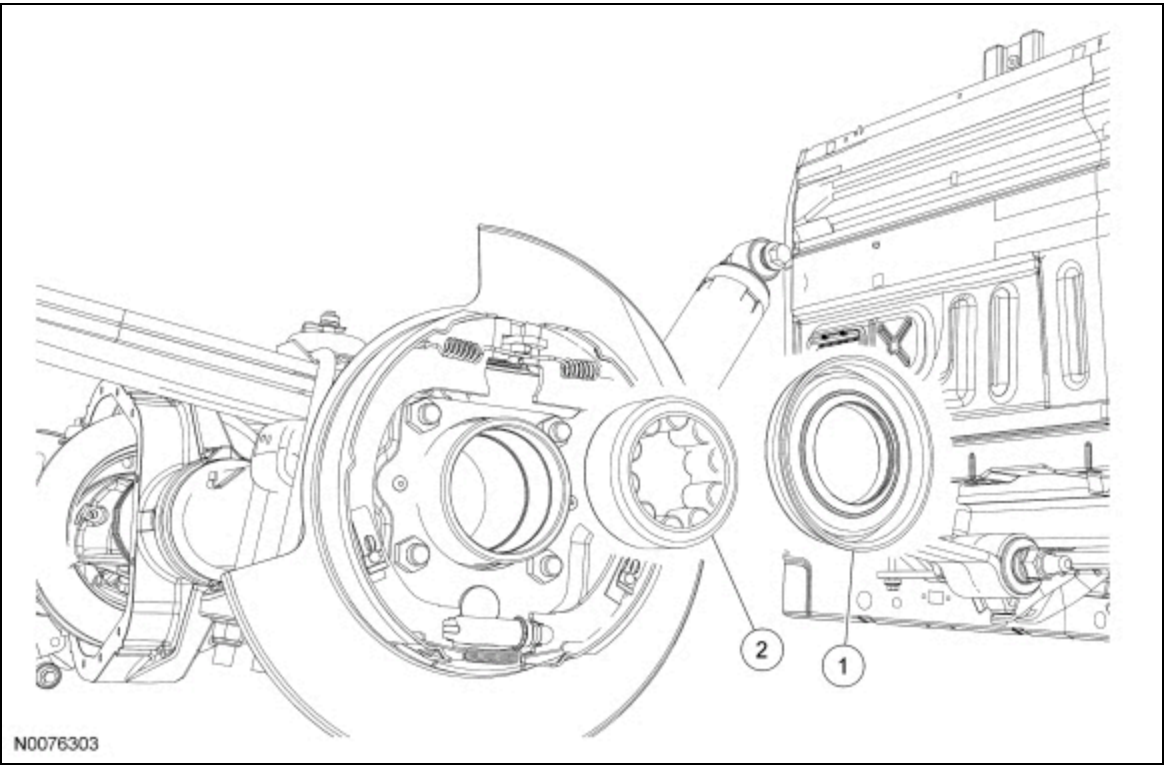

Item	Part Number	Description
1	1177 1177	Axle shaft oil seal
2	1225 1225	Axle shaft bearing


Removal

1. Remove the axle shaft. For additional information, refer to Axle Shaft in this section.
2. **NOTE:** *If the axle shaft oil seal is leaking, the axle housing vent may be plugged with foreign material.*

NOTE: *Use care to avoid damaging the axle shaft oil seal bore.*


Using a suitable seal remover, remove and discard the axle shaft oil seal.

3. Inspect the rear wheel bearing and axle shaft for wear or damage.
4. If necessary, using the Axle Bearing Remover and Slide Hammer, remove the rear wheel bearing.

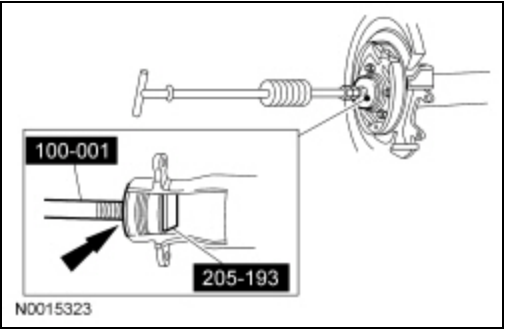


Installation

1. If removed, lubricate the new rear wheel bearing with axle lubricant.
2. If removed, use the Axle Bearing Installer and Handle to install the rear wheel bearing.

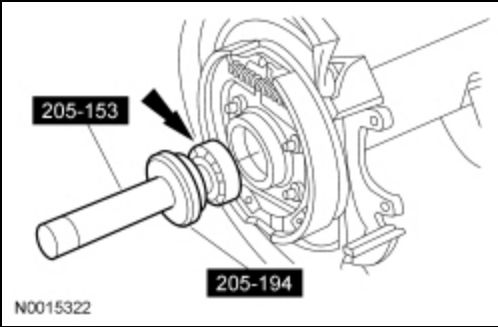

3. Lubricate the lip of the new axle shaft oil seal with grease.
4. Using the Axle Oil Seal Installer and Handle, install the new axle shaft oil seal.

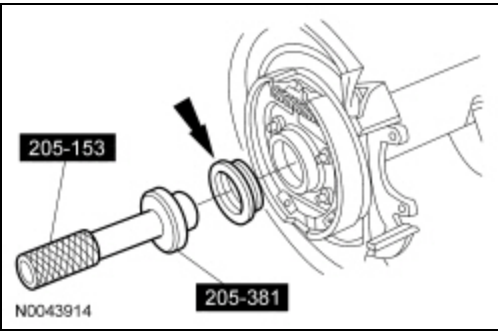

5. Install the axle shaft. For additional information, refer to Axle Shaft in this section.