


Axle Shaft

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Premium Long-Life Grease XG-1-E1	ESA-M1C75-B
Motorcraft® Threadlock and Sealer TA-25-B	WSK-M2G351-A5

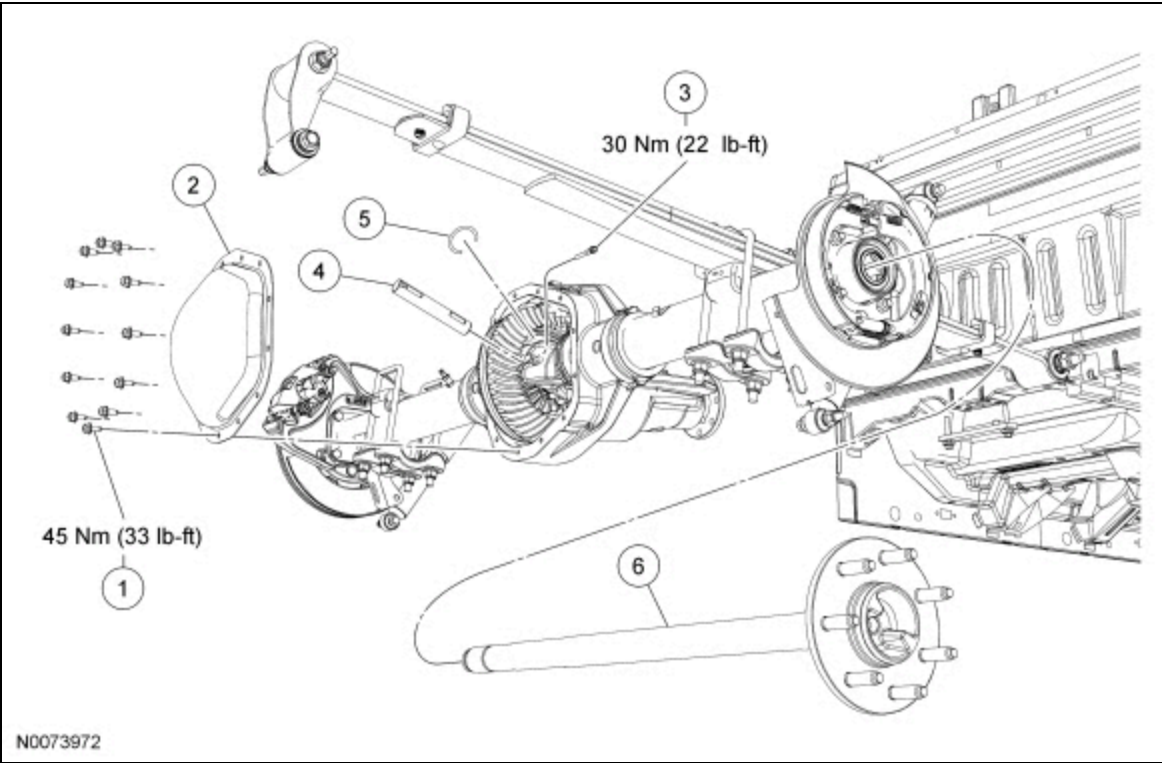


Item	Part Number	Description
1	4346 4346	Differential housing cover bolt (12 required)
2	4033 4033	Differential housing cover
3	4241 4241	Differential pinion shaft locking bolt
4	4211 4211	Differential pinion shaft
5	4N237 4N237	Axle shaft C-washer
6	4234 4234	Axle shaft


Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the differential housing cover. For additional information, refer to Differential Housing Cover.


3. Remove the rear brake disc. For additional information, refer to Section 206-04.
4. Remove the bolt and position aside the wheel speed sensor.
5. Remove the differential pinion shaft.
 1. Remove and discard the differential pinion shaft lock bolt.
 2. Remove the differential pinion shaft.

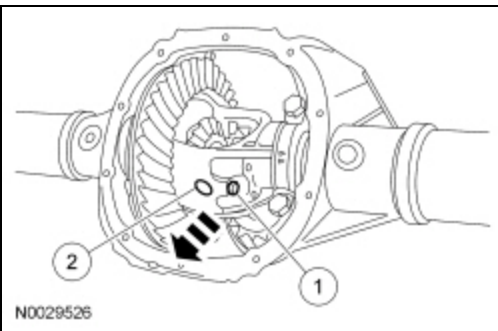

6. Remove the U-washer.
 1. Push in on the axle shaft.
 2. Remove the U-washer.

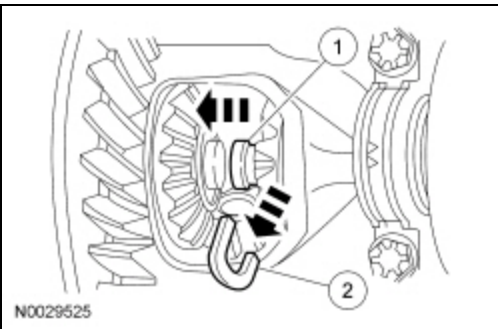


7. Remove the axle shaft.

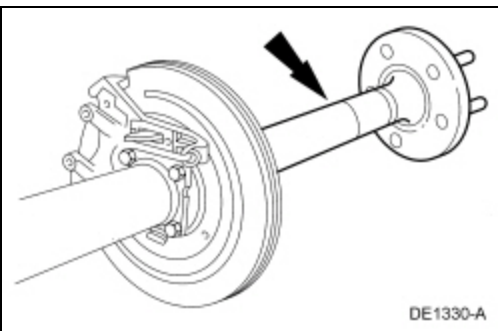

Installation


1. Lubricate the lip of the axle shaft oil seal with grease.
2. Install the axle shaft.

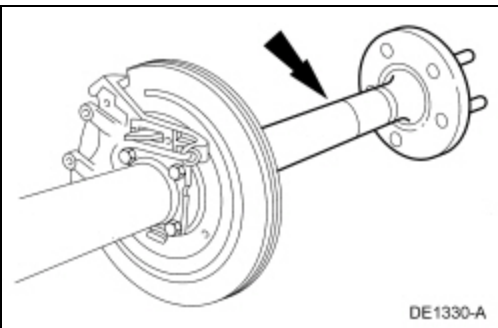

3. **NOTE:** Do not damage the rubber O-rings in the U-washer grooves.

Install the U-washer.


1. Position the U-washer on the button end of the axle shaft.
2. Pull the axle shaft outward.

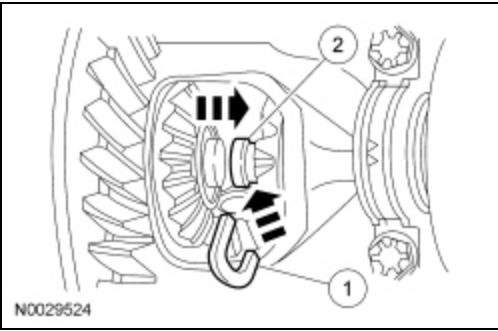

4. **NOTE:** If a new differential pinion shaft lock bolt is unavailable coat the threads of the original differential pinion shaft lock bolt with threadlock prior to installation.

Install the differential pinion shaft.

1. Align the hole in the differential pinion shaft with the differential case lock bolt hole.
2. Install a new differential pinion shaft lock bolt.
 - Tighten to 30 Nm (22 lb-ft).

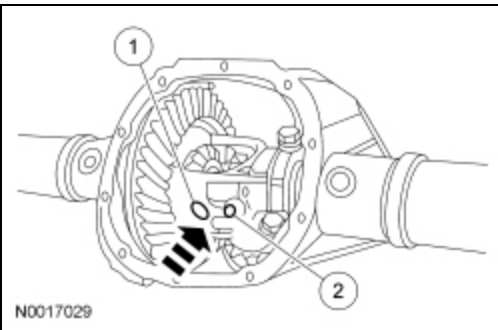

5. Install the wheel speed sensor and the bolt.

- Tighten to 15 Nm (133 lb-in).

6. Install the rear brake disc. For additional information, refer to Section 206-04.

7. Install the differential housing cover. For additional information, refer to Differential Housing Cover.