


Differential Housing Cover

 [Ford Ecat Electronic Parts Catalog](#)


Material	
Item	Specification
Motorcraft® Additive Friction Modifier XL-3 (US); CXL-3 (Canada)	EST-M2C118-A
Motorcraft® SAE 75W-140 Synthetic Rear Axle Lubricant XY-75W140-QL (US); CXY-75W140-1L (Canada)	WSL-M2C192-A and GL-5
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Separate the 3 brake tube fasteners from the differential housing cover stud bolts.

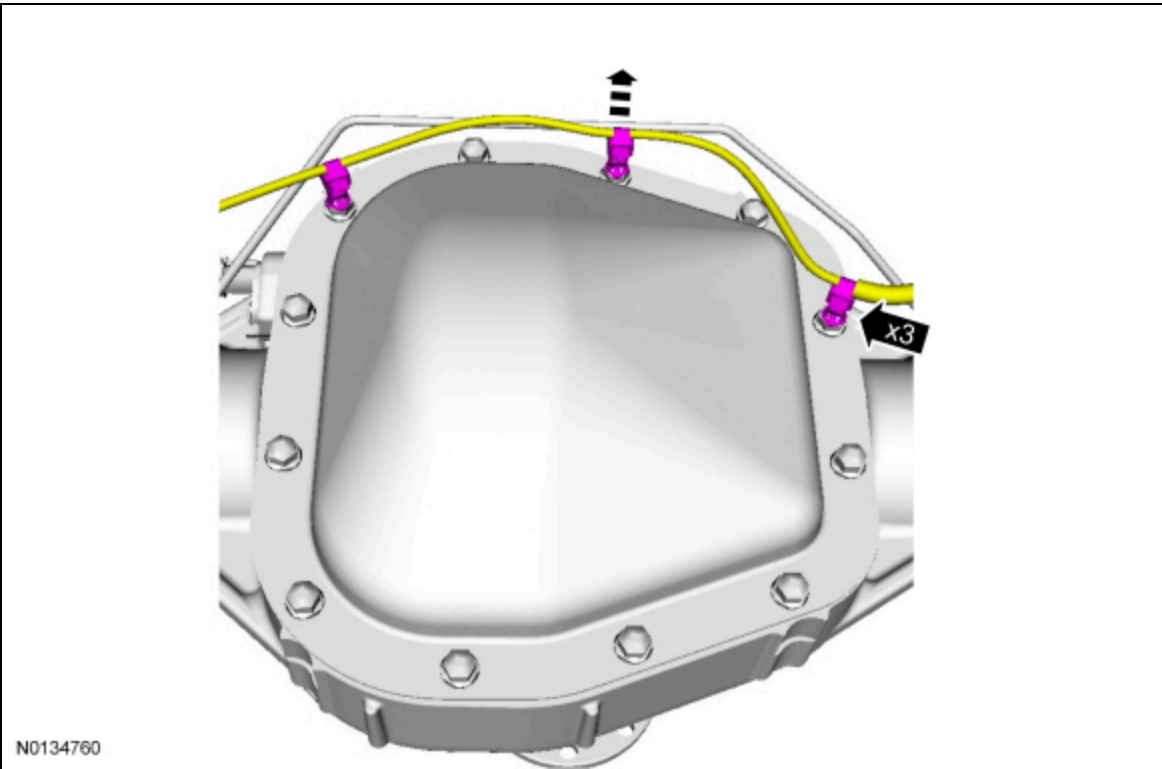

3. Remove the differential housing cover.
 1. Remove the 9 differential housing cover bolts and the 3 differential housing cover stud bolts, and drain the lubricant from the axle housing.
 2. Remove the differential housing cover.

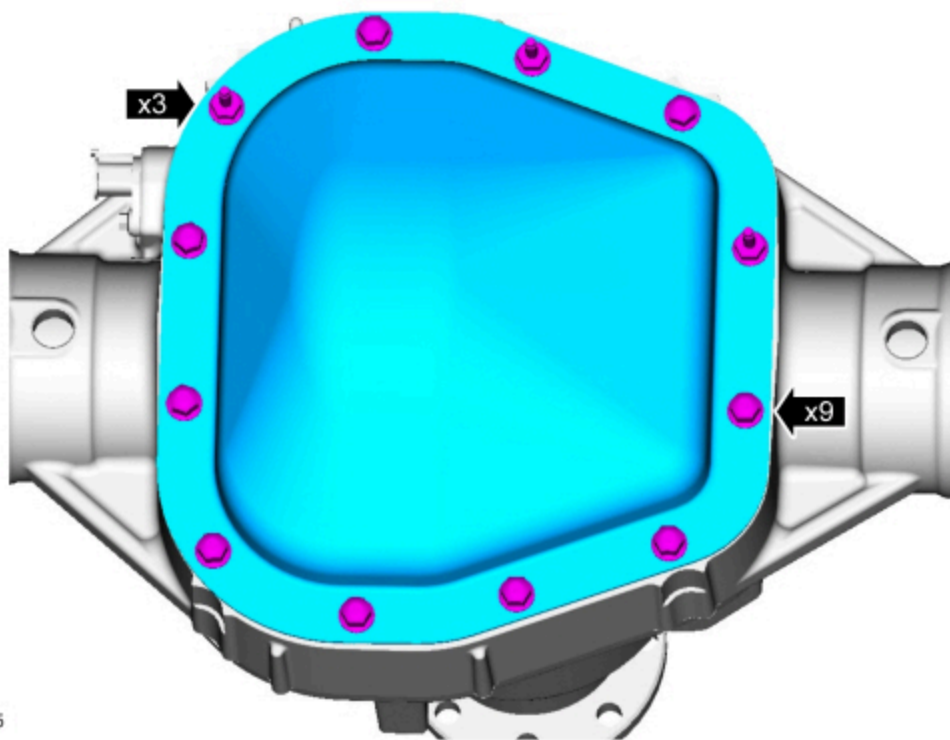


N0133525

Installation

1. **NOTE:** Remove all of the silicone gasket and make sure the surfaces are free of oil before applying the new silicone gasket.

Clean the gasket mating surface of the axle and the differential housing cover.

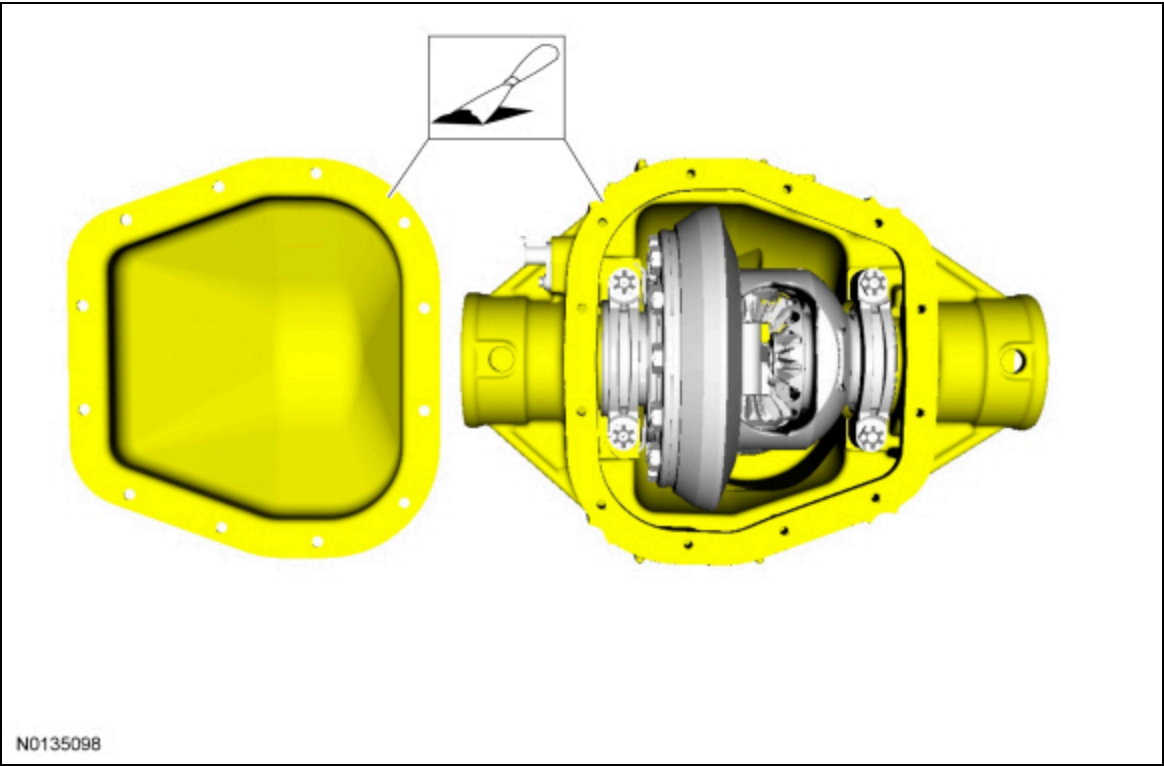

N0135098


2. Apply a new, continuous bead of sealant to the differential housing cover as shown.




3. **NOTE:** *The differential housing cover must be installed within 15 minutes of application of the silicone, or new sealant must be applied. If possible, allow one hour before filling with lubricant to make sure the silicone sealant has correctly cured.*

Install the differential housing cover and the 9 differential housing cover bolts and the 3 differential housing cover stud bolts.

- Tighten to 45 Nm (33 lb-ft).

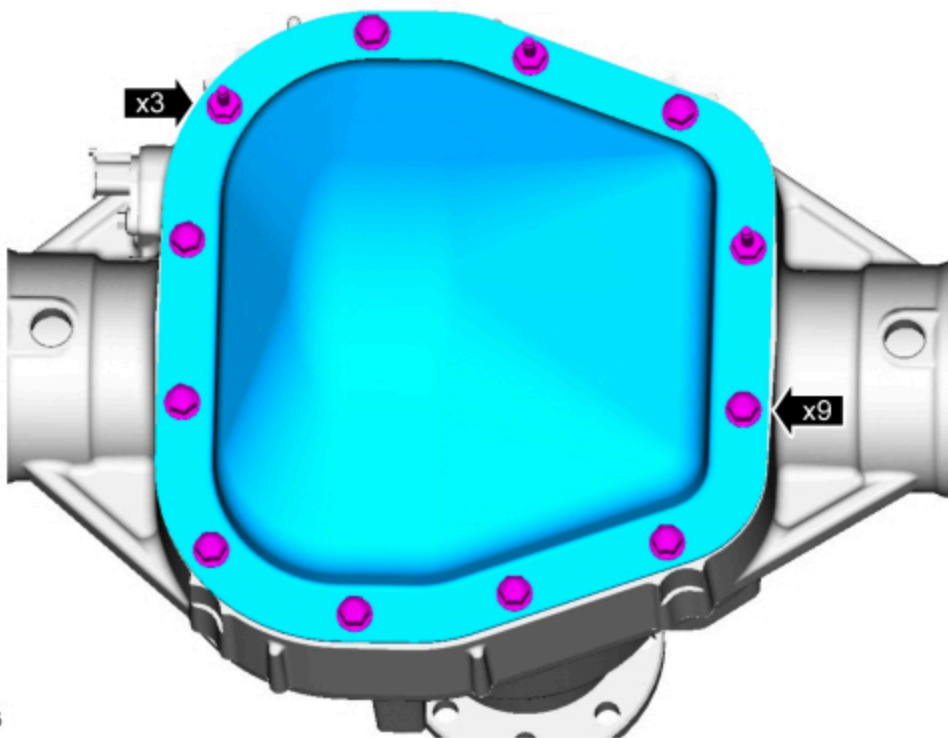

4. Remove the fill plug.

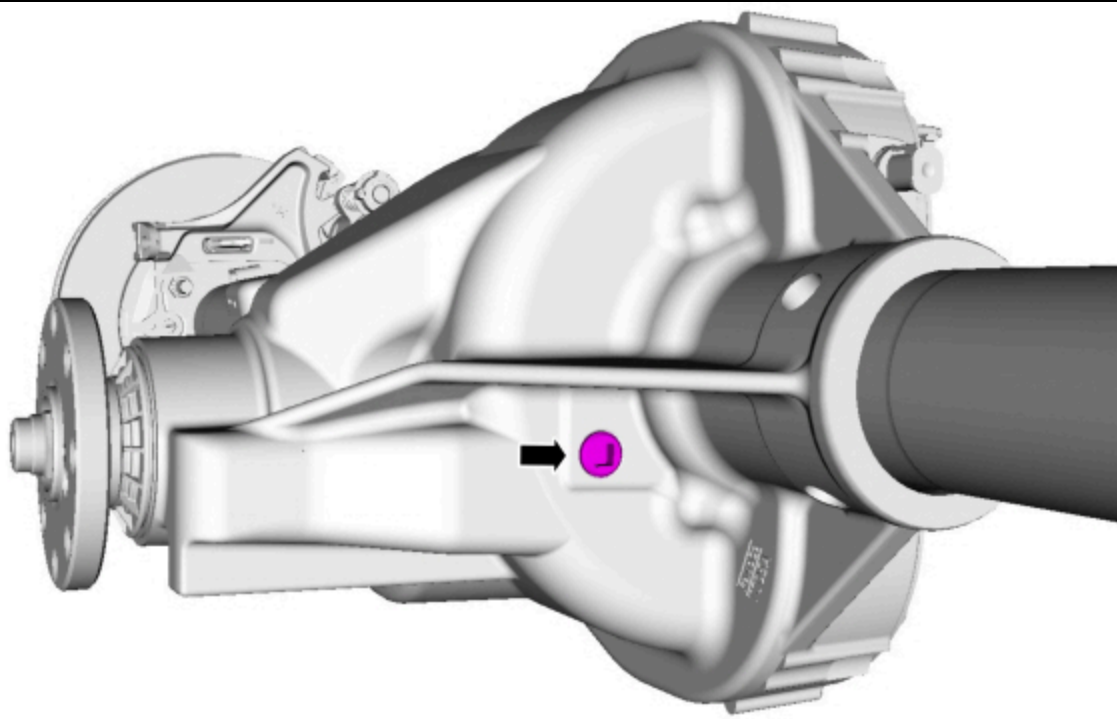

N0135099

5. **NOTE:** *If equipped with Traction-Lok axles, first fill the axle with 118 ml (4 oz.) of friction modifier. No friction modifier is used on Electronic Locking Differential (ELD) axles.*

Fill the axle with the specified amount of axle lubricant and install the fill plug.

- Tighten to 30 Nm (22 lb-ft).