



Electronic Locking Differential (ELD) Field Coil

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2473-A	Installer, Differential Carrier Bearing 205-D044 9D81T-4221-A) or equivalent
 ST1368-A	Puller, Bearing 205-D064 (D84L-1123-A)
 ST1725-A	Step Plate 205-D061 (D83T-4205-C2) or equivalent

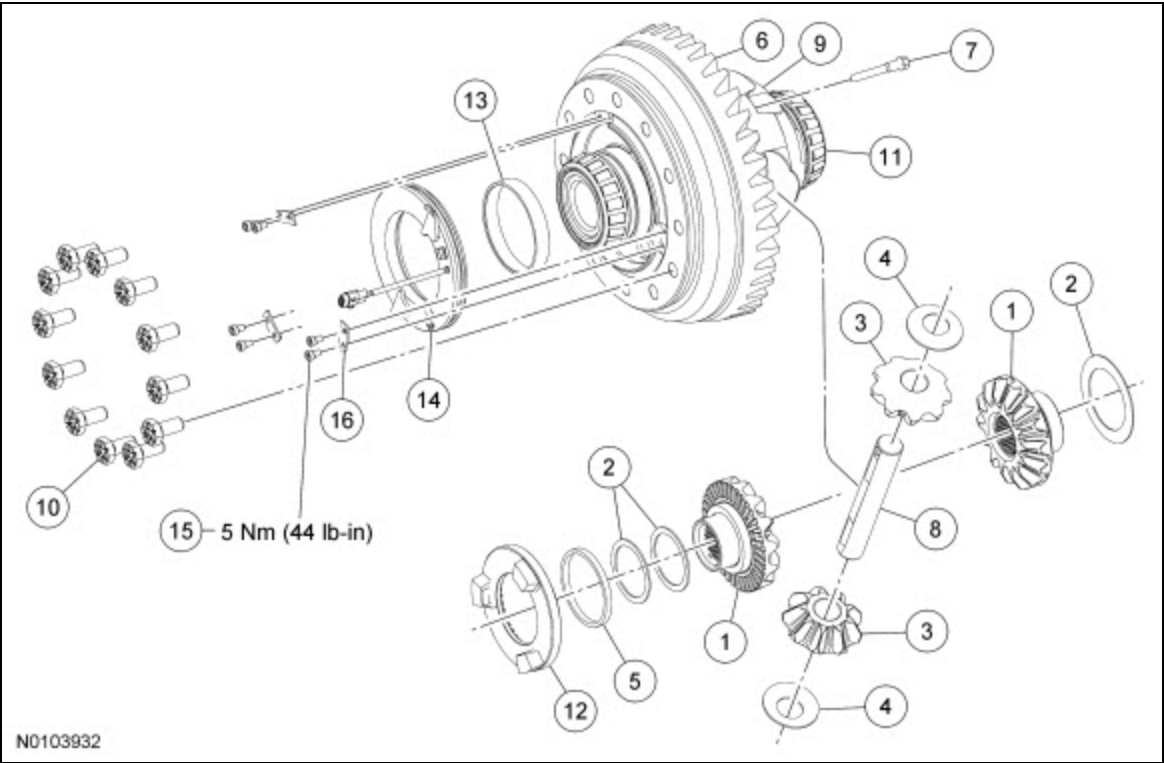


Item	Part Number	Description
1	—	Differential side gears (part of kit 4880)
2	—	Differential side gear thrust washers (part of kit 4880)
3	—	Differential pinion gears (part of kit 4880)


4	—	Differential pinion thrust washers (part of kit 4880)
5	—	Differential pinion spring (part of kit 4880)
6	4209 4209	Differential ring gear
7	—	Differential pinion shaft lock bolt (part of kit 4880)
8	4211 4211	Differential pinion shaft
9	4204 4204	Differential case
10	4216 4216	Differential ring gear bolt (12 required)
11	4221 4221	Differential bearing
12	—	Cam-ring (part of kit 4880)
13	—	Plunger (part of kit 4880)
14	—	Electronic Locking Differential (ELD) coil (part of kit 4880)
15	—	ELD coil screw (part of kit 4880) (6 required)
16	—	Stopper (part of kit 4880) (3 required)

Removal


1. Remove the differential carrier. For additional information, refer to Differential Carrier in this section.
2. Using the Bearing Puller plate, Step Plate and a suitable press, remove the LH differential bearing.

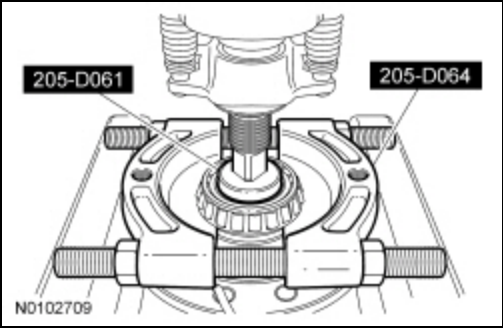

3. Remove and discard the 6 screws and 3 stoppers that hold the Electronic Locking Differential (ELD) coil in place and remove the coil.

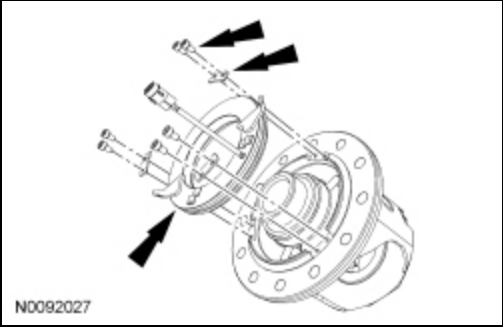


4. Remove and discard the plunger assembly.

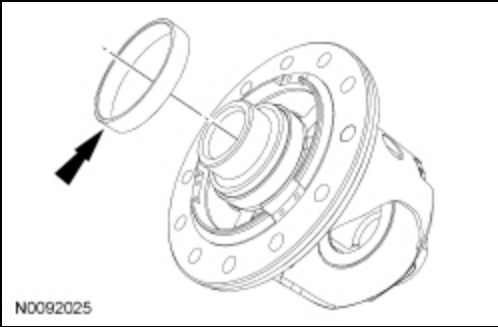


Installation


1. Install a new plunger assembly.

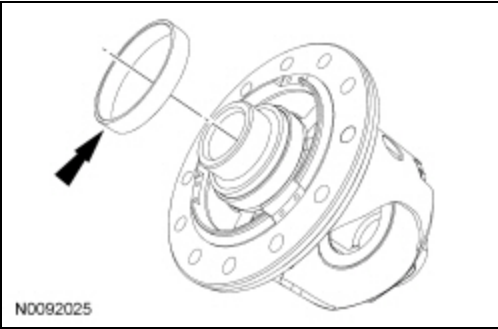

2. Install the new ELD coil, 3 stoppers and 6 screws that hold the coil in place.
 - Tighten to 5 Nm (44 lb-in).

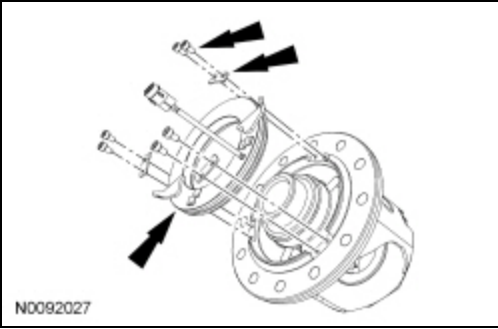

3. Use the Differential Carrier Bearing Installer to install the LH differential bearing.

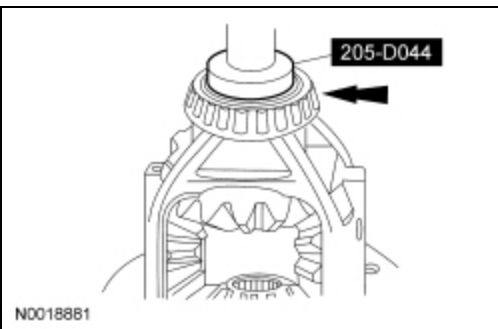

4. Install the differential carrier. For additional information, refer to Differential Carrier in this section.