
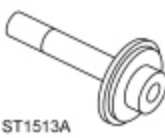



Stub Shaft Pilot Bearing and Seal

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST1326-A	Handle 205-D055 (D81L-4000-A)
 ST1513A	Installer, Axle Shaft Oil Seal 205-123 (T78P-1177-A)
 ST2369-A	Installer, Wheel Speed Sensor Ring 206-034 (T88P-20202-B)
 ST1200-A	Remover, Bearing Cup 308-047 (T77F-1102-A)
 ST2418-A	Remover, Transmission Fluid Pump 307-397
 ST1185-A	Slide Hammer 100-001 (T50T-100-A)

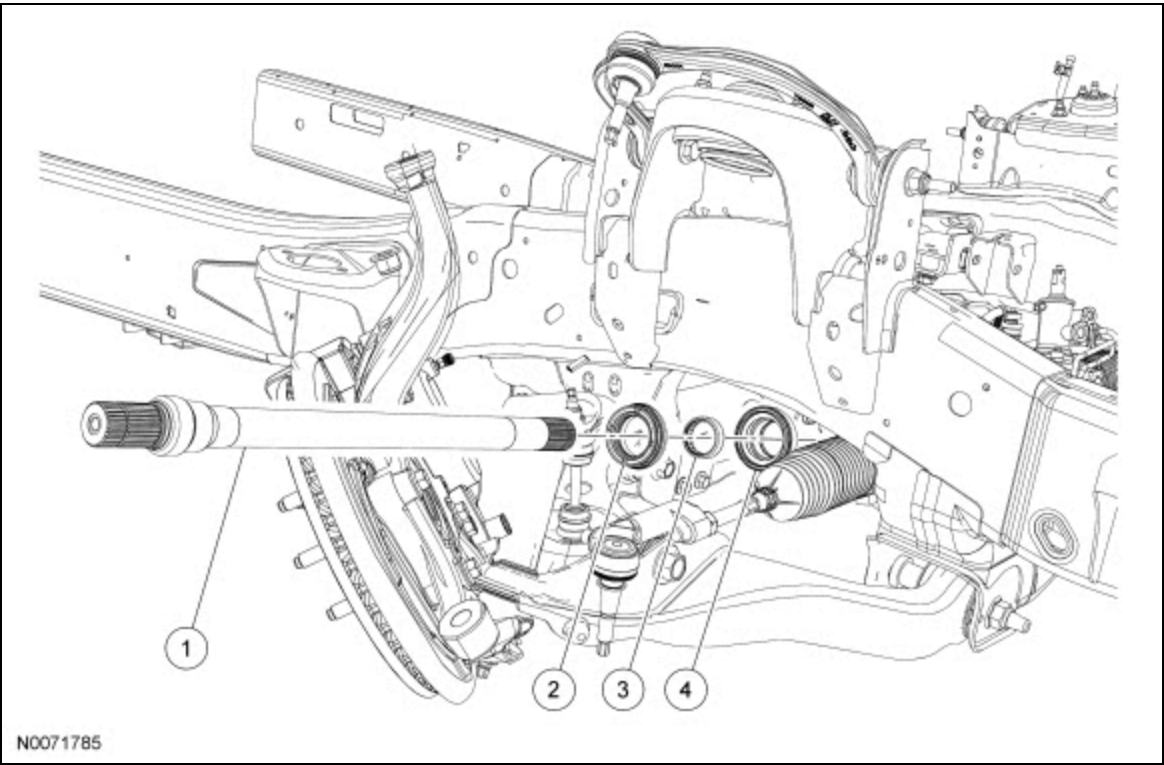


Item	Part Number	Description
1	3A380 3A380	Intermediate shaft
2	3B112 3B112	Stub shaft seal
3	4B413 4B413	Stub shaft bearing
4	3B210 3B210	Axle housing tube


Removal

NOTE: *Install a new stub shaft seal whenever a halfshaft is removed.*

1. Remove the halfshafts. For additional information, refer to Section 205-03.
2. Using the Transmission Fluid Pump Remover and Slide Hammer, remove the intermediate shaft.

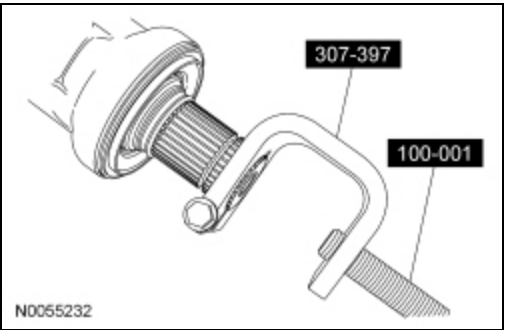


3. Remove and discard the intermediate shaft circlip.

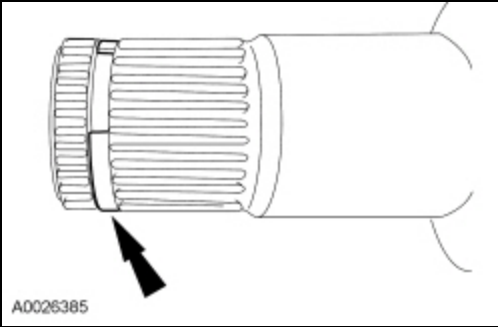


4. Using a suitable seal remover, remove and discard the stub shaft pilot bearing oil seal.

5. Using the Bearing Cup Remover and Slide Hammer, remove and discard the stub shaft pilot bearing.

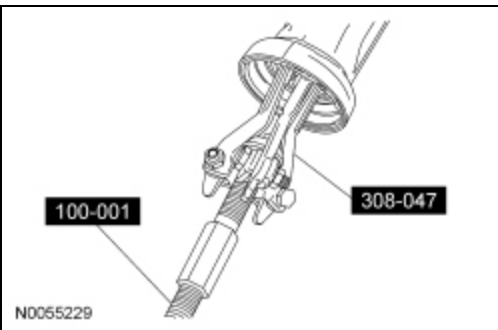


Installation


1. Position the stub shaft pilot bearing in the axle tube or differential housing bore and using the Axle Shaft Oil Seal Installer, install the bearing.

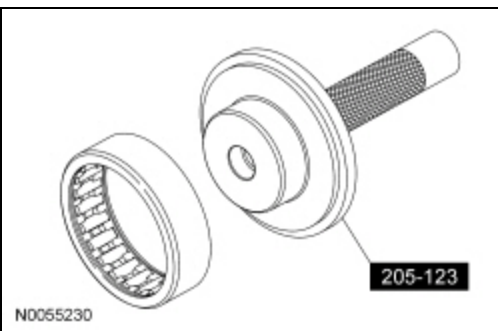

2. Carefully align the stub shaft pilot bearing oil seal with the housing bore and install the stub shaft bearing oil seal flush in the housing using the Wheel Speed Sensor Ring Installer and Handle.

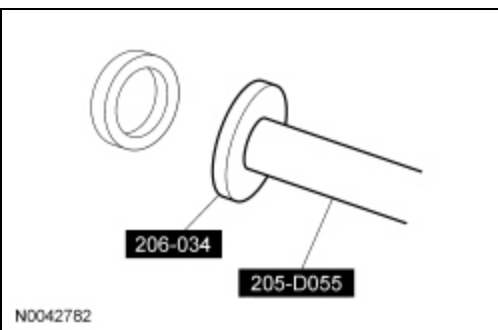

3. Install a new circlip on the intermediate shaft end.

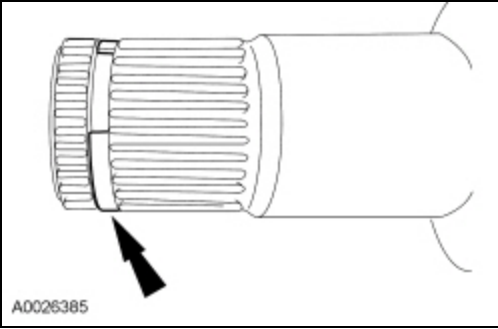

4. Insert the intermediate shaft and engage the circlip with the differential side gear.
5. Install the halfshafts. For additional information, refer to Section 205-04.