


Axle Assembly


 [Ford Ecat Electronic Parts Catalog](#)

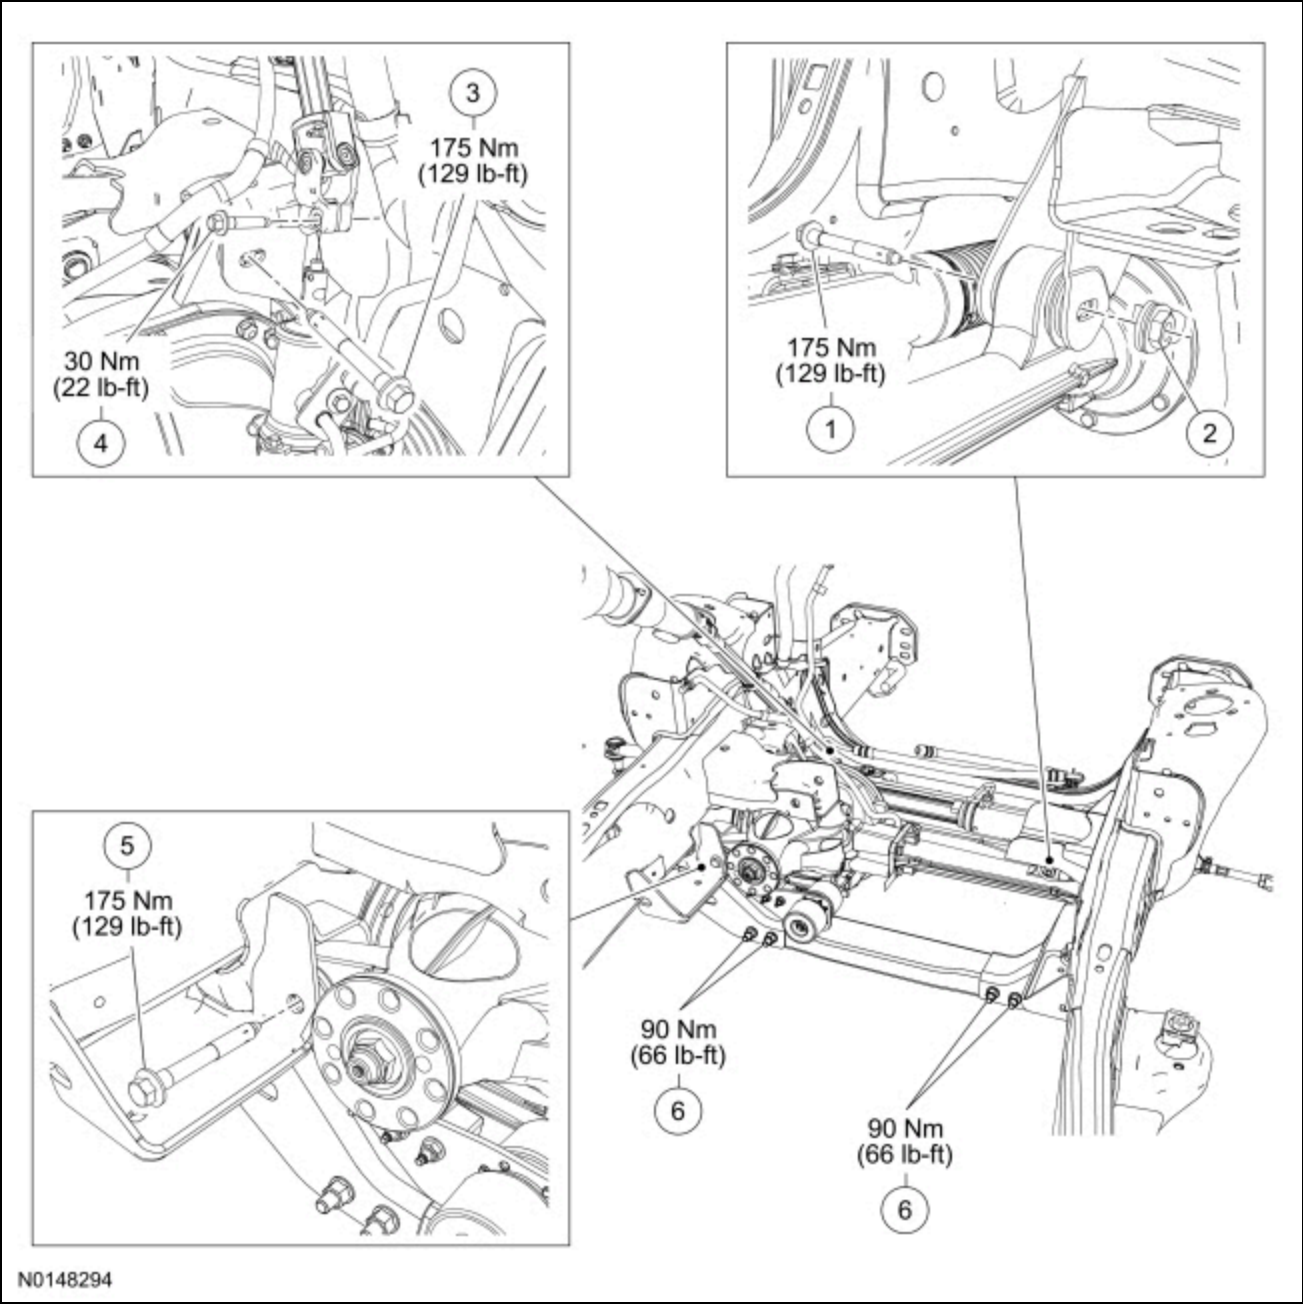


Item	Part Number	Description
1	W712724 W712724	Axle tube bushing bolt
2	W712723 W712723	Axle tube bushing flagnut
3	W712724 W712724	Rear axle housing bushing bolt
4	N808684 N808684	Steering column coupler bolt
5	W712743 W712743	Front axle housing bushing support bolt
6	636893 636893	Crossmember nuts (4 required)

Removal and Installation


1. Remove the front driveshaft. Refer to Section 205-01.
2. Remove the halfshafts. Refer to Section 205-04.
3. Remove the 4 crossmember nuts and bolts and the crossmember.
 - To install, tighten to 90 Nm (66 lb-ft).

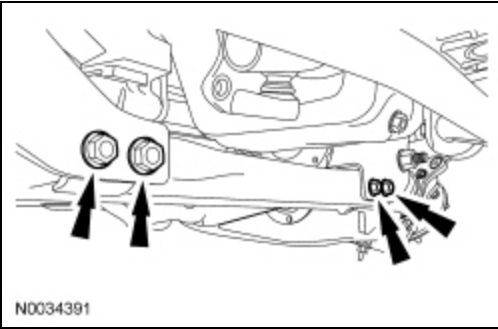


4. Use a high-lift jack to support the axle assembly.

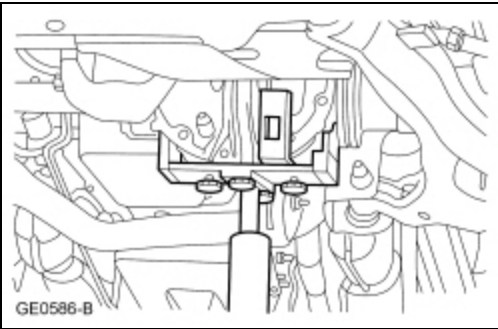

5. Remove the axle tube bushing bolt and flagnut.
 - To install, tighten to 175 Nm (129 lb-ft).

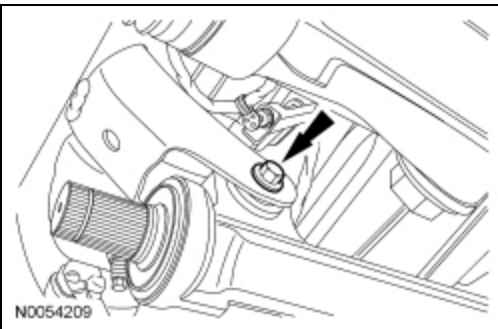


6. Remove the front axle housing bushing bolt.
 - To install, tighten to 175 Nm (129 lb-ft).

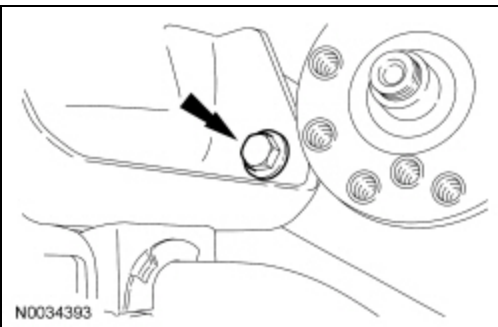

7. **NOTE:** Use a steering wheel holding device (such as a Hunter® 28-75-1 or equivalent).


Using a suitable holding device, hold the steering wheel in the straight-ahead position.

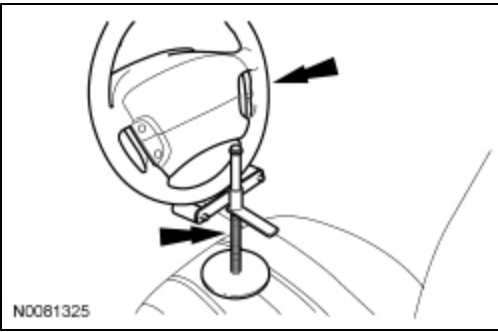

8. **NOTICE:** Do not allow the steering column to rotate while the steering column shaft is disconnected or damage to the clockspring may result. If there is evidence that the steering column has rotated, the clockspring must be removed and recentered. Refer to Section 501-20B.


Remove and discard the steering column shaft-to-steering gear bolt and disconnect the shaft from the steering gear.

- To install, tighten the new bolt to 30 Nm (22 lb-ft).

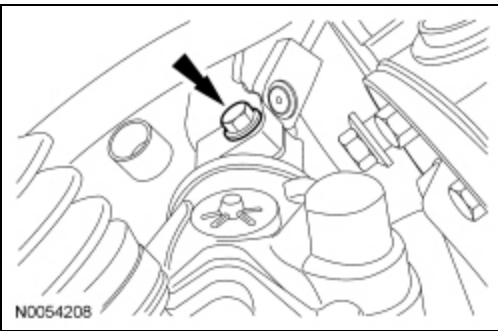

9. Remove the rear axle housing bushing bolt.

- To install, tighten to 175 Nm (129 lb-ft).

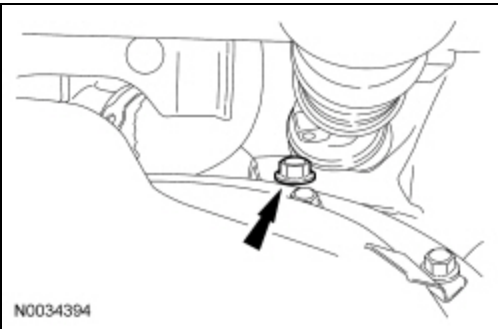

10. Carefully lower the front drive axle assembly.

11. Disconnect the vent hose from the axle vent barbed fitting.

12. **NOTE:** Make sure the axle vent hose is connected.

To install, reverse the removal procedure.