



Halfshaft

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2934-A	Halfshaft Remover 205-832
 ST1185-A	Slide Hammer 100-001 T50T-100-A

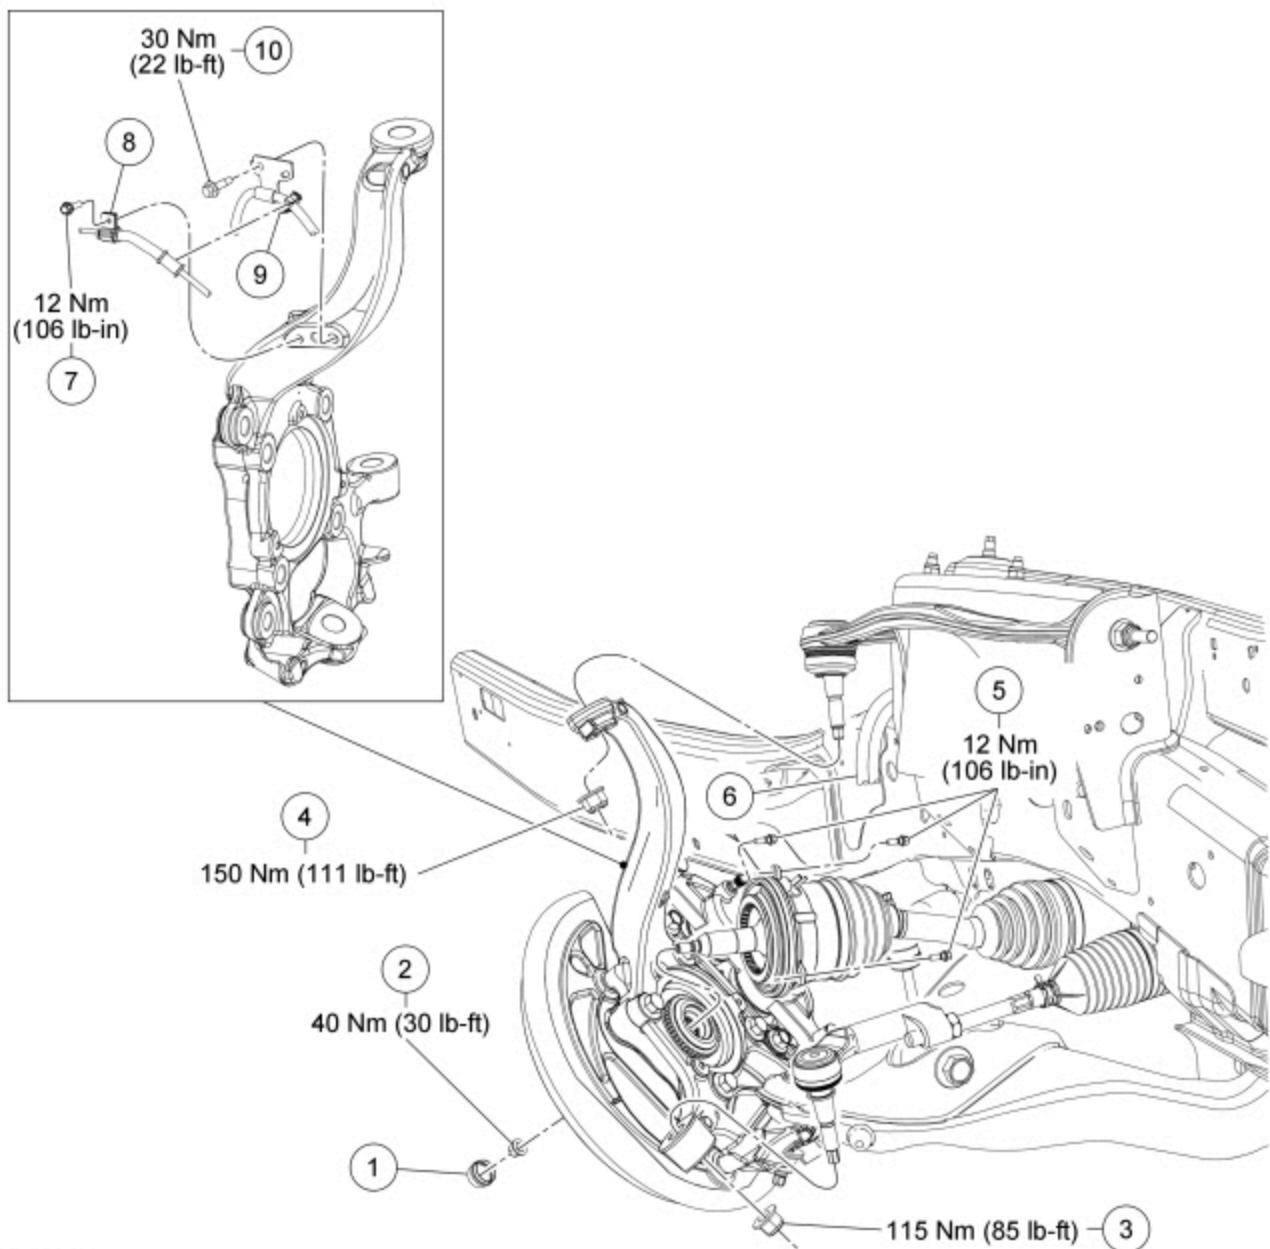

N0122846


Item	Part Number	Description
1	1131 1131	Dust cap
2	N802827 N802827 -S100-S100	Wheel hub nut
3	W520215 W520215	Tie-rod end nut
4	W520215 W520215	Upper ball joint nut
5	W505211 W505211	Integrated Wheel End (IWE) bolts (3 required)
6	—	Vacuum vent and apply tube
7	—	Wheel speed sensor harness bracket bolt
8	—	Wheel speed sensor harness bracket (part of 2C204)
9	—	Brake flexible hose retainer (part of 2078)
10	W611633 W611633	Brake flexible hose bracket bolt

Removal and Installation

NOTICE: Whenever a halfshaft is removed, install a new circlip and stub shaft pilot bearing seal or damage to the component may occur.

NOTE: Removal steps may contain installation details.


1. Remove the brake disc. Refer to Section 206-03.
2. Remove the dust cap.

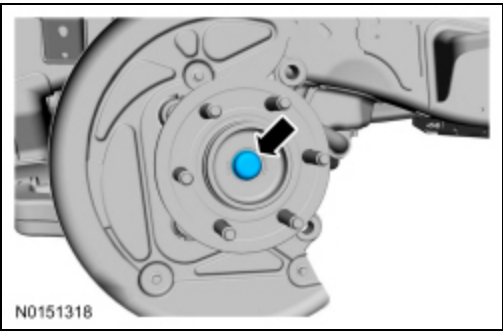


3. **NOTICE:** When installing the halfshafts measure the depth of the CV shaft threaded end to the inner bearing race. The minimum depth is 15.5 mm (0.61 in). If the depth is less than 15.5 mm (0.61 in) rotate the CV shaft to clear a binding condition between the IWE and CV splines. Installing the axle nut and tightening without the proper depth of protrusion will result in damage to the IWE .

Remove and discard the wheel hub nut.


- To install, tighten the new wheel hub nut to 40 Nm (30 lb-ft).

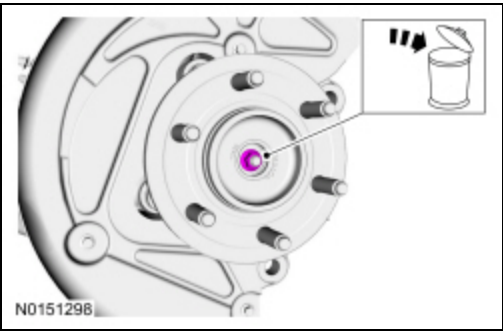


4. Remove the wheel speed sensor harness bracket bolt. Detach the wheel speed sensor retainers.
 - To install, tighten to 12 Nm (106 lb-in).

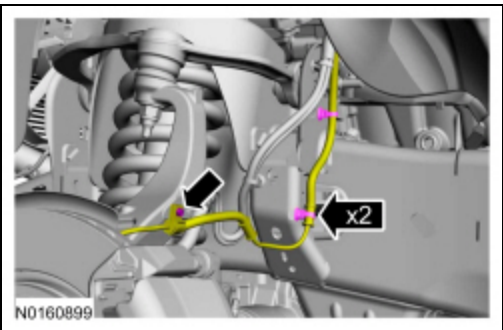

5. Disconnect the wheel speed sensor harness and position the harness aside.

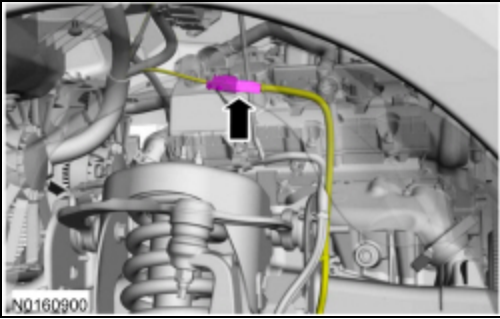


6. Detach the brake flexible hose retainer from the wheel speed sensor harness.
7. Remove the brake flexible hose bracket bolt and disconnect the brake flexible hose bracket from the wheel knuckle.
 - To install, tighten to 30 Nm (22 lb-ft).
8. Remove the vacuum vent and apply tube at the vacuum vent and apply tube port of the Integrated Wheel End (IWE) disconnect.

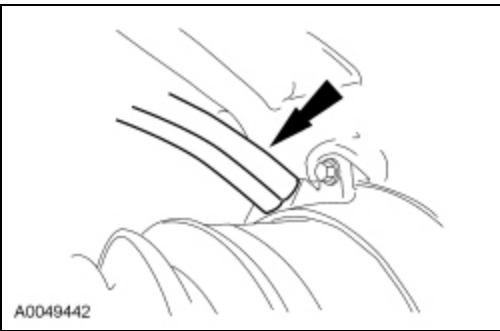


9. Remove the 3 IWE bolts.
 - To install, tighten to 12 Nm (106 lb-in).
10. Remove and discard the tie-rod end nut.
 - Disconnect the tie-rod end from the wheel knuckle.
 - To install, tighten the new tie-rod end nut to 115 Nm (85 lb-ft).
11. Remove and discard the upper ball joint nut.
 - Disconnect the upper ball joint from the wheel knuckle.
 - To install, tighten the new upper ball joint nut to 150 Nm (111 lb-ft).
12. **NOTE:** *Do not damage the hub seal.*

NOTE: *Allow the steering knuckle to swing outboard while keeping the CV shaft pushed inboard.*

Once clearance is available, remove the CV shaft joint outboard end and IWE disconnect from the steering knuckle hub bearing.

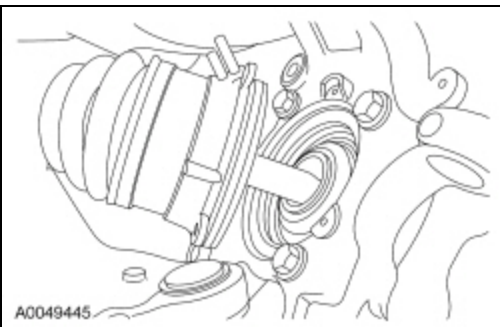


13. Remove the IWE disconnect from the outboard CV joint housing.

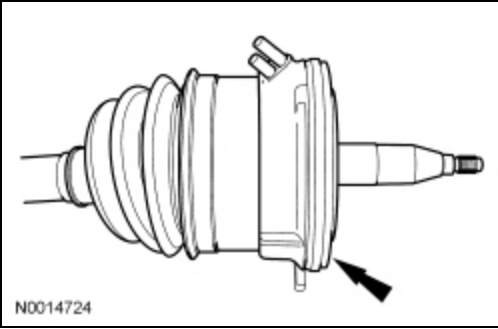


14. **NOTE:** The **IWE** needs to be compressed and capped until the halfshaft outboard end and **IWE** assembly are installed.

Compress the **IWE** and install a vacuum cap on the vacuum port.

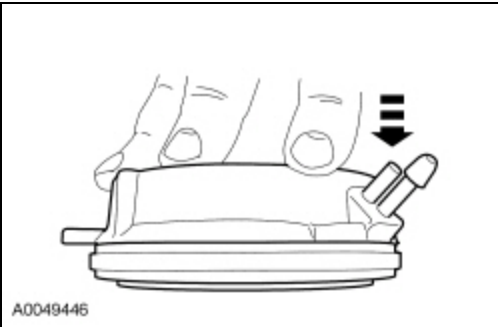

15. Using the Halfshaft Remover and Slide Hammer, remove the halfshaft from the differential and the intermediate shaft.

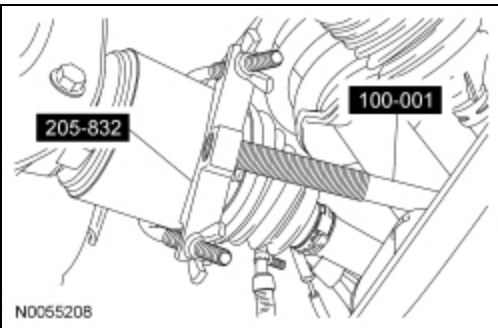

16. Remove and discard the circlip and the stub shaft seal. Refer to Section 205-03.

Installation

1. **NOTICE:** Verify the spline engagement by checking for spline lash before installing the halfshaft nut or component damage may occur.

To install, reverse the removal procedure.