


Brake Disc Shield



Removal

1. Remove the brake disc. For additional information, refer to Brake Disc in this section.
2.
 - To install, tighten to 18 Nm (159 lb-in).

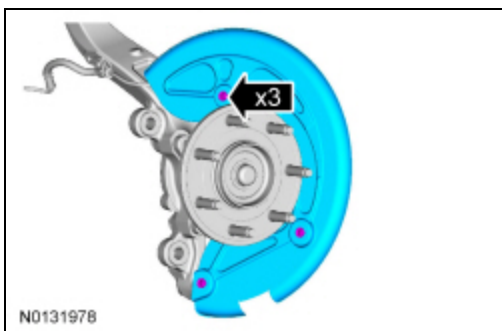

Installation

1. To install, reverse the removal procedure.