


Parking Brake Control

 [Ford Ecat Electronic Parts Catalog](#)

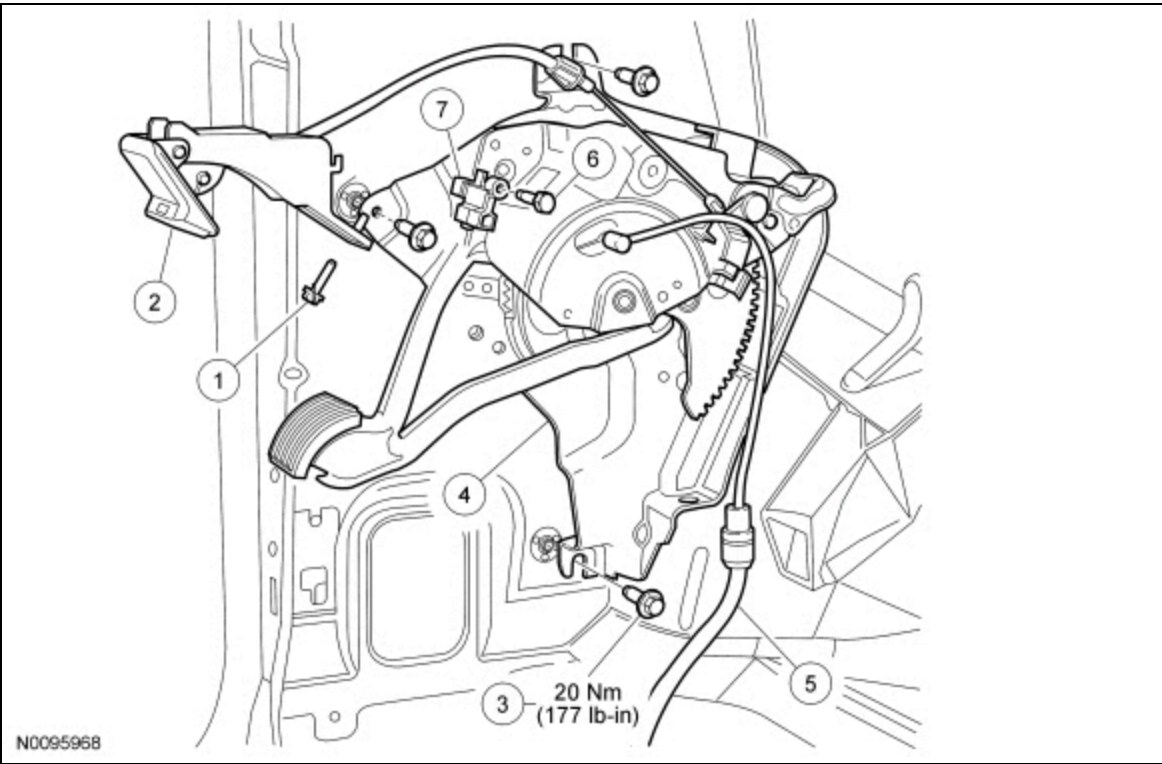

Item	Part Number	Description
1	W707628 W707628	Parking brake release handle bolt
2	2783 2783	Parking brake release handle
3	W704522 W704522	Parking brake control assembly bolt (3 required)
4	2780 2780	Parking brake control
5	2853 2853	Front parking brake cable
6	N807729 N807729	Parking brake warning indicator switch screw
7	15A851 15A851	Parking brake warning indicator switch

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the LH cowl side trim panel. For additional information, refer to Section 501-05.
2. Release the tension on the parking brake cable. For additional information, refer to Parking Brake Cable Tension Release in this section.
3. Remove the parking brake release handle bolt and pull the handle assembly down to prevent breaking off the locator tabs.
4. Disconnect the parking brake release handle cable from the parking brake control.

5. Disconnect the parking brake switch electrical connector.
6. Remove the 3 bolts from the parking brake control.
 - To install, tighten to 20 Nm (177 lb-in).
7. Position the cable conduit grommet up through the floor.
 - Release the cable from the parking brake control.
8. Remove the parking brake control from the vehicle.

Installation

1. To install, reverse the removal procedure.
 - Inspect the parking brake system for correct operation.