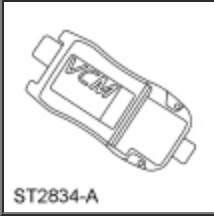


Inspection And Verification

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2834-A	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool
--	---

Adjustable Pedals

1. Verify the customer concern.
2. Visually inspect for obvious signs of mechanical or electrical damage.

Visual Inspection Chart — Without Memory Feature

Mechanical	Electrical
• Adjustable accelerator pedal and motor with cable attached • Adjustable brake pedal and bracket • Foreign objects or material	• Wiring, terminals or connectors • Body Control Module (BCM) fuse(s): ▪ 23 (15A) ▪ 24 (15A) • Steering Column Control Module (SCCM) • Brake pedal control switch

Visual Inspection Chart — With Memory Feature

Mechanical	Electrical
• Adjustable accelerate pedal and motor with cable attached • Adjustable brake pedal and bracket • Foreign objects or material	• BCM fuse(s): ▪ 23 (15A) ▪ 24 (15A) • Memory SET switch • Remote Keyless Entry (RKE) transmitter • SCCM • Wiring, terminals or connectors • Brake pedal control switch

3. If an obvious cause for an observed or reported concern is found, correct the cause (if possible) before proceeding to the next step.

4. **NOTE:** *Make sure to use the latest scan tool software release.*

If the cause is not visually evident, connect the scan tool to the Data Link Connector (DLC) .

5. **NOTE:** *The Vehicle Communication Module (VCM) LED prove out confirms power and ground from the DLC are provided to the VCM .*

If the scan tool does not communicate with the VCM :

- check the VCM connection to the vehicle.
- check the scan tool connection to the VCM .
- refer to Section 418-00, No Power To The Scan Tool, to diagnose no power to the scan tool.

6. If the scan tool does not communicate with the vehicle:

- verify the ignition is ON.
- verify the scan tool operation with a known good vehicle.
- refer to Section 418-00 to diagnose no response from the PCM.

7. Carry out the network test.

- If the scan tool responds with no communication for one or more modules, refer to Section 418-00.
- If the network test passes, proceed with module self-test diagnostics.

8. Carry out the self-test diagnostics for the SCCM , BCM and Driver Seat Module (DSM) .

9. If the DTCs retrieved are related to the concern, go to SCCM DTC Chart. For all other SCCM DTCs, refer to Section 211-05. For DSM DTCs, refer to Section 501-10. For BCM and all other DTCs, refer to Section 419-10.

10. If no DTCs related to the concern are retrieved, GO to Symptom Chart.