


Brake Vacuum Pump



Material	
Item	Specification
Motorcraft® High Performance Engine RTV Silicone TA-357	WSE-M4G323-A6
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® Metal Brake Parts Cleaner (US) / Motorcraft® Brake Parts Cleaner (Canada) PM-4-A or PM-4-B (US); CPM-4 (Canada)	—
Motorcraft® Silicone Gasket Remover ZC-30-A	—


Removal

1. Remove the RH front fender inner splash shield. Refer to Section 501-02.
- 2.

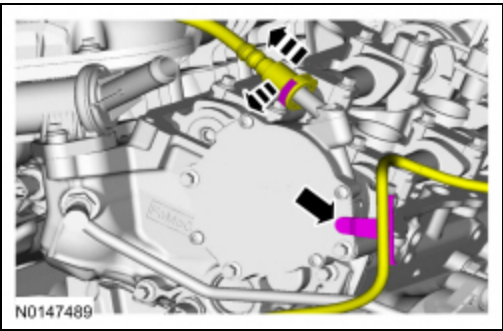

3. **NOTICE:** Do not use excessive force when removing the vacuum pump or the vacuum pump oil tube may be dislodged from the pump causing internal oil seal damage to the pump. If the oil tube becomes dislodged from the pump, a new vacuum pump must be installed.

NOTE: The upper/inboard vacuum pump bolt will remain in the vacuum pump housing when removing the vacuum pump.

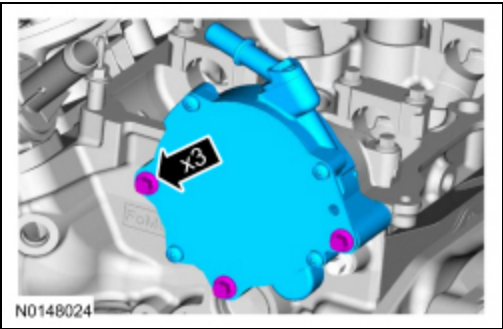


Installation

1. **NOTICE:** Do not use wire brushes, power abrasive discs or 3M® Roloc® Bristle Disk (2-in white, part number 07528) to clean the sealing surfaces of the engine block. These tools cause scratches and gouges that make leak paths. They also cause contamination that causes premature engine failure. Remove all traces of the gasket.

Make sure that the mating faces are clean and free of foreign material. Refer to: RTV Sealing Surface Cleaning and Preparation (303-00 Engine System - General Information, General Procedures). Section 303-00

2. **NOTICE:** Make sure the oil tube filter screen is free of contaminants prior to the installation of the pump or damage to components may occur.


Visual check. Install a new gasket as necessary.

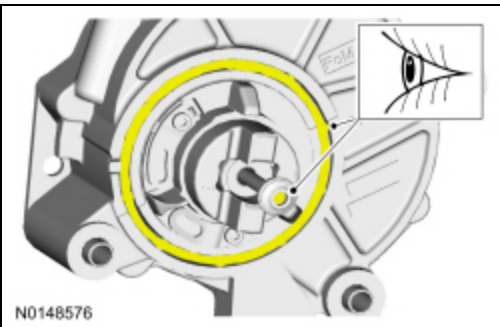

3. **NOTICE:** If the brake vacuum pump is not secured within 10 minutes of sealant application, the sealant must be removed and the sealing area cleaned with metal surface prep. Failure to follow this procedure can cause future oil leakage.

NOTE: Make sure the mating surfaces are clean and free of foreign material.


Apply a bead of the specified diameter from the specified tube.

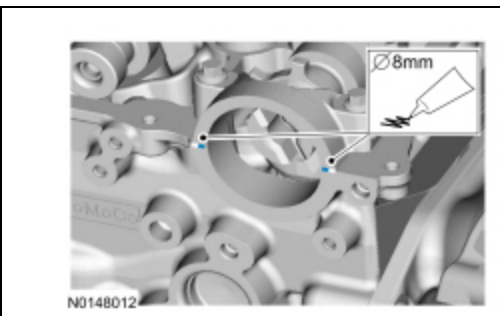

4. **NOTE:** Manually align the brake vacuum pump drive key with the camshaft slot before installation.

Visual check.

- Stage 1: Tighten in the sequence shown to 89 lb-in (10 Nm).
- Stage 2: Tighten an additional 45 degrees.

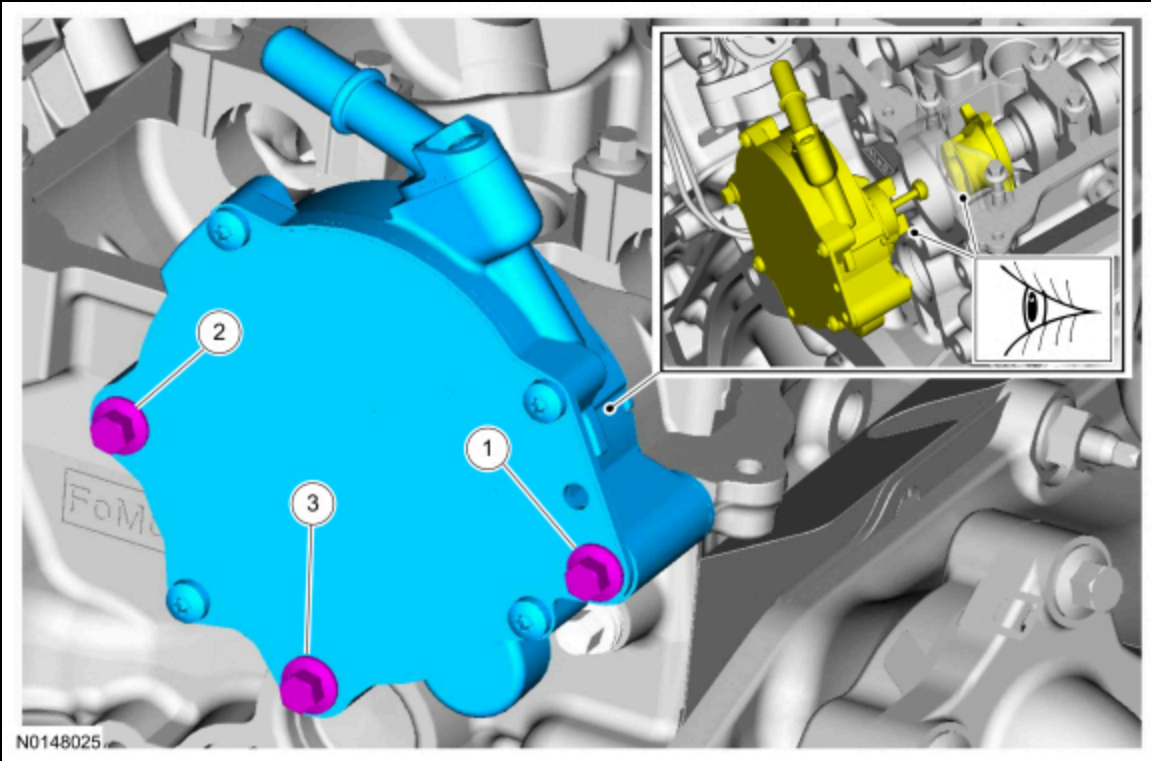

5.

