


Anti-Lock Brake System (ABS) Module

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2834-A	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool
--	---

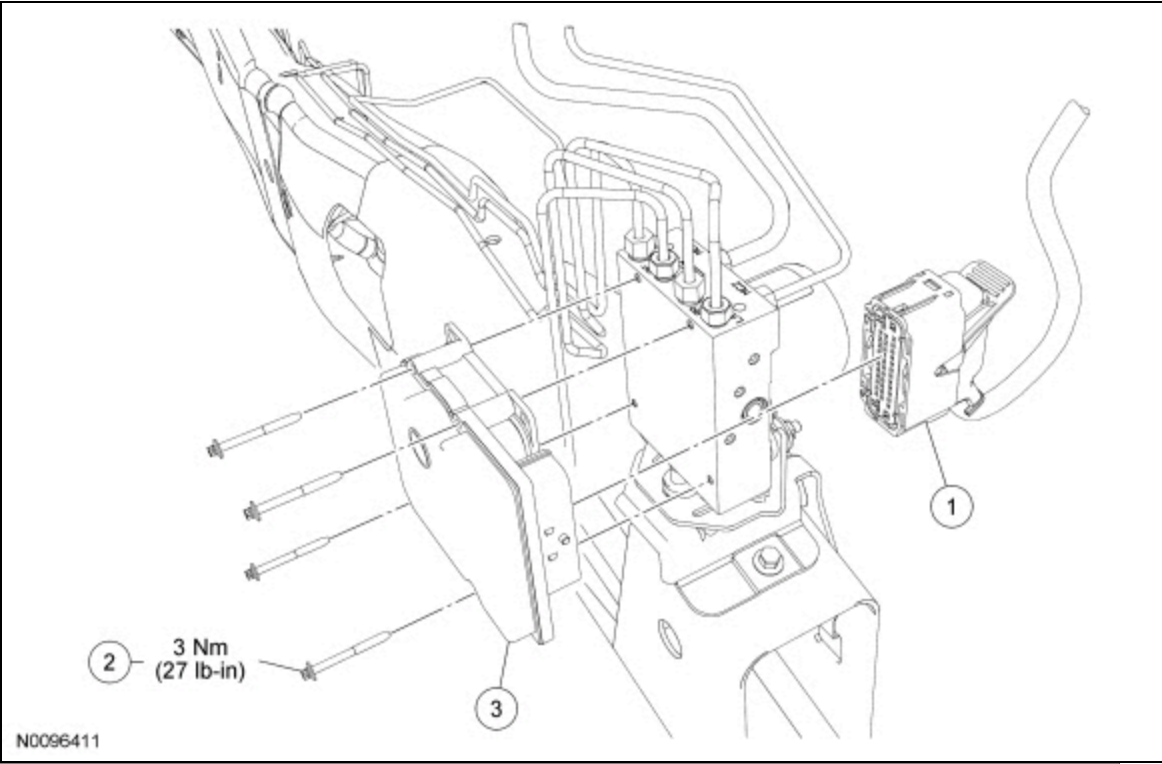

Item	Part Number	Description
1	—	ABS module electrical connector (part of 12A581)
2	2M101 2M101	ABS module screw (also part of 2C219) (4 required)
3	2C219 2C219	ABS module

Removal and Installation

- NOTICE:** Do not connect the wiring connector to the ABS module while it is separated from the HCU , doing so sets DTCs that cannot be cleared.
- NOTICE:** Electronic modules are sensitive to electrical charges. The ABS module can be damaged if exposed to these charges.
- NOTICE:** Do not swap ABS modules between vehicles. Brake fluid pressure sensor calibration varies depending on vehicle configuration. Swapping ABS modules between vehicles with different calibrations causes a DTC to set in the ABS module that cannot be cleared.

1. If a new ABS module is being installed, connect the scan tool and upload the module configuration information from the ABS module. For additional information on configuration, refer to Programmable Module Installation (PMI) in Section 418-01.
2. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
3. Disconnect the ABS module electrical connector.
4. **NOTICE: Pull the ABS module straight back until the coil packs and motor connector clear the Hydraulic Control Unit (HCU) or damage to the ABS module may result.**

Remove the 4 ABS module screws and the ABS module.

- To install, tighten to 3 Nm (27 lb-in).
5. To install, reverse the removal procedure.
 - When installing a new ABS module, it must be configured (using vehicle as-built data or module configuration information retrieved earlier in this procedure). For additional information on configuration, refer to **PMI** in Section 418-01.