


Steering Wheel Rotation Sensor

 [Ford Ecat Electronic Parts Catalog](#)

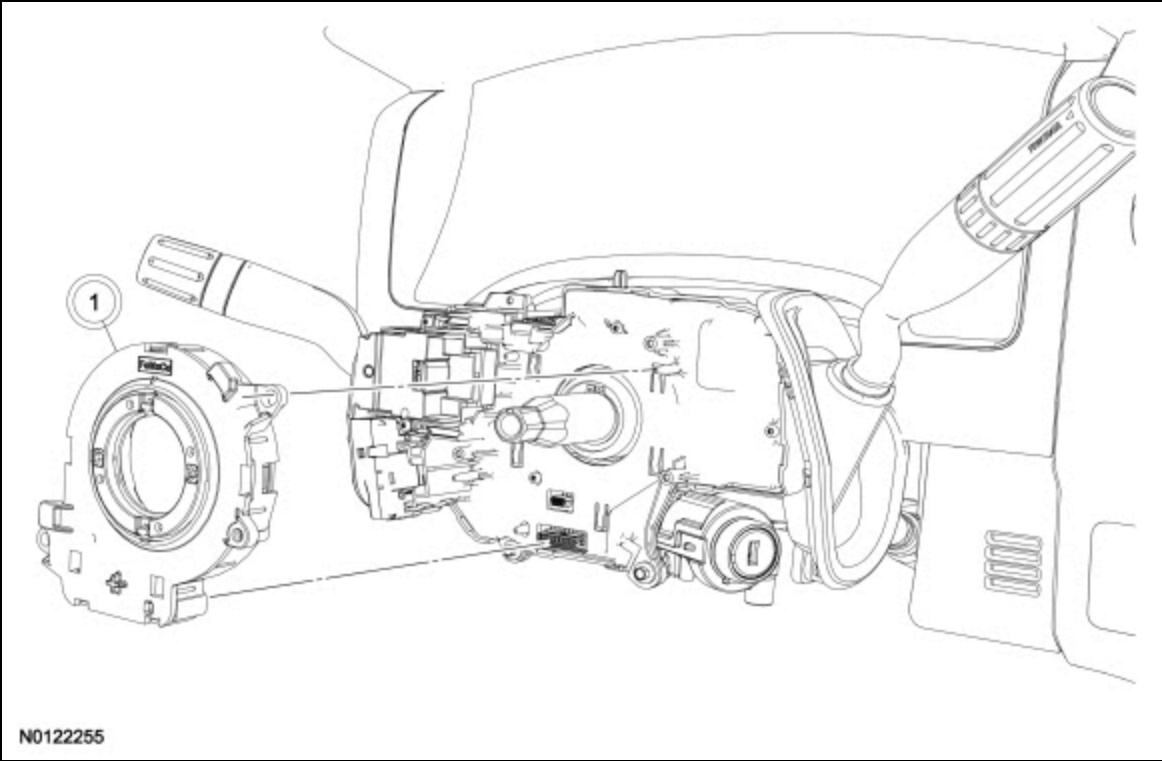

Item	Part Number	Description
1	3F8183F818	Steering wheel rotation sensor


Removal

NOTE: Only available on the 6.2L engine. For all other applications, the sensor is part of the Electronic Power Assist Steering (EPAS) and is not serviced separately.

1. Remove the clockspring. For additional information, refer to Section 501-20B.
2. Remove the steering wheel rotation sensor.

Installation

1. Align the arrow on the inner ring of the sensor to the notch on the sensor body.

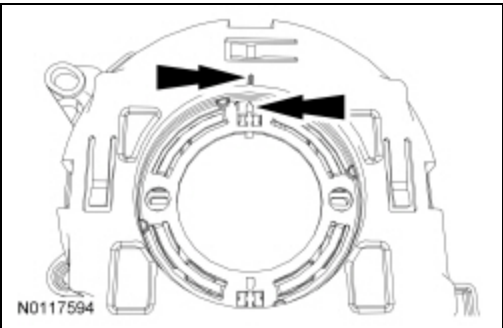

2. Position the sensor on the Steering Column Control Module (SCCM).
3. Install the clockspring. For additional information, refer to Section 501-20B.