


Wheel Speed Sensor Ring — Rear




Removal

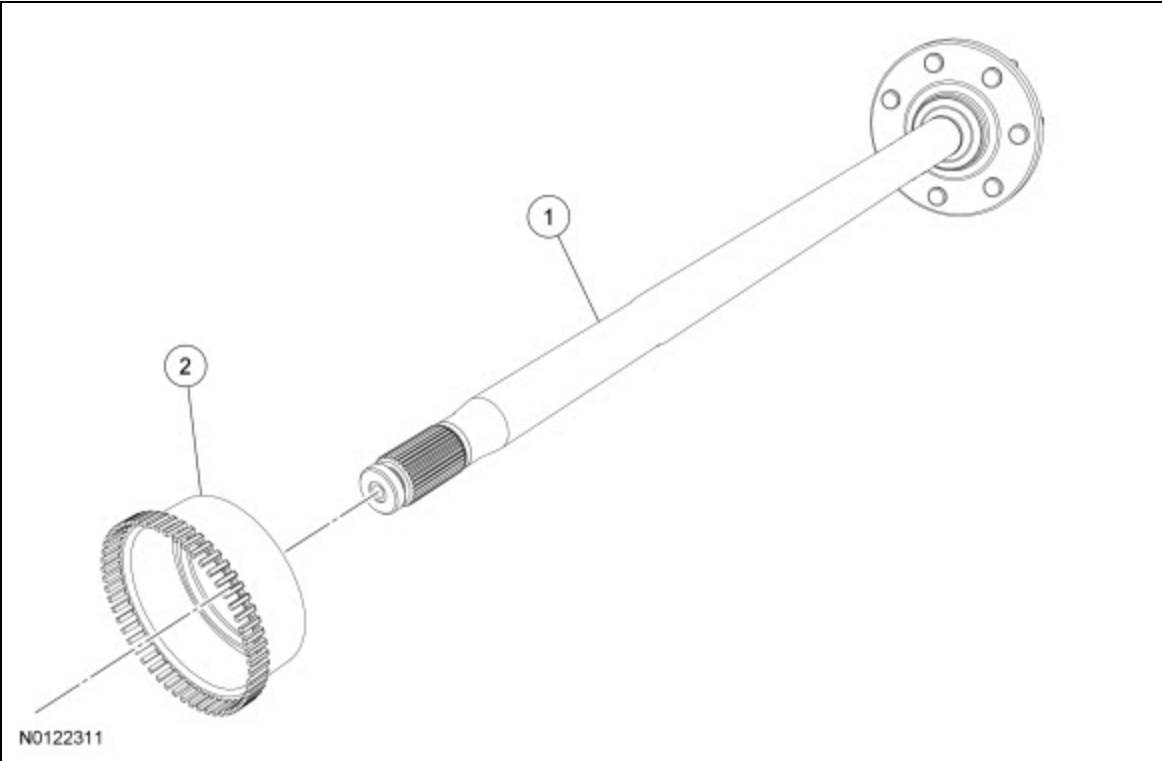

Item	Part Number	Description
1	42344234	Axle shaft
2	2C1892C189	Wheel speed sensor ring


1. Remove the rear axle shaft. For additional information, refer to Section 205-02A or Section 205-02B.
2. Using a suitable driver, remove the wheel speed sensor ring from the axle shaft and discard the ring.

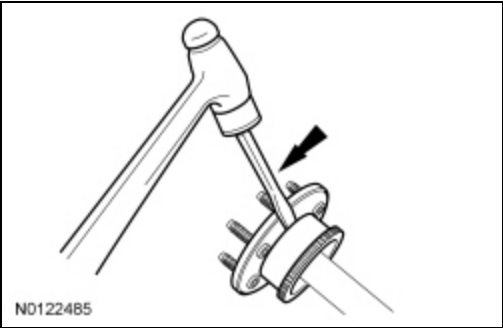

Installation

1. **NOTICE:** Do not apply any amount of force to the tooth area of the wheel speed sensor ring during installation, the sensor teeth are fragile and can be easily damaged. Apply force only to the inner lip area of the wheel speed sensor ring.

Using suitable adapters, press the wheel speed sensor ring onto the rear axle shaft.

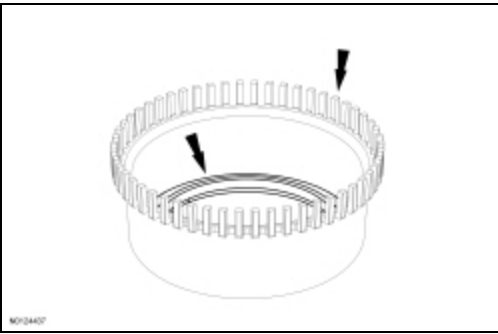

2. Install the rear axle shaft. For additional information, refer to Section 205-02A or Section 205-02B.