


Wheel Speed Sensor — Front

 [Ford Ecat Electronic Parts Catalog](#)

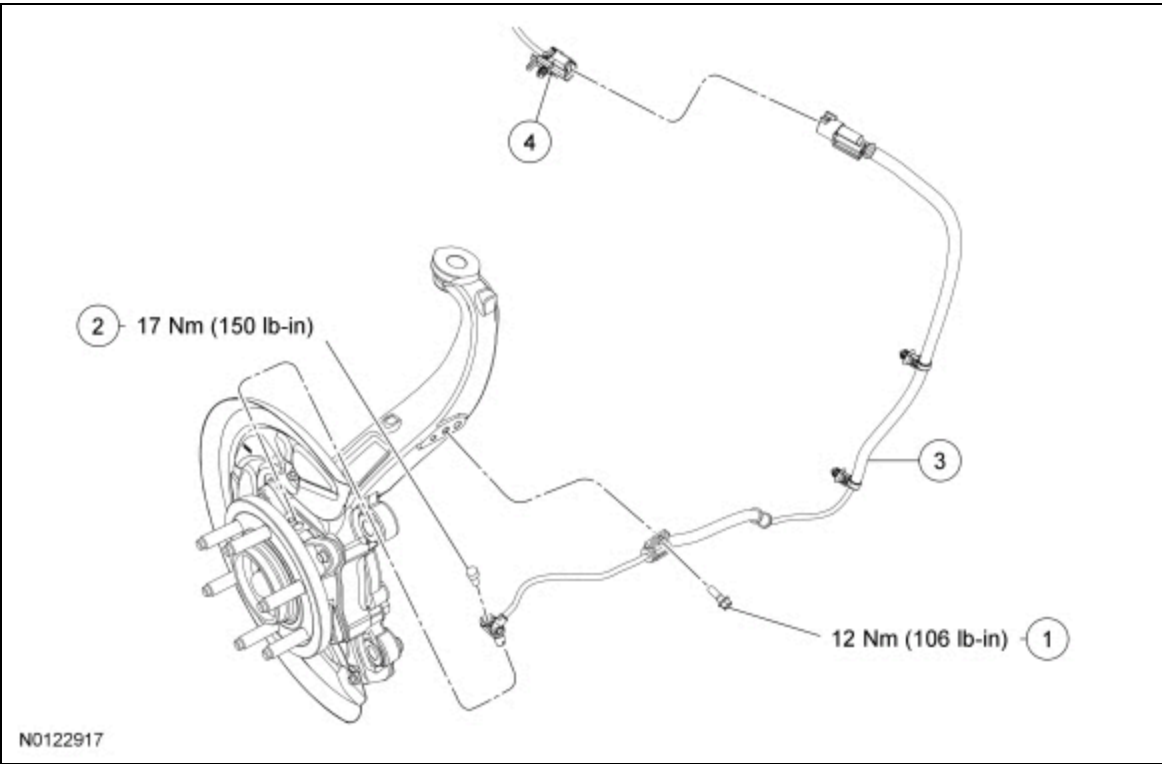

Item	Part Number	Description
1	W710279 W710279	Wheel speed sensor harness bolt
2	—	Wheel speed sensor bolt (part of 2C204)
3	2C204 2C204	Wheel speed sensor
4	—	Wheel speed sensor electrical connector (part of 14250)

Removal and Installation

1. Remove the brake disc. For additional information, refer to Section 206-03.
2. **NOTE:** The wheel speed sensor harness electrical connector is located in the engine compartment secured to the fender apron.

Disconnect the wheel speed sensor electrical connector.
3. Detach the 2 wheel speed sensor harness pushpin retainers.
4. Detach the wheel speed sensor harness retainer from the brake hose.
5. Remove the wheel speed sensor harness bolt.
 - To install, tighten to 12 Nm (106 lb-in).
6. Remove the wheel speed sensor bolt and the wheel speed sensor.
 - To install, tighten to 17 Nm (150 lb-in).

7. To install, reverse the removal procedure.