


Wheel Speed Sensor — Rear


 [Ford Ecat Electronic Parts Catalog](#)

Left Rear Wheel Speed Sensor

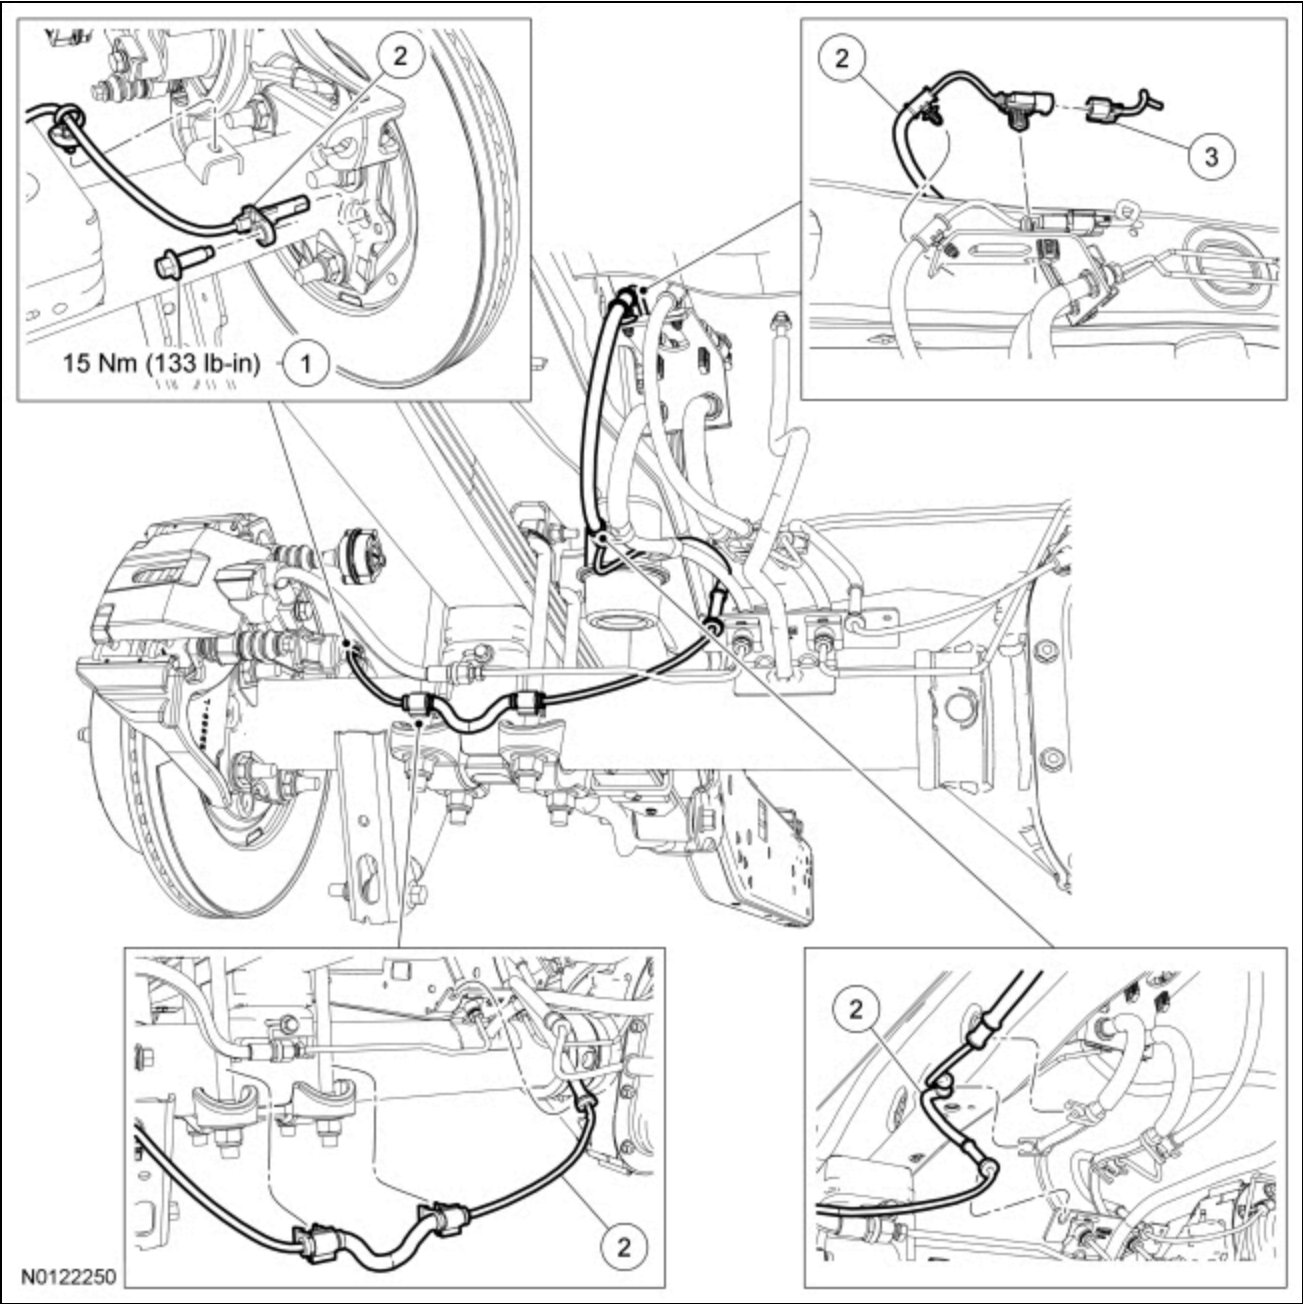

Item	Part Number	Description
1	W500223 W500223	Wheel speed sensor bolt
2	2C190 2C190	Wheel speed sensor
3	—	Wheel speed sensor electrical connector (part of 14405)

Right Rear Wheel Speed Sensor

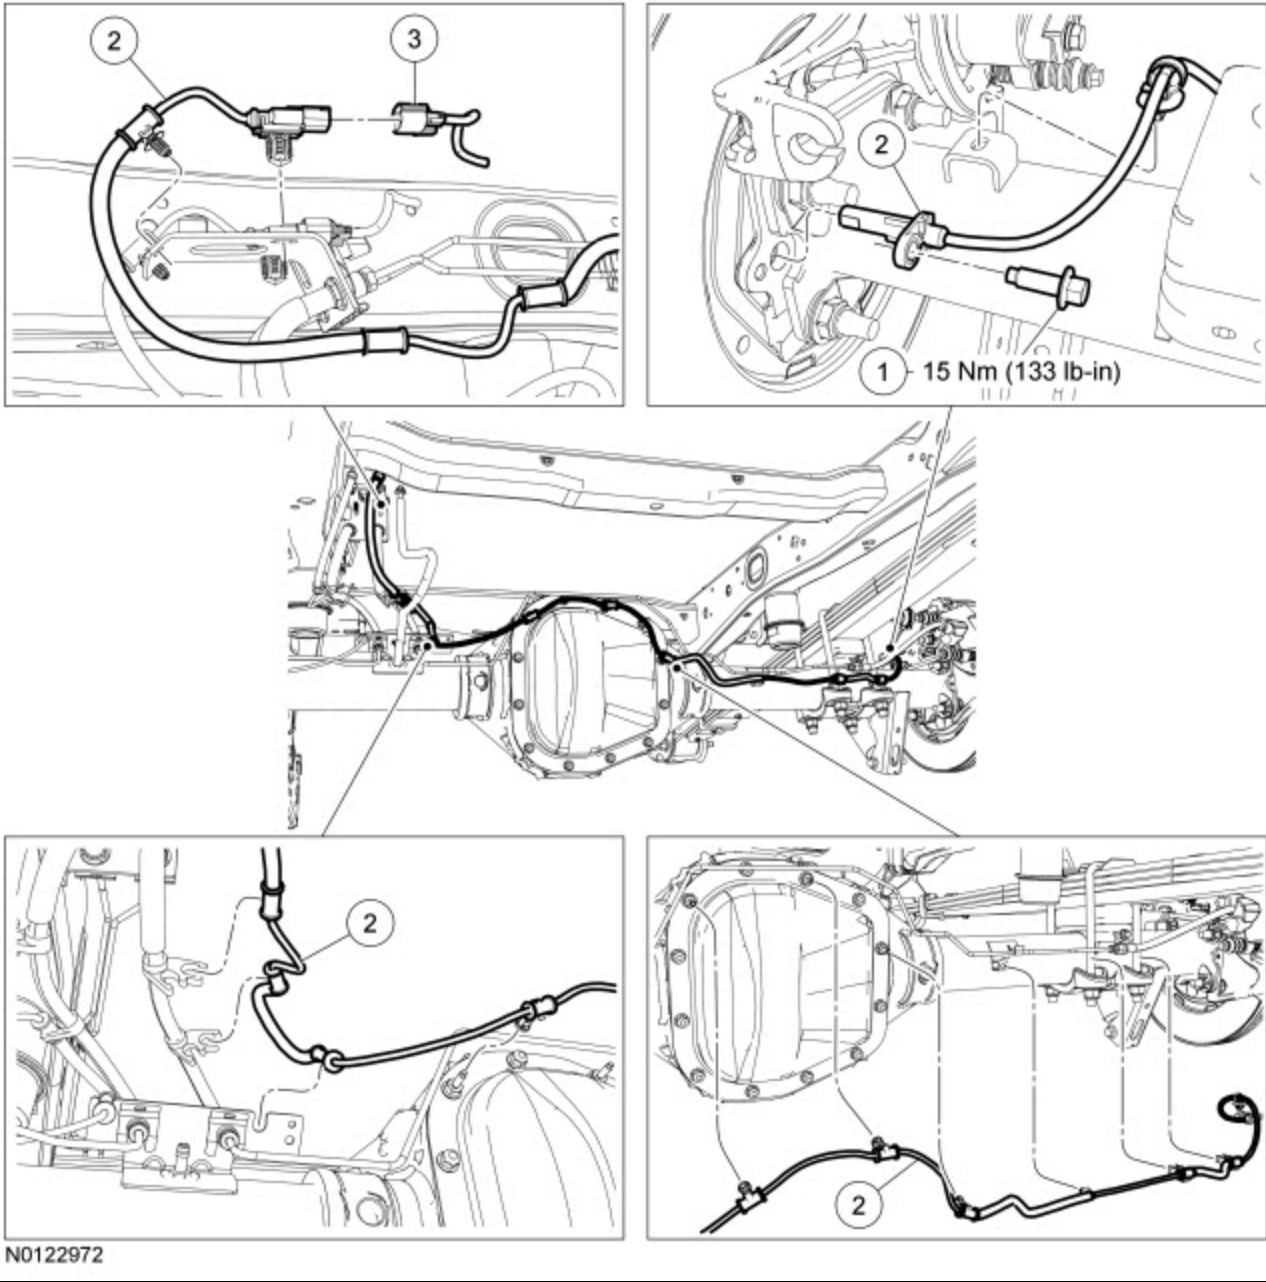

Item	Part Number	Description
1	W500223 W500223	Wheel speed sensor bolt
2	2C190 2C190	Wheel speed sensor
3	—	Wheel speed sensor electrical connector (part of 14405)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the wheel speed sensor electrical connector.
3. Detach the wheel speed sensor harness retainers and pushpin retainers.
4. Remove the wheel speed sensor bolt and the wheel speed sensor.
 - To install, tighten to 15 Nm (133 lb-in).
5. To install, reverse the removal procedure.