

Steering Gear to Fluid Cooler Return Hose — From Gear




Removal

NOTICE: While repairing the power steering system, care should be taken to prevent the entry of foreign material or failure of the power steering components may result.


NOTE: Service the return hose from the gear with the return hose to the cooler.

NOTE: Removal steps in this procedure may include installation details.


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
3. Discard the specified component. Follow local disposal regulations.
 - To install, tighten to 23 Nm (17 lb-ft).

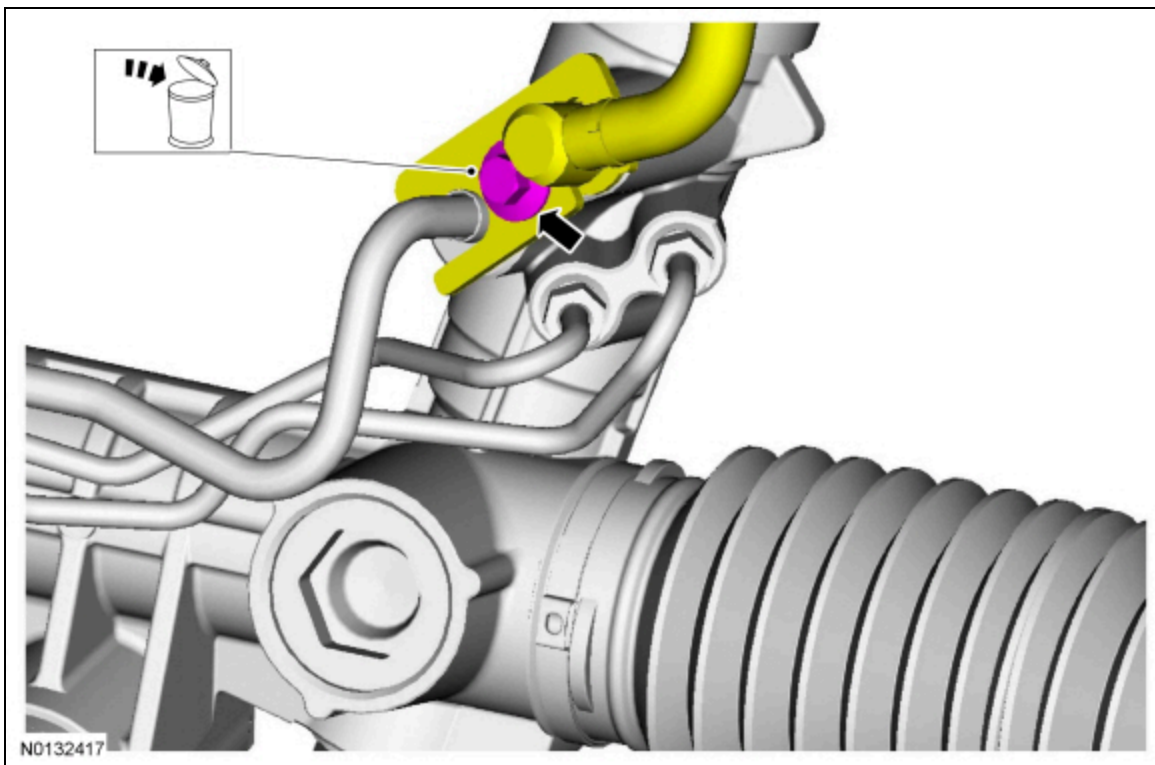

4. On both sides.
 - To install, tighten to 15 Nm (133 lb-in).

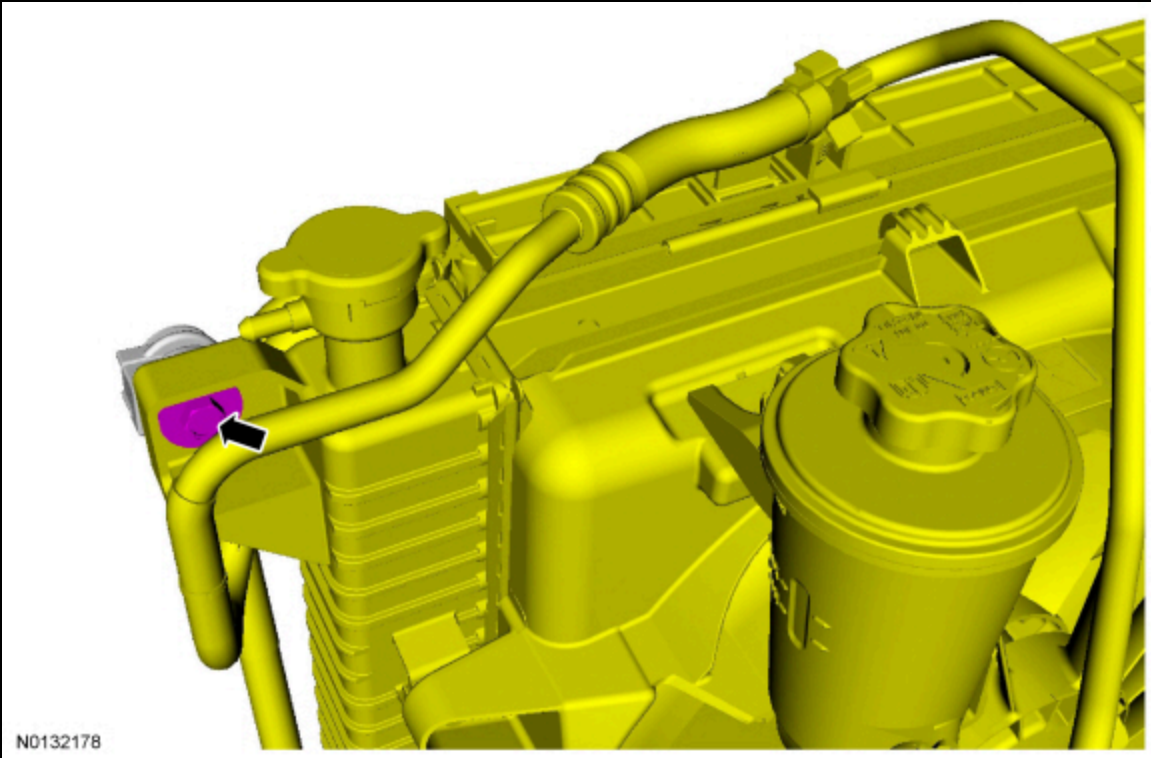

5.

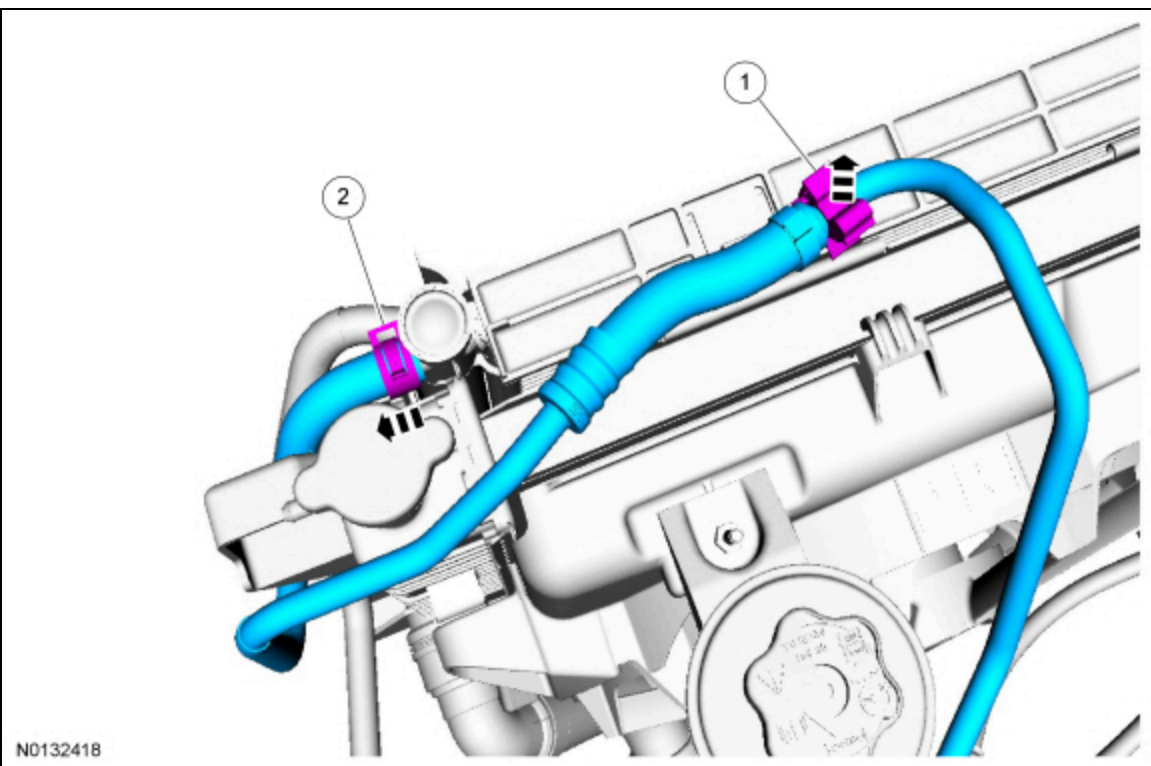

Installation

1. To install, reverse the removal procedure.
2. Fill the power steering system. For additional information, refer to Section 211-00B.