

Steering Gear to Fluid Cooler Return Hose — To Cooler




Removal


NOTICE: While repairing the power steering system, care should be taken to prevent the entry of foreign material or failure of the power steering components may result.

NOTE: Removal steps in this procedure may include installation details.

1. On both sides.
 - To install, tighten to 15 Nm (133 lb-in).

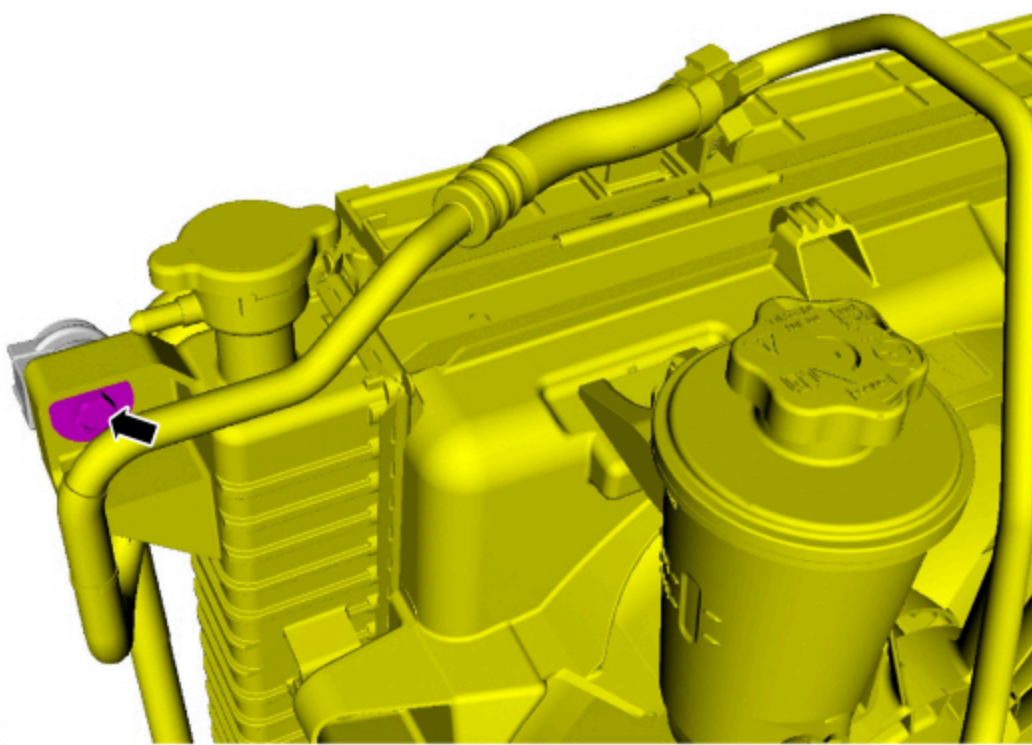


2. Discard the specified component. Follow local disposal regulations.

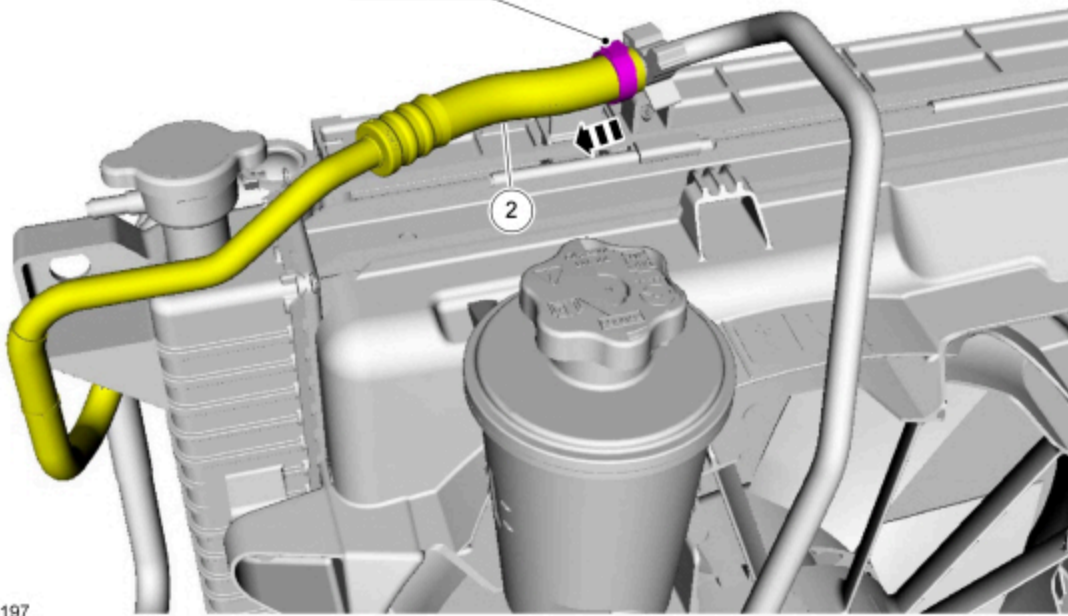

N0132197

3.

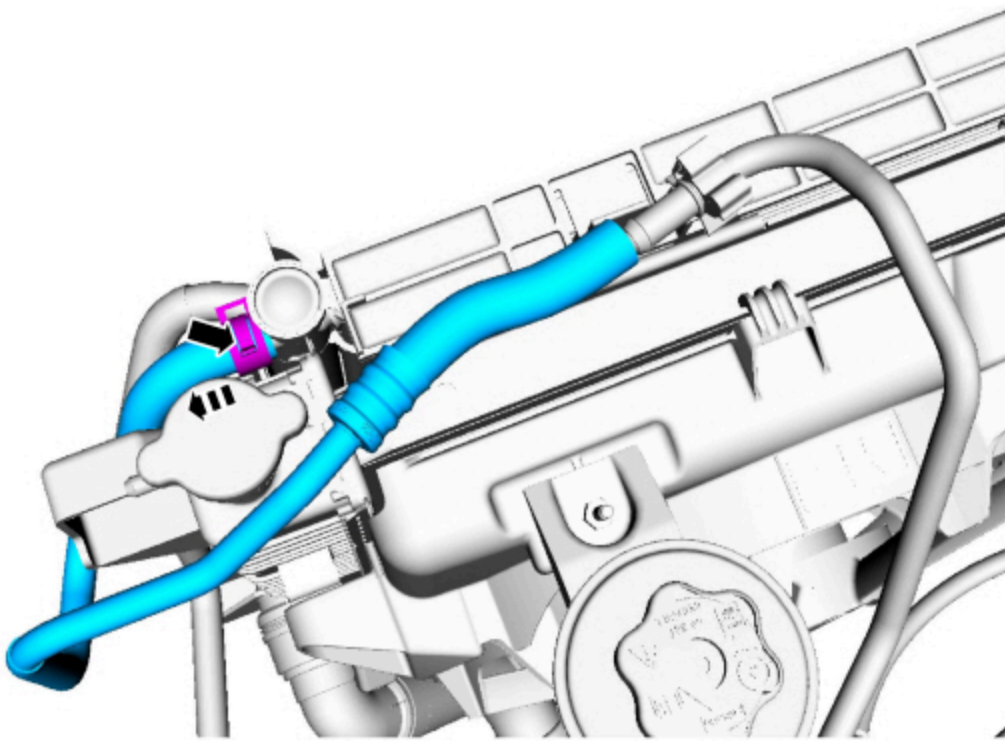

N0132180

Installation

1. To install, reverse the removal procedure.
2. Fill the power steering system. For additional information, refer to Section 211-00B.