


Steering Column Motor — Tilt


 [Ford Ecat Electronic Parts Catalog](#)

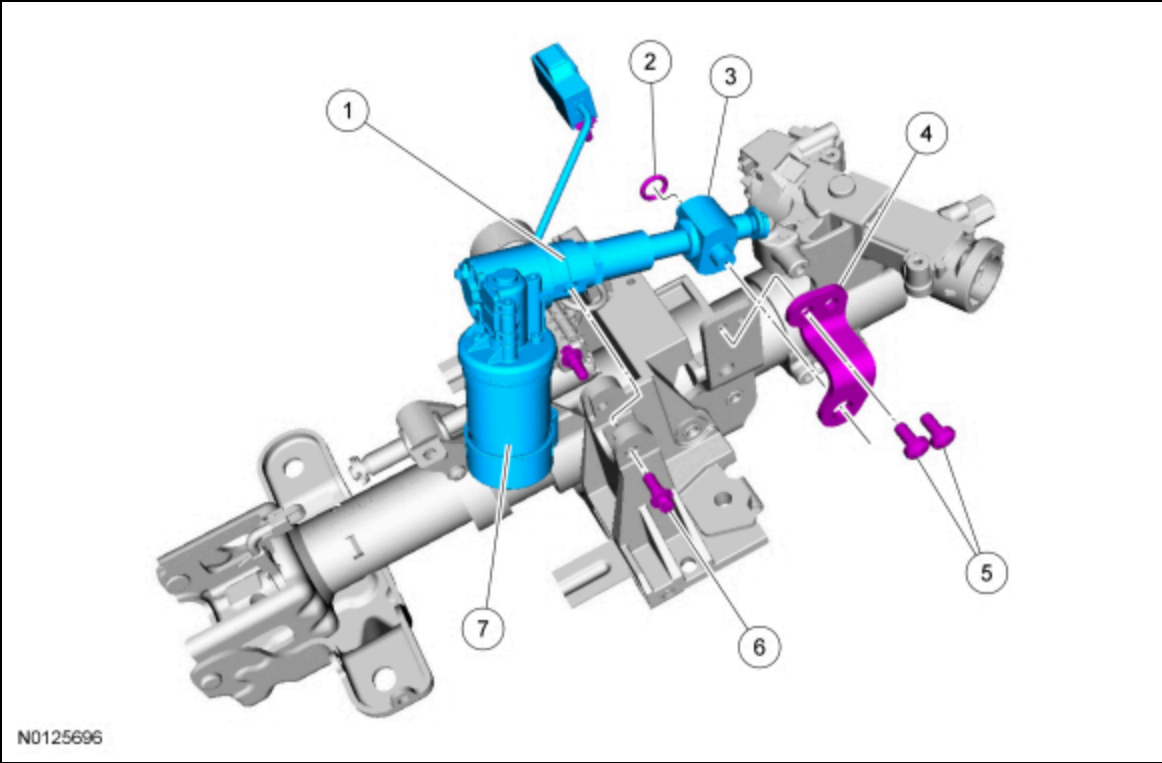


Item	Part Number	Description
1	—	Leadscrew housing (part of 3F797)
2	—	O-ring (part of 3F797)
3	—	Trunion nut (part of 3F797)
4	—	Trunion nut capture bracket (part of 3C529)
5	—	Trunion nut capture bracket screws (2 required) (part of 3C529)
6	—	Steering column motor screws (2 required) (part of 3C529)
7	3F797 3F797	Steering column motor (tilt)

Removal


1. Remove the steering column. For additional information, refer to Steering Column in this section.
2. Place the steering column upside down on a workbench.
3. Detach the electrical connector pin-type retainer from the steering column.

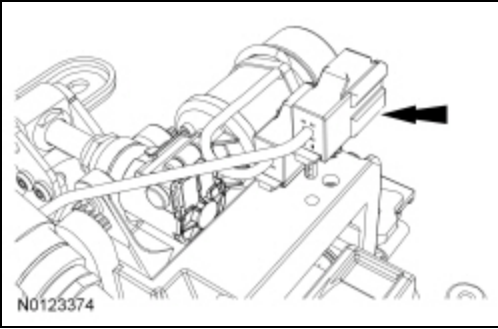

4. Remove the 2 steering column motor screws.

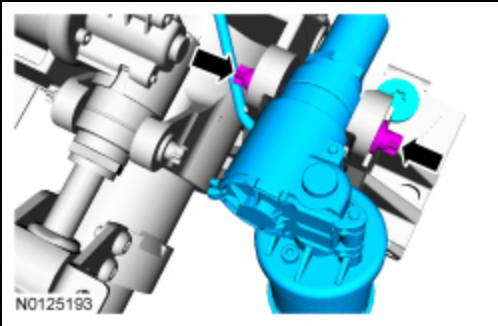


5. Remove the 2 steering column motor trunnion nut capture bracket screws and the trunnion nut capture bracket.

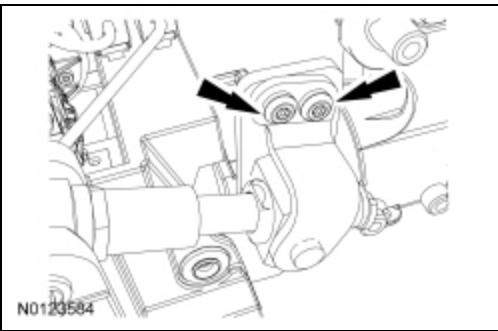

6. Remove the steering column motor.

Installation

1. Apply grease (supplied with the motor) to the trunnion nut axles and the steering column motor leadscrew housing holes.

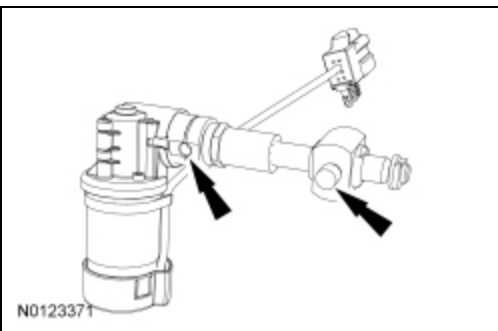


2. **NOTE:** Install the trunnion nut with the axle O-ring facing inward towards the column.


NOTE: If necessary, make small alignment adjustments by pivoting the tilt bracket.

Rotate the pinion nut until the correct length is achieved to align the leadscrew housing with the threaded holes in the support arm.


- Loosely install the 2 steering column motor screws.

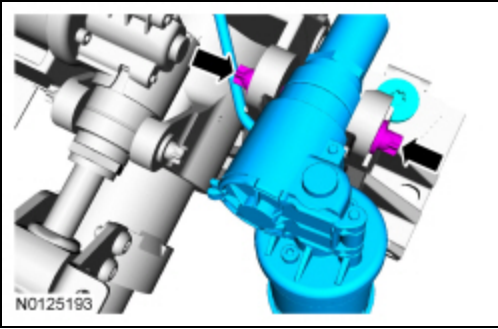

3. Position the trunnion nut capture bracket and loosely install the 2 steering column motor trunnion nut capture bracket screws.

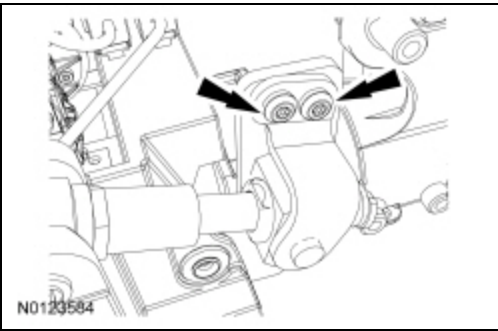

4. Tighten the 2 steering column motor screws to 6 Nm (53 lb-in).
5. Tighten the 2 steering column motor trunnion nut capture bracket screws to 7 Nm (62 lb-in).
6. Attach the electrical connector pin-type retainer to the steering column.

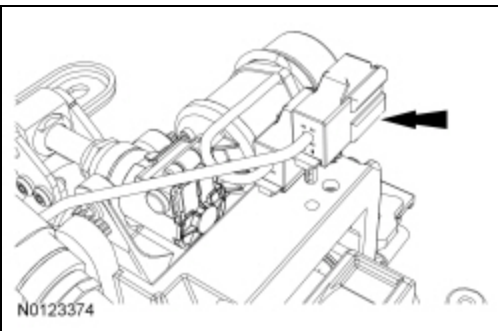

7. Install the steering column. For additional information, refer to Steering Column in this section.