


Ignition Switch



NOTE: Manual column shown, power column similar.

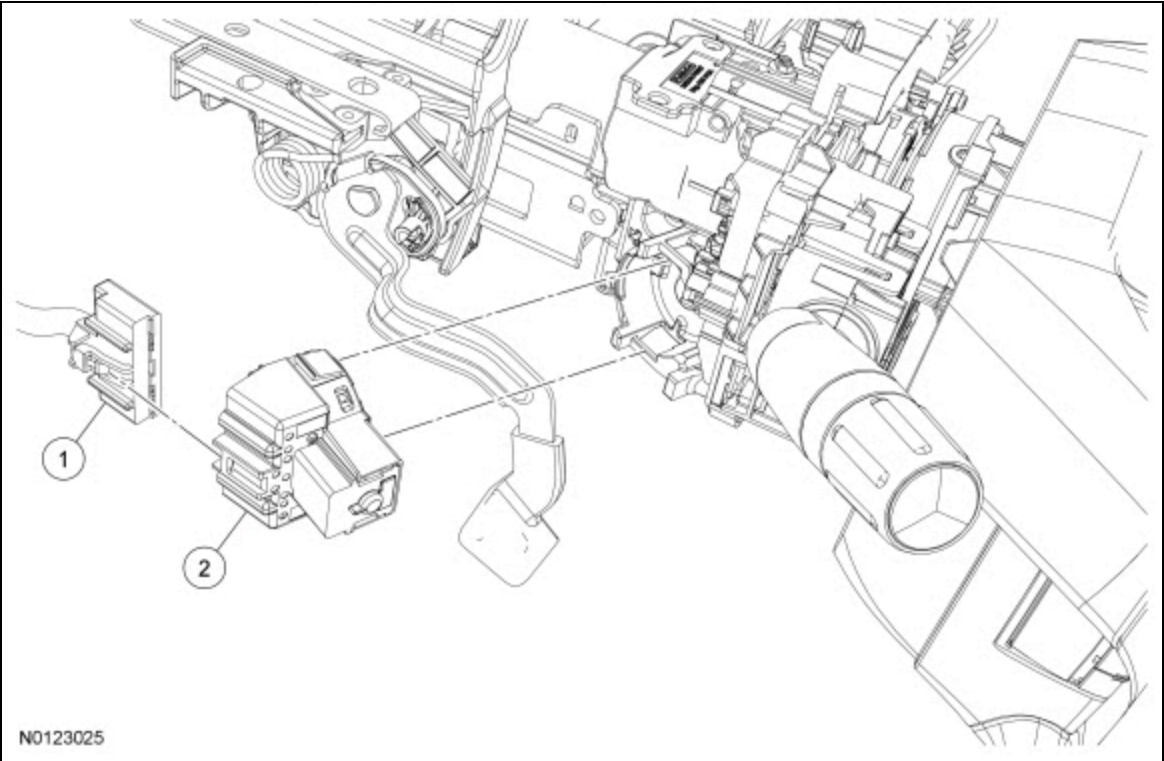

Item	Part Number	Description
1	—	Ignition switch electrical connector (part of 14401)
2	11572 11572	Ignition switch

Removal and Installation

Manual and Power Columns


1. Remove the steering column shrouds. For additional information, refer to Section 211-04.
2. Disconnect the ignition switch electrical connector.

Manual Columns

3. Place the steering column tilt lever in the unlocked position.

Manual and Power Columns

4. Press the 2 locking tabs and remove the ignition switch.

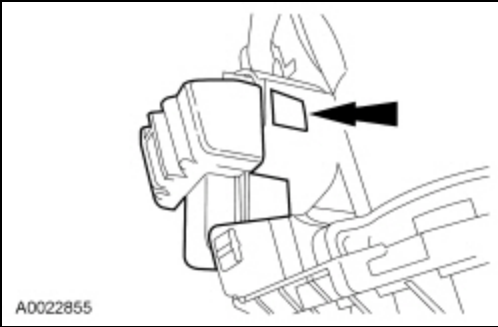

5. To install, reverse the removal procedure.