


Steering Wheel Switch

 [Ford Ecat Electronic Parts Catalog](#)

High Series


NOTE: RH shown, LH similar

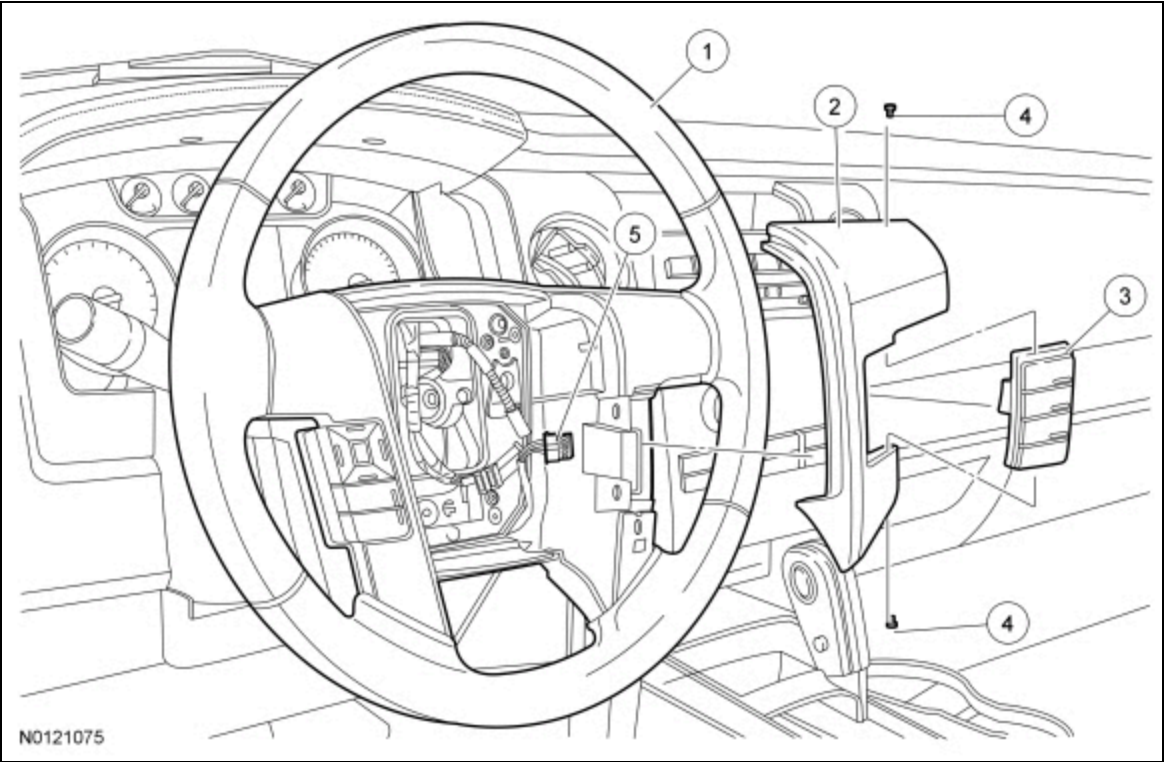

Item	Part Number	Description
1	3600 3600	Steering wheel
2	—	Steering wheel control switch bezel (part of 3600)
3	9C888 9C888	RH steering wheel switch
4	—	Steering wheel switch screw (2 required) (part of 3600)
5	—	Steering wheel controls electrical connector (part of 3600)

Low Series

NOTE: RH shown, LH similar

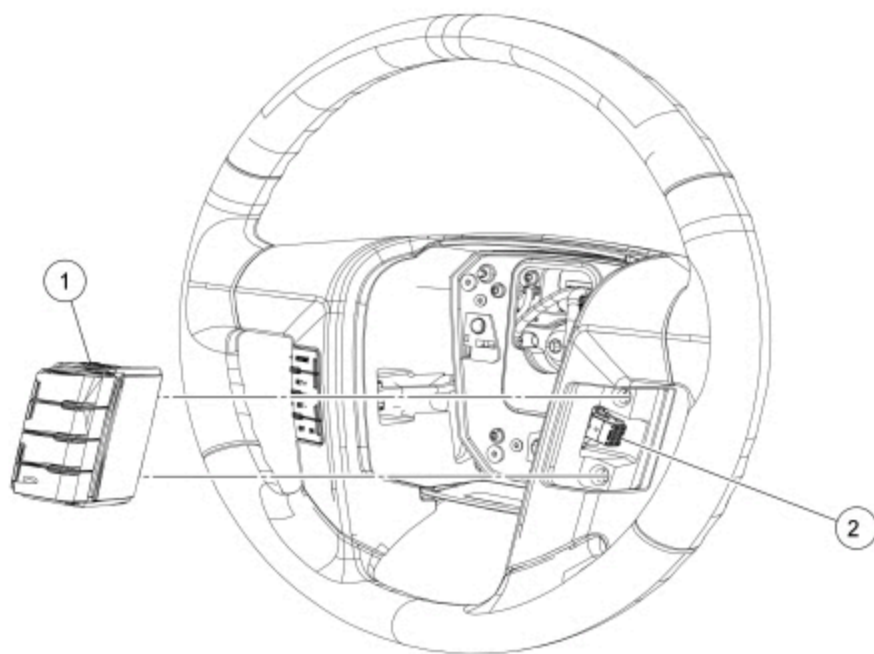

N0121076

Item	Part Number	Description
1	9C8889C888	RH steering wheel switch
2	—	Electrical connector (part of 3600)

Removal and Installation

High and Low Series

1. Remove the driver air bag module. For additional information, refer to Section 501-20B.

Low Series

2. Using a suitable flat-bladed tool, detach the steering wheel switch from the steering wheel.
 - Disconnect the electrical connector and remove the switch.

High Series

3. Remove the steering wheel switch bezel.
 - Disconnect the steering wheel switch electrical connector.
4. Remove the 2 screws and the steering wheel switch.

High and Low Series

5. To install, reverse the removal procedure.