


Deformed (enlarged) female terminals

1 = Enlarged

2 = Normal

Any probe entering the terminal may enlarge the contact spring opening creating an intermittent signal.

Insert the correct mating terminal (Location A) from the service kit and feel for a loose fit.

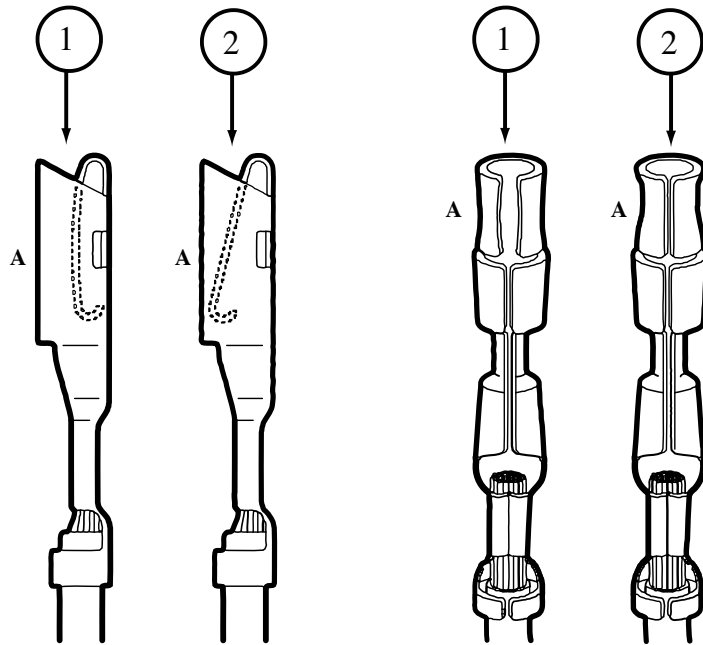

Electrical short inside the harness

1 = Solder coated wire to ground

2 = Harness protective tape

3 = Intermittent short

Solder coated wire pierced through the insulation of another circuit.

4 = Grounding foil

