


Ground Distribution

Cell 10 "Grounds" contains the schematic that shows the complete details for each ground connection or main ground splice. This is useful in diagnosing a problem affecting several components at once (poor ground connection or ground splice). All details (wires, splices, connectors) between the ground point and the component are shown. These ground connection details are shown here in order to keep the individual cell schematics as uncluttered as possible.

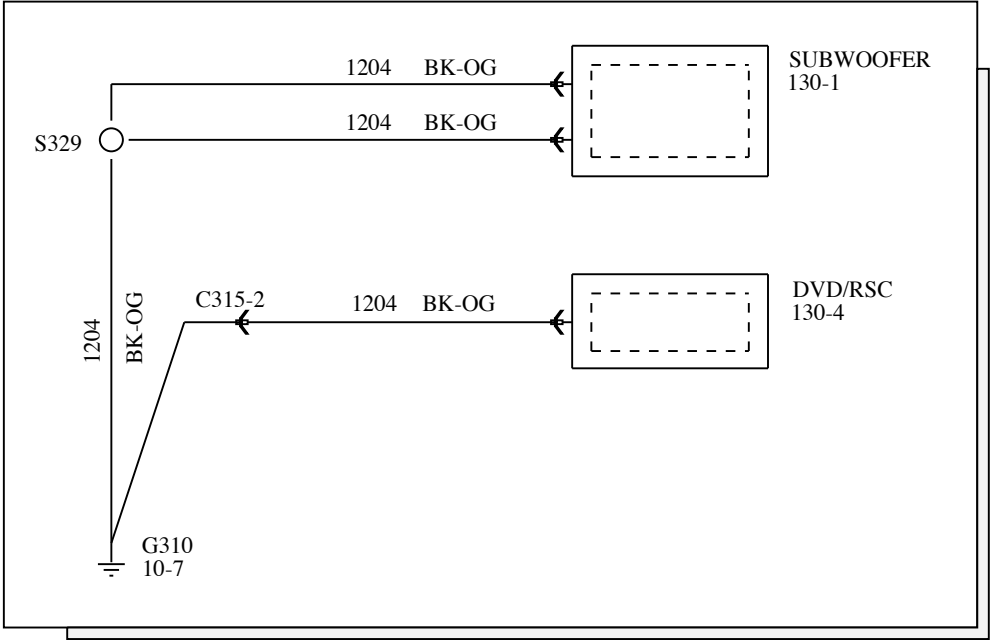

Component and Connector Information

Cell 150 "Connector Views" show the views of the pins and/or cavities of all connectors. The pin and cavity sides are shown separately as if the connector were disconnected. The color of the connector housing is indicated next to the connector number when available. The harness causal number is located above the connector view and below the connector number. The circuit function charts are located below each connector. The wiring harness designations are listed in cell 152 "Component Location Charts."


Cell 151 "Component Location Views" shows the components and their connecting wires as they can be found on the vehicle.

Cell 152 "Component Location Charts" helps the user find where the various items depicted on the schematic can physically be found on the vehicle. A brief written description of the location is given, along with a reference to the component location views.

C904 (GY)

14290

REAR DOME/MAP LAMP(13M614)

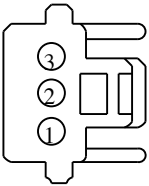

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	53 (BK-LB)	20	Courtesy lamp switch to courtesy lamp	
2	57 (BK)	20	Ground circuit	
3	705 (LG-OG)	20	Battery saver lamp feed	

