


Hot in Start or Run

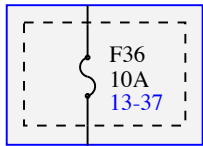

BODY
CONTROL
MODULE (BCM)
11-3



Warning
Do not attempt to diagnose or troubleshoot
Supplemental Restraint System circuitry without
consulting the Workshop Manual. Improper
troubleshooting could cause the supplemental
restraints to deploy inadvertently,
causing injury.

9 C2280B

S242 CBP36 BU-BN POWER DISTRIBUTION / BCM
13-37

6 C238

CBP36 BU-BN

13 C312

1 CBX02 BN-RD

VDB04 WH-BU

VDB05 WH

MODULE
COMMUNICATIONS
NETWORK
14-3
14-4

18 C3159

RUN/START

HS CAN +

HS CAN -

OCCUPANT
CLASSIFICATION
SYSTEM
MODULE (OCSM)
151-39

PWR

RETURN

SIG

C3159

CR153 GN-WH

C3330

RR153 GY-BU

VR226 YE-GY

OCS WEIGHT
SENSOR
BOLT 3
151-39

PWR

RETURN

SIG

C3159

CR154 VT-OG

C3331

RR154 VT-WH

VR227 VT-GN

OCS WEIGHT
SENSOR
BOLT 4
151-39

GND

14 C3159

GD901 BK

S351

GD901 BK

C312 - 5

GD174 BK-WH

Super Cab

S321

G300
10-17

