




Warning
Do not attempt to diagnose or troubleshoot Supplemental Restraint System circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the supplemental restraints to deploy inadvertently, causing injury.

RESTRAINTS
CONTROL
MODULE (RCM)
151-26
151-27
151-28

SAFETY BELT
RETRACTOR
PRETENSIONER,
DRIVER
151-26
151-28
151-44

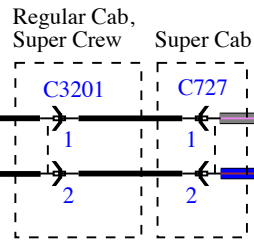


if equipped
Super Cab

CR146 GY-VT
RR146 BU-BN

CR146 GY-VT C310B
RR146 BU-BN

DRIV_LOAD_LIMITER_FEED
DRIV_LOAD_LIMITER_RTN

SAFETY BELT
BUCKLE SWITCH,
DRIVER
151-36



CR120 BU-OG

C311

Not used

RR120 BN-GN

C312

Not used


CR201 GN-BU

C313

CR201 GN-BU

DRIV_BUCKLE_SW

SEAT POSITION
SENSOR,
DRIVER
151-36



RR137 BU-GY C356

VR215 YE-VT

C356

VR215 YE-VT

DRIV_TRACK_POS

RR137 BU-GY
S353

RR137 BU-GY
C311

GD174 BK-WH
G300 10-17

