



Warning
Do not attempt to diagnose or troubleshoot
Supplemental Restraint System circuitry without
consulting the Workshop Manual. Improper
troubleshooting could cause the supplemental
restraints to deploy inadvertently,
causing injury.

RESTRAINTS
CONTROL
MODULE (RCM)
151-26
151-27
151-28

DRVR_SIDE_AIR_FEED

DRVR_SIDE_AIR_RTN

PASS_SIDE_AIR_FEED


PASS_SIDE_AIR_RTN

DRVR_CURTAIN_FEED


DRVR_CURTAIN_RTN

PASS_CURTAIN_FEED


PASS_CURTAIN_RTN

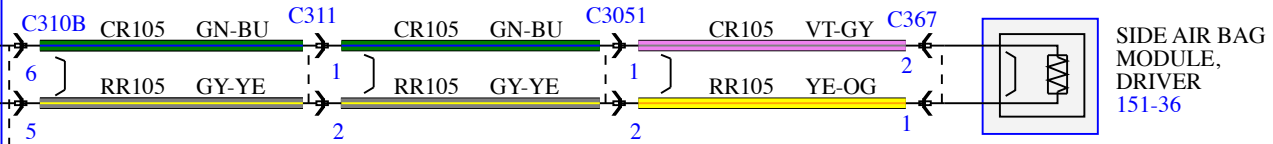


SIDE AIR BAG
MODULE,
DRIVER
151-36

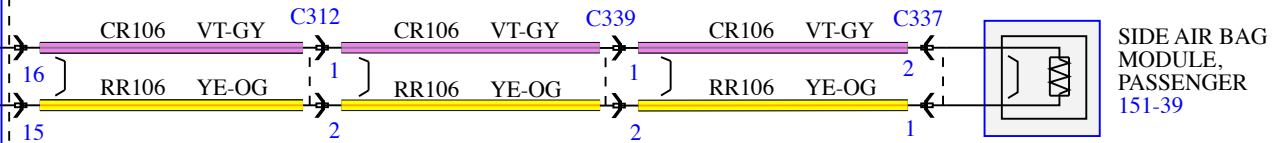

SIDE AIR BAG
MODULE,
PASSENGER
151-39

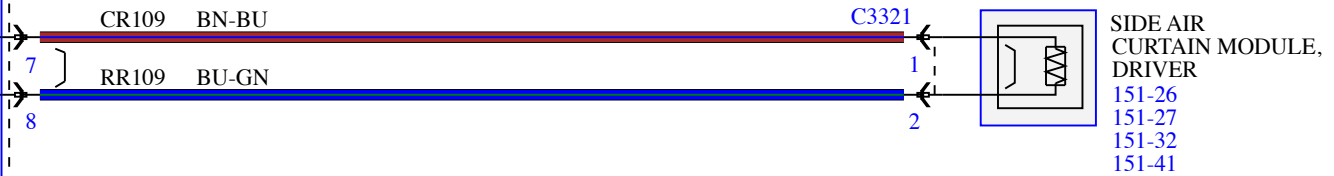

SIDE AIR
CURTAIN MODULE,
DRIVER
151-26
151-27
151-32
151-41

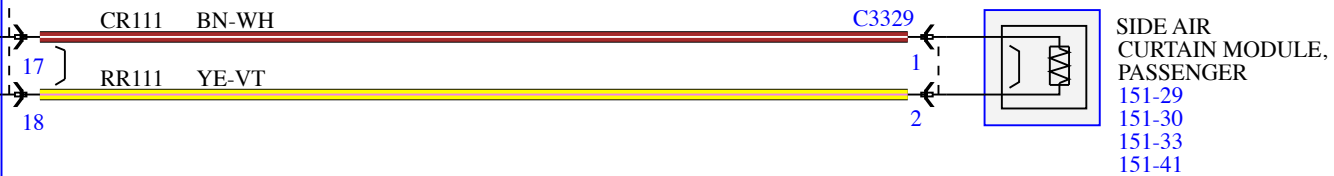

SIDE AIR
CURTAIN MODULE,
PASSENGER
151-29
151-30
151-33
151-41

