

Hydraulic System



Pump Assembly and Transmission Fluid Filter

This transmission has a gear type pump that supplies transmission fluid pressure to the hydraulic system.


The inner (drive) gear is turned by the torque converter hub.

The transmission fluid pump has the following parts:

- Pump body, with inner (drive) and outer (driven) gears
- Centering plate
- Intermediate plate
- Stator shaft

The transmission fluid pump draws transmission fluid from the sump area, formed by the transmission fluid pan, through the transmission fluid filter, which is installed into the intermediate plate portion of the pump assembly and sealed by a rubber seal. A magnet attached to the transmission fluid pan collects any metallic material in the transmission fluid.

Pump Assembly and Transmission Fluid Filter Components

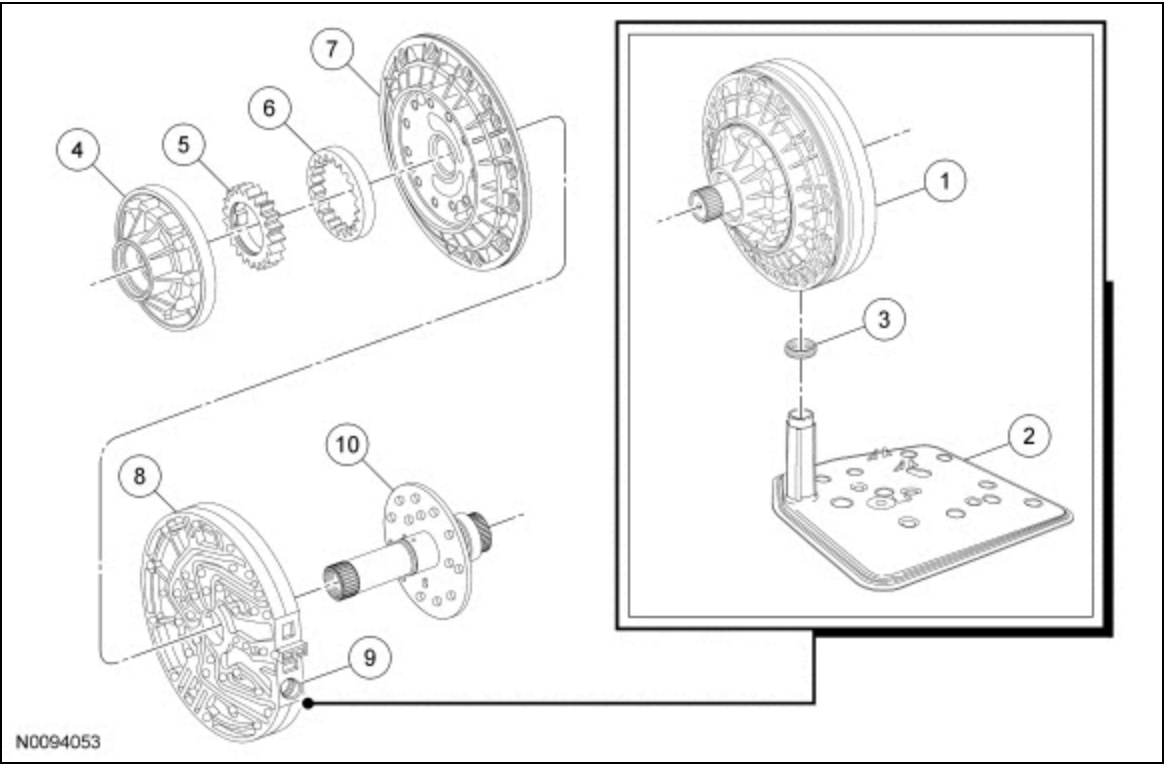

Item	Part Number	Description
1	7A1037A103	Transmission fluid pump assembly
2	7A0987A098	Transmission fluid filter
3	—	Transmission fluid filter seal (part of 7A098)
4	—	Transmission fluid pump body (part of 7A103)
5	—	Inner (drive) gear (part of 7A103)

6	—	Outer (driven) gear (part of 7A103)
7	—	Centering plate (part of 7A103)
8	—	Intermediate plate (part of 7A103)
9	—	Filter suction port
10	—	Stator shaft (part of 7A103)


Transmission Fluid Level Indicator

A removable dipstick-type fluid level indicator is located on the right front area of the transmission case. It is held in by an external fluid fill plug. The transmission fluid level indicator is removed with the transmission fluid fill plug. The transmission fluid level indicator is removed from the fill plug to check the transmission fluid level.

The transmission fluid level is correctly checked when the transmission is at normal operating temperature, 89°C-102°C (193°F-215°F), and the vehicle is on a level surface.

The correct transmission fluid level is at the upper level of the crosshatch marks on the transmission fluid level indicator.

Transmission Fluid Level Indicator

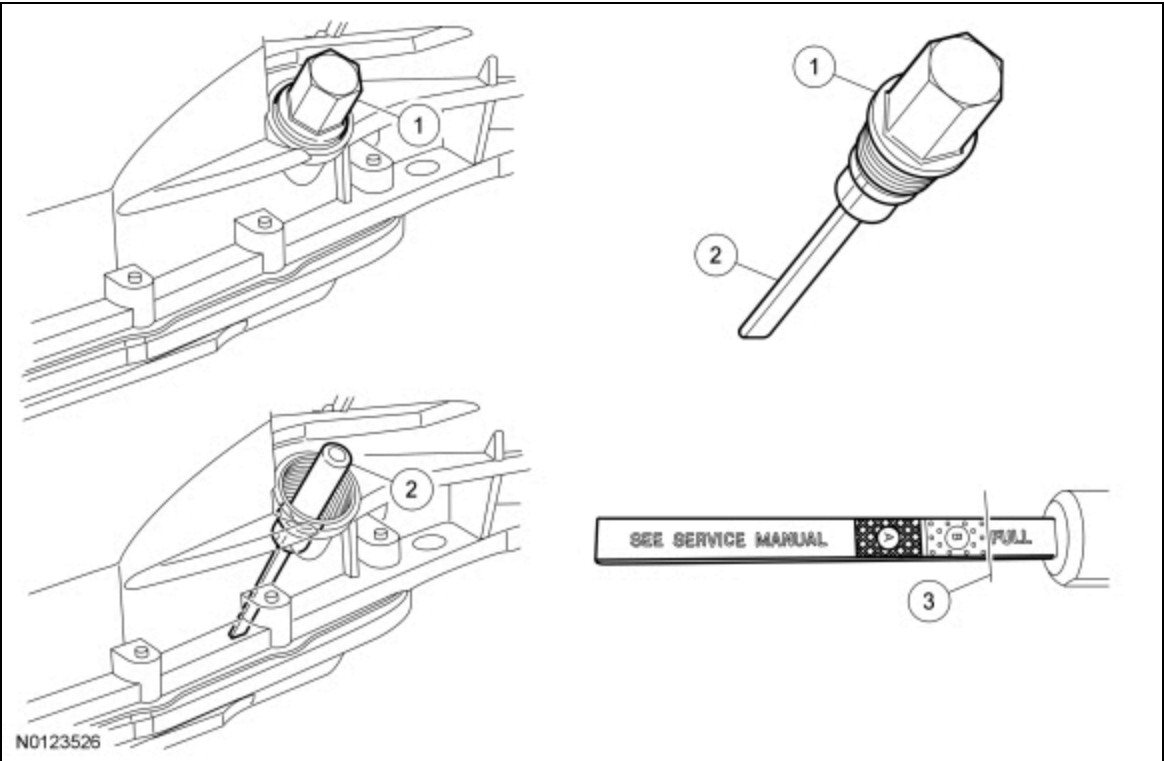

Item	Part Number	Description
1	—	Transmission fluid fill plug
2	7A0107A010	Transmission fluid level indicator
3	—	Transmission fluid level indicator FULL line


Main Control Assembly




The hydraulic system of this transmission includes the fluid pump, a main control assembly and fluid passages in the transmission case and center support to apply the clutches.

The main control assembly has an upper valve body assembly, a separator plate and a lower valve body assembly. The lower valve body assembly has 7 solenoids to control the valves in the main control.

The Turbine Shaft Speed (TSS) , Output Shaft Speed (OSS) , Transmission Range (TR) and Transmission Fluid Temperature (TFT) sensors are all part of the main control assembly leadframe.

Main Control Assembly

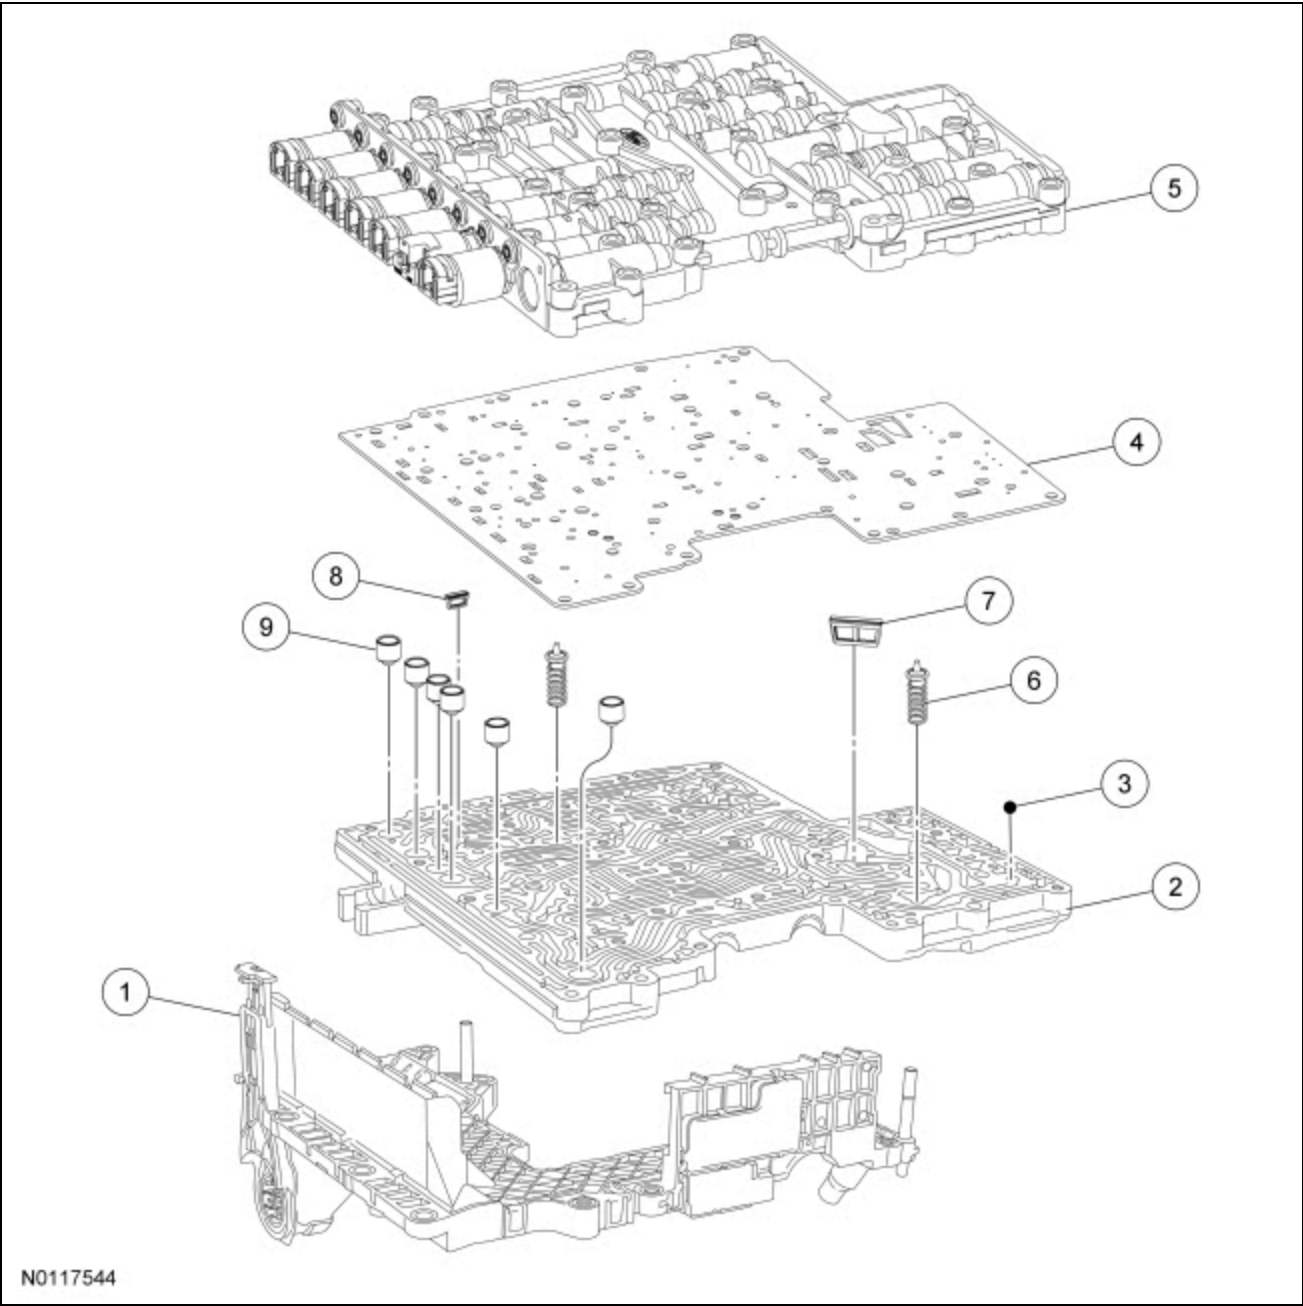

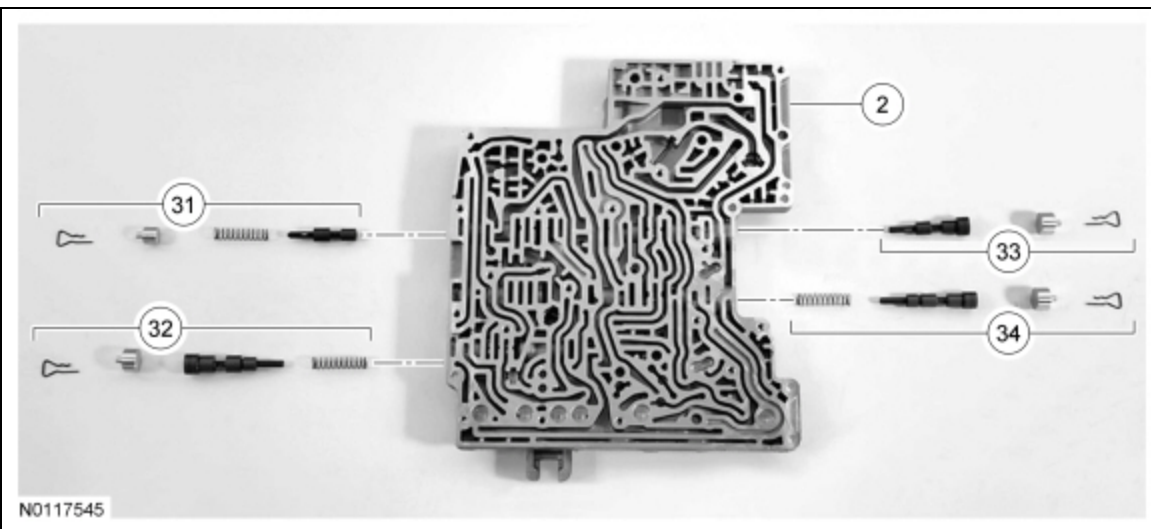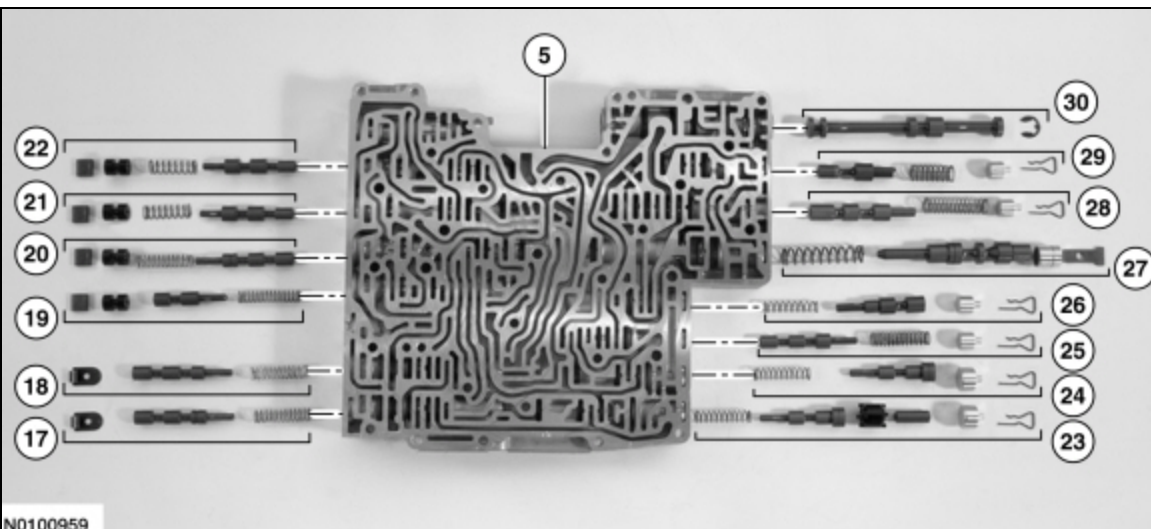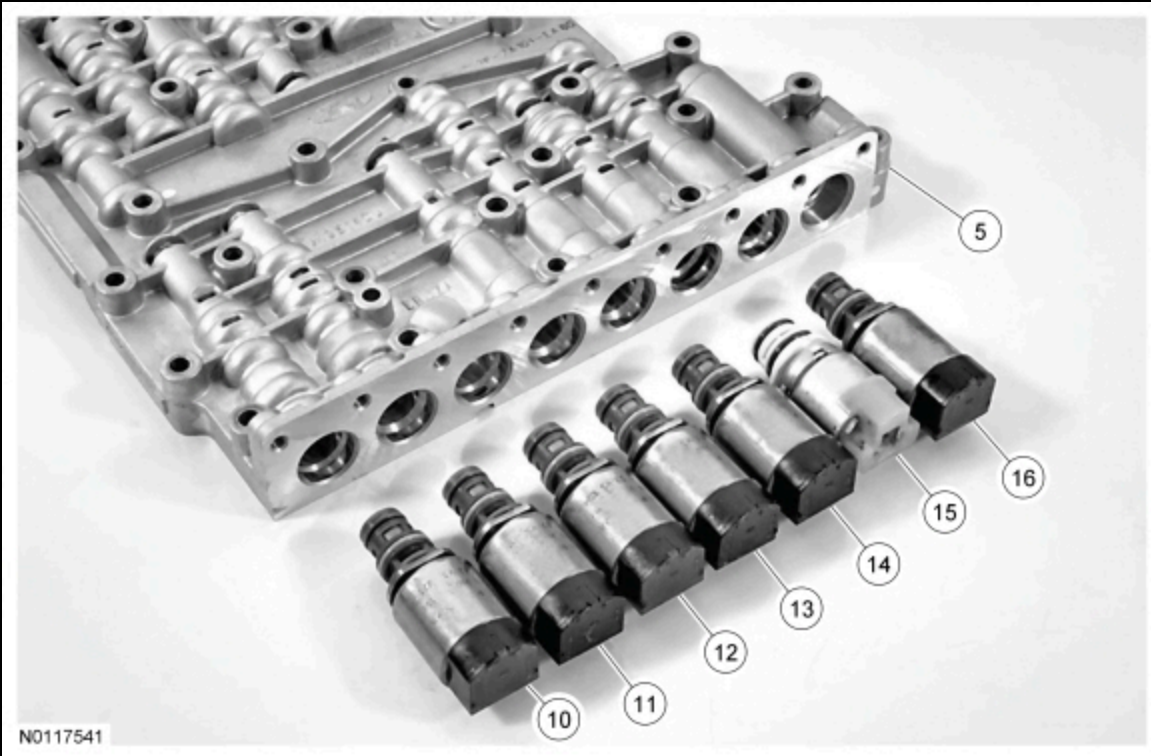

Item	Part Number	Description
1	7A1007A100	Main control
1	7G2767G276	Molded leadframe
2	—	Transmission control valve body (upper)

3	7E195 7E195	Transmission control valve check ball (8 required)
4	7Z490 7Z490	Transmission control valve body separator plate
5	—	Transmission control valve body (lower)
6	—	Transmission control valve assembly
7	7H187 7H187	Transmission control filter assembly
8	7B155 7B155	Transmission fluid filter
9	—	Transmission solenoid damper valve assembly
10	7G383 7G383	Shift Solenoid A (SSA)
11	7G383 7G383	Shift Solenoid B (SSB)
12	7G383 7G383	Shift Solenoid C (SSC)
13	7G383 7G383	Line Pressure Control (LPC) solenoid
14	7G383 7G383	Shift Solenoid D (SSD)
15	7G484 7G484	Shift Solenoid E (SSE)
16	7G383 7G383	Torque Converter Clutch (TCC) solenoid
17	—	Forward (A) clutch latch valve assembly
18	—	Direct (B) clutch latch valve assembly
19	—	Solenoid regulator valve
20	—	Low/reverse (D1) clutch latch valve assembly
21	—	Drive enable valve
22	—	Solenoid multiplex valve
23	—	Forward (A) clutch regulator valve assembly
24	—	Overdrive (E) clutch regulator valve assembly
25	—	Overdrive (E) clutch latch valve assembly
26	—	Bypass clutch control regulator valve assembly
27	—	Main regulator valve assembly
28	—	Converter release regulator valve assembly
29	—	Lubrication control valve assembly
30	—	Manual valve assembly
31	—	Low/reverse (D2) clutch latch valve assembly
32	—	Direct (B) clutch regulator valve assembly
33	—	Low/reverse (D1) clutch regulator valve assembly
34	—	Intermediate (C) clutch regulator valve