


Range Selection

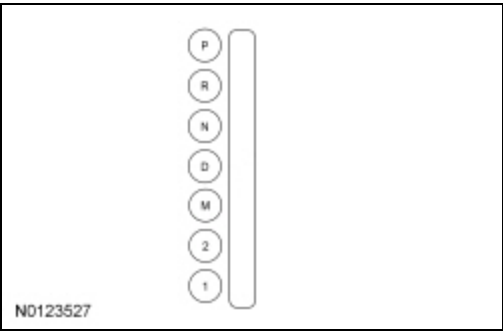

The transmission has 7 range positions: P, R, N, D, M, 2 and 1.



Park

In the PARK position:

- there is no power flow through the transmission.
- the park pawl locks the output shaft to the case.
- the engine can be started.
- the ignition key can be removed.

Reverse

In the REVERSE position:

- the vehicle can be operated in a rearward direction, at a reduced gear ratio.
- backup lamps are illuminated.

Neutral

In the NEUTRAL position:

- there is no power flow through the transmission.
- the output shaft is not held and is free to turn.
- the engine can be started.

D Position

The D is the normal position for most forward driving.

The D position provides:

- automatic shifts 1-6 and 6-1.
- apply and release of the torque converter clutch.
- maximum fuel economy during normal operation.
- engine braking in all gears.

Position M — SelectShift™

This position provides:

- manual control of the transmission.
- engine braking.

Position 3— 3rd Gear (column-shift only) (For vehicles without SST)

This position provides:

- manual 3rd gear.

Position 2 — 2nd Gear

This position provides:

- manual 2nd gear.

Position 1 — 1st Gear

This position provides:

- first gear operation only.
- engine braking for descending steep grades.

Gear Availability

MANUAL LEVER POSITION	TRANSMISSION GEAR OPERATION	DESCRIPTION
P	Park	Forward or reverse gears not available. Output shaft is held to the transmission case.
R	Reverse	Transmission allows reverse only.
N	Neutral	Forward or reverse gears not available. Output shaft moves freely.
D	1 ⇌ 2 ⇌ 3 ⇌ 4 ⇌ 5 ⇌ 6	6 forward gears are available. Gears are dependent on vehicle speed and throttle position with coast braking.
D Tow/Haul	1 ⇌ 2 ⇌ 3 ⇌ 4 ⇌ 5 ⇌ 6	1st through 6th gears are available. The shift scheduling is altered for higher shift speeds for a given throttle position. Transmission provides engine braking.
D Range Select	1 ⇌ 2 ⇌ 3 ⇌ 4 ⇌ 5 ⇌ 6	All gears available. Driver has the option to lockout higher gears by pressing "-" on the selector lever. Driver can also enable higher gears that have been locked out by pressing "+". Transmission automatically shifts through lower gears that have not been locked out.
M SelectShift™	1 ⇌ 2 ⇌ 3 ⇌ 4 ⇌ 5 ⇌ 6	All gears available upon driver request. Driver has the ability to shift the transmission using the "+" "-" switches on the selector lever.
2	1 2 ← 3 ← 4 ← 5 ← 6	2nd gear hold, no upshift. Downshift to 2nd gear when 2 position is selected above a calibrated speed.
1	1 ← 2 ← 3 ← 4 ← 5 ← 6	1st gear hold with engine braking, no upshift. The transmission downshifts to 1st gear when 1 is selected above a calibrated speed under minimum to moderate accelerator pedal position.