


Diagnostic Trouble Code (DTC) Charts

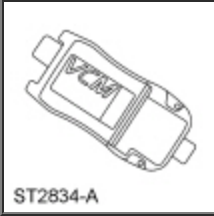

Special Tool(s)

 ST2834-A	Vehicle Communication Module (VCM) and Integrated Diagnostic System (IDS) software with appropriate hardware, or equivalent scan tool
--	---

Using a scan tool to retrieve DTCs, begin with and repair all non-transmission related DTCs. Start with the U-DTCs (communication link codes) then repair transmission related DTCs.

The PCM will command a default gear to protect the engine and transmission when certain faults occur. Default or (limp-home mode) depends on the actual gear the vehicle was in when the fault occurred.

- For gears 1-3, the default will be 3rd gear.
- For gears 4-6, the default will be 5th gear.

The default gear is held until the vehicle is placed in reverse, park or the vehicle is restarted. After these action(s) the vehicle will default to 3rd gear.

DTC Chart

DTC	Component	Description	Condition	Symptom	Action
B2572	Brake Shift Interlock Actuator (BSIA)	BSIA open or shorted circuit	The BSIA system a malfunction.	• BSIA inoperative	REFER to Section 307-05.
P0657	PCM	Actuator supply voltage A circuit open	The Transmission Solenoid Power Control (TSPC) relay failed open.	• Malfunction Indicator Lamp (MIL) ON • Maximum line pressure • Default to 5th gear	Power is routed through the transmission solenoid power control (TSPC) relay (inside the PCM) to all solenoids. If the power circuit to the transmission solenoids or the TSPC relay fails open, then all solenoids are failed electrically off. CHECK for open, short to ground or the transmission connector disconnected. The TSPC relay also disables power to the transmission solenoids when certain transmission DTCs are set. REPAIR as

DTC	Component	Description	Condition	Symptom	Action
					required. CLEAR the DTC. GO to Pinpoint Test A.
P0701	PCM	Transmission control system range/performance	The PCM detected an intermittent clutch ON fault.	- Vehicle decelerates during upshift or hangs in gear - DTCs P2700 (A) clutch, P2701 (B) clutch, P2702 (C) clutch, P2703 (D) clutch and/or P2704 (E) clutch may set	CLEAR the DTCs. TEST the system for normal operation. If the DTCs return, REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P0702	Battery	Battery voltage out of range	The PCM detected a voltage level above or below the accepted voltage range.	- Wrench light illuminated - Maximum line pressure - DTCs P0882 and/or P0883 may set	REPAIR the more specific DTC first. CLEAR the DTCs. TEST the system for normal operation. REFER to Section 414-00.
P0705	Transmission Range (TR) sensor	TR sensor failure	The PCM detected a TR sensor signal duty cycle is within range but does not match the calibrated bit pattern.	- MIL ON - Engine will not crank - Default to 3rd or 5th gear if DTC sets after engine running - Maximum line pressure - DTC P1702 may set	REPAIR the more specific DTC first. CLEAR the DTCs. GO to Pinpoint Test C.
P0706	TR sensor	TR sensor A circuit range/performance	The PCM detected a TR sensor signal duty cycle is out of range.	- MIL ON - Engine will not crank - Default to 3rd or 5th gear if DTC sets after engine running - Maximum line pressure - DTC P1705 may set	The TR sensor outputs a duty cycle indicating manual lever position. This DTC sets when the duty cycle is greater or less than commanded by 50Hz. GO to Pinpoint Test C.
P0707	TR sensor	TR sensor A circuit low	The PCM detected a TR sensor signal duty cycle is out of range.	- MIL ON - Engine will not crank	The TR sensor outputs a duty cycle indicating manual lever position. This DTC sets when the duty

DTC	Component	Description	Condition	Symptom	Action
				• Default to 5th gear if DTC sets after engine is running • Maximum line pressure • DTC P1702 may set	cycle is 8% less than commanded. GO to Pinpoint Test C.
P0708	T R sensor	T R sensor A circuit high	The PCM detected a T R sensor signal duty cycle is out of range.	• MIL ON • Engine will not crank • Default to 5th gear if DTC sets after engine running • Maximum line pressure • DTC P1702 may set	The T R sensor outputs a duty cycle indicating manual lever position. This DTC sets when the duty cycle is 92% greater than commanded. GO to Pinpoint Test C.
P0709	T R sensor	T R sensor A circuit intermittent	The PCM detected a T R sensor signal duty cycle is not out of range but is invalid.	• Wrench light illuminated • Engine may not crank • Default to 5th gear if DTC sets after engine running • Maximum line pressure • DTC P1702 may set	The T R sensor outputs a duty cycle indicating manual lever position. This DTC sets when the duty cycle is within range but is in the dead band between the design position, an in-range but invalid duty cycle. GO to Pinpoint Test C.
P0710	Transmission Fluid Temperature (TFT) sensor	T F T sensor A circuit	The PCM detected a voltage drop across the T F T sensor exceeds scale.	• Wrench light illuminated • DTC P0712 and/or P0713 may set	REPAIR the more specific DTC first. GO to Pinpoint Test B.
P0711	T F T sensor	T F T sensor A circuit range/performance	The PCM detected no T F T sensor change during operation. The T F T sensor is stuck below 21°C (70°F) or above 107°C (225°F) or the temperature did not change by 8°F during a drive cycle.	• MIL ON • Default to 1st or 3rd gear	CLEAR the DTC. If the DTC returns, GO to Pinpoint Test B.

DTC	Component	Description	Condition	Symptom	Action
P0712	TFT sensor	TFT sensor A circuit low	The PCM detected a temperature greater than 171°C (340°F) for at least 2.5 seconds (grounded circuit).	- MIL ON - Default to 1st gear - DTC P0710 may set	REPAIR the more specific DTC first. CLEAR the DTCs. If the DTC returns, GO to Pinpoint Test B.
P0713	TFT sensor	TFT sensor A circuit high	The PCM detected a temperature less than -45°C (-50°F) for at least 2.5 seconds (open circuit).	- MIL ON - Default to 1st gear - DTC P0710 may set	REPAIR the more specific DTC first. CLEAR the DTCs. If the DTC returns, GO to Pinpoint Test B.
P0715	Turbine Shaft Speed (TSS) sensor	TSS sensor A circuit	The PCM indicated no rpm input from the TSS sensor when the Output Shaft Speed (OSS) sensor indicated rpm greater than 0.	- MIL ON - Default to 5th gear - Maximum line pressure - DTC P0717 may set	REPAIR the more specific DTC first. CLEAR the DTCs. If the DTC returns, GO to Pinpoint Test D.
P0717	TSS sensor	TSS sensor A circuit no signal	The PCM has not detected a TSS sensor signal during operation.	- Wrench light illuminated - Default to 5th gear - Maximum line pressure - DTC P0715 may set	This DTC sets when DTC P0715 is set. REFER to DTC P0715.
P0718	TSS sensor	TSS sensor A circuit intermittent	The PCM has detected an intermittent (noise) in the TSS sensor signal during operation.	- Wrench light illuminated - Poor shift quality	CLEAR the DTC. If the DTC returns, GO to Pinpoint Test D.
P0720	OSS sensor	OSS sensor circuit	The PCM indicated no rpm input from the OSS sensor when the TSS sensor indicated rpm greater than 0.	- MIL ON - Default to 5th gear - Maximum line pressure - DTC P0722 may set	REPAIR the more specific DTC first. CLEAR the DTCs. If the DTC returns, GO to Pinpoint Test E.
P0721	OSS sensor	OSS sensor circuit intermittent	The PCM has detected and unrealistic rpm change in the OSS sensor.	- Wrench light illuminated - Poor shift quality	CLEAR the DTC. If the DTC returns, GO to Pinpoint Test E.
P0722	OSS sensor	OSS sensor no signal	The PCM indicated no rpm input from the OSS sensor when the TSS sensor indicated rpm greater than 0.	- Wrench light illuminated - Default to 5th gear - Maximum line pressure	This DTC sets when DTC P0720 is set. REFER to DTC P0720.

DTC	Component	Description	Condition	Symptom	Action
				DTC P0720 may set	
P0729	Transmission	Gear 6 incorrect ratio	The PCM did not detect a 6th gear ratio when commanded.	- Wrench light illuminated - No 6th gear - Flair or neutral condition - Hangs in gear	Intermediate clutch (C) or overdrive clutch (E) failed to apply. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0731	Transmission	Gear 1 incorrect ratio	The PCM did not detect a 1st gear ratio when commanded.	- Wrench light illuminated - No 1st gear - Flair or neutral condition - Hangs in gear	Forward clutch (A) or low/reverse clutch (D) slip of clutch (D) failed to apply or Q.W.C failed to hold. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0732	Transmission	Gear 2 incorrect ratio	The PCM did not detect a 2nd gear ratio when commanded.	- Wrench light illuminated - No 2nd gear - Flair or neutral condition - Hangs in gear	Forward clutch (A) or intermediate clutch (C) slip or clutch (C) failed to apply. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0733	Transmission	Gear 3 incorrect ratio	The PCM did not detect a 3rd gear ratio when commanded.	- Wrench light illuminated - No 3rd gear - Flair or neutral condition - Hangs in gear	Forward clutch (A) or direct clutch (B) slip or clutch (B) failed to apply. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.

DTC	Component	Description	Condition	Symptom	Action
P0734	Transmission	Gear 4 incorrect ratio	The PCM did not detect a 4th gear ratio when commanded.	- Wrench light illuminated - No 4th gear - Flair or neutral condition - Hangs in gear	Forward clutch (A) or overdrive clutch (E) slip or clutch (A) or (E) failed to apply. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0735	Transmission	Gear 5 incorrect ratio	The PCM did not detect a 5th gear ratio when commanded.	- Wrench light illuminated - No 5th gear - Flair or neutral condition - Hangs in gear	Direct clutch (B) or overdrive clutch (E) slip or clutch (B) or (E) failed to apply. REFER to the Clutch Application Chart located in Specifications in this section. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0740	Torque Converter Clutch (TCC) solenoid	TCC solenoid circuit/open	The PCM detected that the TCC solenoid control circuit failed open.	- MIL ON - TCC is disabled - DTC P0743 may set	GO to Pinpoint Test A.
P0741	TCC solenoid	TCC solenoid circuit performance/stuck OFF	The TCC failed to apply after 3 consecutive commands from the PCM.	- MIL ON - TCC is disabled - TCC regulator apply valve stuck in the release position - TCC control valve stuck in the release position - DTC P0751 may set	DTC P0741 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Torque Converter Operation Concerns, No Apply in Diagnosis By Symptom in this section.
P0742	TCC solenoid	TCC solenoid circuit stuck ON	The PCM detected the TCC solenoid control circuit is shorted to ground.	- MIL ON - TCC is disabled - Poor launch performance - Default to 3rd or 5th gear - DTC P0743 may set	GO to Pinpoint Test A.

DTC	Component	Description	Condition	Symptom	Action
P0743	TCC solenoid	TCC solenoid circuit electrical	The PCM detected that the TCC solenoid circuit is open, shorted to ground or an intermittent.	- Wrench light illuminated - TCC is disabled - Poor launch performance - Default to 5th gear - DTCs P0740, P0742 and/or P0744 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0744	TCC solenoid	TCC solenoid circuit intermittent	The PCM detected that the TCC solenoid control circuit is shorted to power.	- MIL ON - TCC is disabled - DTC P0743 may set	GO to Pinpoint Test A.
P0748	Line Pressure Control (LPC)	LPC electrical	The PCM sets this DTC along with one or more specific electrical DTCs.	- Wrench light illuminated - Maximum line pressure - May default to 5th gear - DTCs P0960, P0962 and/or P0963 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0750	Shift Solenoid A (SSA)	SSA	The PCM detected that the SSA circuit failed open or shorted to power.	- MIL ON 5th and 6th gear only - DTC P0753 may set	GO to Pinpoint Test A.
P0751	SSA	SSA performance/stuck OFF	The PCM commanded SSA ON but detected a ratio error. Forward clutch (A) failed OFF.	- MIL ON 5th and 6th gear only - Harsh reverse engagement - Neutral or flair condition - Clutch A regulator valve stuck in default position - Clutch A latch valve stuck in default position - DTC P2700 may set	DTC P0751 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Hydraulic Circuits in this section.
P0752	SSA	SSA stuck ON	The PCM commanded SSA	MIL ON	DTC P0752 is a non-electrical DTC. CLEAR the

DTC	Component	Description	Condition	Symptom	Action
			OFF but detected a ratio error. Forward clutch (A) stuck ON.	• Disable 5th and 6th gear • Erratic shifts • Stuck in 4th gear • Clutch A regulator valve stuck in spring compressed position • DTC P2700 may set	DTCs. TEST the system for normal operation. If the DTC returns, REFER to Forward Clutch Assembly in this section.
P0753	SSA	SSA electrical	The PCM sets this DTC along with one or more specific electrical DTCs.	• Wrench light illuminated • 5th and 6th gear only • DTCs P0750, P0973 and/or P0974 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0754	SSA	SSA intermittent	The PCM sets this DTC when an intermittent condition (open, short to power or ground) occurs 3 times for less than 5 seconds with each occurrence.	• Unexpected upshifts, downshifts, flairs or neutral conditions	CLEAR the DTC. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.
P0755	Shift Solenoid B (SSB)	SSB	The PCM detected that the SSB circuit failed open or shorted to power.	• MIL ON • Default to 3rd or 5th gear • Harsh 1-3 shift • DTC P0756 may set	GO to Pinpoint Test A.
P0756	SSB	SSB performance/stuck OFF	The PCM commanded SSB ON but detected a ratio error. Direct clutch (B) failed OFF.	• MIL ON • Default to 3rd or 5th gear • Neutral or flair condition • Transmission hangs in 2nd gear on acceleration • Clutch B regulator valve stuck in default position • Clutch B latch valve stuck in	DTC P0756 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Hydraulic Circuits in this section.

DTC	Component	Description	Condition	Symptom	Action
				default position DTC P0757 may set	
P0757	SSB	SSB stuck ON	The PCM commanded SSB OFF but detected a ratio error. Direct clutch (B) stuck ON.	- MIL ON - Default to 3rd or 5th gear - Harsh 1-3 shift - Erratic shifts - Clutch B regulator valve stuck in spring compressed position - DTC P0758 may set	DTC P0757 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Direct Clutch Assembly in this section.
P0758	SSB	SSB electrical	The PCM sets this DTC along with one or more specific electrical DTCs.	- Wrench light illuminated - Default to 3rd or 5th gear - Maximum line pressure - DTCs P0755, P0976 and/or P0977 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0759	SSB	SSB intermittent	The PCM sets this DTC when an intermittent condition (open, short to power or ground) occurs 3 times for less than 5 seconds with each occurrence.	Unexpected upshifts, downshifts, flairs or neutral conditions	CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.
P0760	Shift Solenoid C (SSC)	SSC	The PCM detected the SSC circuit has failed open.	- MIL ON - Disable 2nd and 6th gear - Erratic or harsh 1-3 shift - DTC P0763 may set	GO to Pinpoint Test A.
P0761	SSC	SSC performance/stuck OFF	The PCM commanded SSC ON but detected a ratio error. Intermediate clutch (C) failed OFF.	- MIL ON - Disable 2nd and 6th gear - Neutral or flair condition - Clutch C regulator valve stuck in	DTC P0761 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Intermediate Clutch Assembly in this section.

DTC	Component	Description	Condition	Symptom	Action
				default position DTC P2702 may set	
P0762	SSC	SSC stuck ON	The PCM commanded SSC OFF but detected a ratio error. Intermediate clutch (C) stuck ON.	- MIL ON 2nd and 6th upshift only - Harsh reverse engagement - Erratic shift or stuck in 6th - Clutch C regulator valve stuck in spring compressed position - DTC P2702 may set	DTC P0762 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Intermediate Clutch Assembly in this section.
P0763	SSC	SSC electrical	The PCM sets this DTC along with one or more specific electrical DTCs.	- Wrench light illuminated - Disable 2nd and 6th gear - DTCs P0760, P0979 and/or P0980 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0764	SSC	SSC intermittent	The PCM sets this DTC when an intermittent condition (open, short to power or ground) occurs 3 times for less than 5 seconds with each occurrence.	Unexpected upshifts, downshifts, flairs or neutral conditions	CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.
P0765	Shift Solenoid D (SSD)	SSD	The PCM detected that SSD circuit has failed open.	- MIL ON - Disable 1st, 2nd and 3rd gears - Poor launch performance - DTC P0768 may set	GO to Pinpoint Test A.
P0766	SSD	SSD performance/stuck OFF	The PCM commanded SSD ON but detected a ratio error. The low/reverse clutch (D) and overdrive clutch (E) have both failed OFF.	- MIL ON 3rd gear only - Delayed or no reverse engagement - Neutral or flair condition	REPAIR the more specific DTC first. DTC P0766 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to

DTC	Component	Description	Condition	Symptom	Action
				DTCs P2703 and/or P2704 may set	Hydraulic Circuits in this section.
P0767	SSD	SSD stuck ON	The PCM commanded SSD OFF but detected a ratio error. Overdrive clutch (E) failed to release.	- MIL ON 4th, 5th and 6th gear only - Early upshifts - Stuck in 4th - DTC P2704 may set	DTC P0767 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0768	SSD	SSD electrical	The PCM sets this DTC along with one or more specific electrical DTCs.	- Wrench light illuminated - Default to 3rd gear - DTCs P0765, P0982 and/or P0983 may set	REPAIR the more specific DTC first. GO to Pinpoint Test A.
P0769	SSD	SSD intermittent	The PCM sets this DTC when an intermittent condition (open, short to power or ground) occurs 3 times for less than 5 seconds with each occurrence.	Unexpected upshifts, downshifts, flairs or neutral conditions	CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.
P0770	Shift Solenoid E (SSE)	SSE	The PCM detected that the SSE circuit failed open, shorted to ground or shorted to power.	- MIL ON - No TCC - If 1st, 2nd and 3rd gears are achieved than circuit is open or shorted to power (no pressure) - If 5th gear launch than circuit is shorted to ground (pressure) - DTC P0773 may set	GO to Pinpoint Test A.
P0771	SSE	SSE performance/stuck OFF	The PCM commanded SSE ON but detected a ratio error (mechanical failure).	- MIL ON 1st, 2nd and 3rd gear only - Solenoid multiplex valve stuck in default position	DTC P0771 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.

DTC	Component	Description	Condition	Symptom	Action
				DTC P0984 may set	
P0772	SSE	SSE stuck ON	The PCM commanded SSE OFF but detected a ratio error (mechanical failure).	- MIL ON - No 1st gear 4th gear launch - Solenoid multiplex valve stuck in spring compressed position - DTC P0984 may set	DTC P0772 is a non-electrical DTC. CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P0773	SSE	SSE electrical	The PCM sets this DTC along with one other specific electrical DTC. SSE circuit may be open, short to power or ground.	- Wrench light illuminated - If 1st, 2nd and 3rd gears are achieved than circuit is open or shorted to power (no pressure) - If 5th gear launch than circuit is shorted to ground (pressure) - DTC P0770 may set	REFER to DTC P0770.
P0774	SSE	SSE intermittent	The PCM sets this DTC when an intermittent condition (open, short to power or ground) occurs but does not set DTC P0770.	- Wrench light illuminated - Transmission hangs in 1st gear or may be stuck in 3rd gear	CLEAR the DTCs. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.
P07A8	Transmission	Transmission friction element D performance/stuck OFF	The low/reverse clutch failed OFF.	- Wrench light illuminated - Delay or no reverse engagement - Disable 1st gear - Erratic shifts	DTC P07A8 is a non-electrical DTC. CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REFER to Low/Reverse Clutch Assembly in this section.
P07A9	Transmission	Transmission friction element D stuck ON	The low/reverse One-Way Clutch (OWC) is failed ON.	- Wrench light illuminated - No TCC 1st gear only	DTC P07A9 is a non-electrical DTC. CLEAR the DTC. TEST the system for normal operation. If the

DTC	Component	Description	Condition	Symptom	Action
				High engine rpm	DTC returns, REFER to Low/Reverse Clutch Assembly in this section.
P07AA	Transmission	Transmission friction element E performance/stuck off	The PCM detected a ratio error. Overdrive clutch (E) failed OFF.	- Wrench light illuminated 1st, 2nd and 3rd gears only - Neutral or flair condition - High engine rpm - Erratic shifts	DTC P07AA is a non-electrical DTC. CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REFER to Overdrive Clutch Assembly in this section.
P0815	SelectShift™ switch	Upshift switch circuit	The upshift and downshift switches are open in PARK, REVERSE and NEUTRAL. The PCM sets this DTC when it detects an upshift switch is closed (short to ground).	- Wrench light illuminated - Disable SelectShift™ scheduling to automatic shift scheduling - Upshifts request ignored - Unexpected upshifts	REFER to Section 307-05.
P0816	SelectShift™ switch	Downshift switch circuit	The upshift and downshift switches are open in PARK, REVERSE and NEUTRAL. The PCM sets this DTC when it detects a downshift switch is closed (short to ground).	- Wrench light illuminated - Disable SelectShift™ scheduling to automatic shift scheduling - Upshifts request ignored - Unexpected downshifts	REFER to Section 307-05.
P0826	SelectShift™ switch	Up and Down switch circuit	The upshift and downshift switches are open in PARK, REVERSE and NEUTRAL. The PCM sets this DTC when it detects the select switch inputs do not match the selector lever position.	- Wrench light illuminated - Default to automatic shift scheduling - Upshifts and downshift request ignored	REFER to Section 307-05.
P0882	Battery	PCM power input signal low	The battery voltage is out of range low. At low volts the	- MIL ON - Default to 3rd or 5th gear	CLEAR the DTC. TEST the system for normal operation. If the DTC

DTC	Component	Description	Condition	Symptom	Action
			solenoid drivers may no longer be able to achieve desired current so the transmission solenoid power control relay will be turned OFF.	depending vehicle speed and gear - Battery voltage below 9 volts - Maximum line pressure	returns, REFER to Section 414-00.
P0883	Battery	PCM power input signal high	The battery voltage is out of range high. Greater than 21 volts.	- MIL ON - Default to 3rd or 5th gear depending vehicle speed and gear - Battery voltage above 21 volts - Maximum line pressure - May set DTC P0702	CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REFER to Section 414-00.
P0960	LPC	LPC control circuit/open	The PCM detected 0 volts on the LPC circuit.	- MIL ON - Maximum line pressure - May default to 5th gear - DTC P0748 may set	GO to Pinpoint Test A.
P0961	LPC	LPC control circuit range/performance	The PCM detected that the LPC control circuit is shorted to ground but not long enough to set DTC P0962.	- Intermittent condition - Minimum line pressure	GO to Pinpoint Test A.
P0962	LPC	LPC control circuit low	The PCM detected 0 volts on the LPC circuit. Short to ground detected.	- MIL ON - Default to 5th gear - Maximum line pressure - DTC P0748 may set	GO to Pinpoint Test A.
P0963	LPC	LPC control circuit high	The PCM detected voltage on the LPC circuit. Short to power detected.	- MIL ON - Maximum line pressure - DTC P0748 may set	GO to Pinpoint Test A.

DTC	Component	Description	Condition	Symptom	Action
P0973	SSA	SSA control circuit low	The PCM detected 0 volts on the SSA circuit. Short to ground detected.	• MIL ON • Default to 5th gear • Default to 3rd only, when the selector lever is shifted into Reverse then back into Drive • Maximum line pressure • DTC P0753 may set	GO to Pinpoint Test A.
P0974	SSA	SSA control circuit high	The PCM detected voltage on the SSA circuit. Short to power or open circuit detected.	• MIL ON • 5th and 6th gear only • DTC P0753 may set	GO to Pinpoint Test A.
P0976	SSB	SSB control circuit low	The PCM detected 0 volts on the SSB circuit. Short to ground detected.	• MIL ON • Default to 5th gear • Default to 3rd only, when the selector lever is shifted into REVERSE then back into DRIVE • Maximum line pressure • DTC P0753 may set	GO to Pinpoint Test A.
P0977	SSB	SSB control circuit high	The PCM detected voltage on the SSB circuit. Short to power or open circuit.	• MIL ON • Default to 3rd and 5th gear • Harsh 1st to 3rd shift • Maximum line pressure • DTC P0758 may set	GO to Pinpoint Test A.
P0979	SSC	SSC control circuit low	The PCM detected 0 volts on the SSC circuit. Short to ground detected.	• MIL ON • Default to 5th gear • Maximum line pressure • DTC P0763 may set	GO to Pinpoint Test A.

DTC	Component	Description	Condition	Symptom	Action
P0980	SSC	SSC control circuit high	The PCM detected voltage on the SSC circuit. Short to power detected.	• MIL ON • 2nd and 6th gears disabled • Harsh 1st to 3rd shift • Maximum line pressure • DTC P0763 may set	GO to Pinpoint Test A.
P0982	SSD	SSD control circuit low	The PCM detected 0 volts on the SSD circuit. Short to ground detected.	• MIL ON • Default to 5th gear • Default to 3rd only, when the selector lever is shifted into REVERSE then back into DRIVE • Maximum line pressure • DTC P0768 may set	GO to Pinpoint Test A.
P0983	SSD	SSD control circuit high	The PCM detected voltage on the SSD circuit. Short to power detected.	• MIL ON • Disable 1st, 2nd and 3rd gear • Poor launch performance • Maximum line pressure • DTC P0768 may set	GO to Pinpoint Test A.
P0984	SSE	SSE control circuit range/performance	The PCM commanded SSE ON or OFF but detected a ratio error (mechanical failure).	• Wrench light illuminated • DTC P0771 and/or P0772 will set	DTC P0984 is a non-electrical DTC. CLEAR the DTCs. REPAIR the more specific DTC first. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P1001	PCM	Key ON Engine Running (KOER) not able to complete, KOER aborted	The KOER self-test was unable to complete and aborted.	• —	REFER to, Powertrain Control/Emissions Diagnosis (PC/ED) manual.
P1397	PCM	System voltage out of self-test range	The PCM detected that system voltage is out of self-test range of 11 to 18 volts, during the Key	• —	CLEAR the DTC. RERUN the KOEO and KOER self test. If the DTC returns, REFER to Section 414-00.

DTC	Component	Description	Condition	Symptom	Action
			ON Engine OFF (KOEO) or KOER .		
P1501	PCM	Vehicle Speed Sensor (VSS) out of self-test range	The PCM detected a VSS signal during the self-test.	Self-test aborted	CLEAR the DTC. With the selector lever in the Park position, RERUN the self-test. If the DTC returns, REFER to Powertrain Control/Emissions Diagnosis (PC/ED) manual.
P1502	PCM	VSS intermittent	Intermittent VSS fault keeps disabling engine monitors.	Can not complete engine monitors	REFER to, Powertrain Control/Emissions Diagnosis (PC/ED) manual.
P1635	PCM	Tire/Axle out of acceptable range	The tire, axle or the combination of tire and axle are out of the certified range. Calibration was not updated.	- MIL ON - PCM will use a default tire and axle calibration	REFER to, Powertrain Control/Emissions Diagnosis (PC/ED) manual.
P1636	PCM	Inductive signature chip communication error	The PCM lost communication with an internal chip that controls the solenoid states and fault reporting.	- MIL ON - Default to 3rd or 5th gear - Maximum line pressure - Poor launch performance	VERIFY battery and charging systems are functioning correctly. PERFORM Battery Condition Test. REFER to Section 414-00. PERFORM pinpoint test for System Voltage Low or Battery is Discharged. REFER to Section 414-00. REPAIR all battery and charging system concerns before diagnosing this DTC . CLEAR DTC and RETEST. If DTC returns, REPLACE the PCM , REFER to Section 303-14. After installing the new PCM , PROGRAM it with the latest calibration and PERFORM the Solenoid Body Strategy Data Download. REFER to Solenoid Body Strategy. ROAD TEST the vehicle and PERFORM the Adaptive Drive Cycle, REFER to Shift Point Road Test.

DTC	Component	Description	Condition	Symptom	Action
P163E	PCM	PCM programming error	The PCM has detected an invalid checksum.	• MIL ON • Default to 1st or 3rd gear • Maximum line pressure	REPROGRAM the original PCM with the latest calibration. CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REPLACE the PCM. REFER to Section 303-14. After installing the new PCM, PROGRAM it with the latest calibration and PERFORM the Solenoid Body Strategy Data Download. REFER to Solenoid Body Strategy in this section. ROAD TEST the vehicle and PERFORM the Adaptive Drive Cycle, REFER to Shift Point Road Test in this section.
P163F	PCM	Transmission ID block corrupted, not programmed	The PCM has detected an invalid transmission identification.	• MIL ON • Default to 1st or 3rd gear • Maximum line pressure	REPROGRAM the original PCM with the latest calibration. CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REPLACE the PCM. REFER to Section 303-14. After installing the new PCM, PROGRAM it with the latest calibration and PERFORM the Solenoid Body Strategy Data Download. REFER to Solenoid Body Strategy in this section. ROAD TEST the vehicle and PERFORM the Adaptive Drive Cycle, REFER to Shift Point Road Test in this section.
P1700	Transmission	Transmission intermittent failure (failed to neutral)	Main control body issue where the multiplex valve reverse pressure bleeds off to slow and causes the multiplex valve to get stuck in the wrong state.	• Wrench light illuminated • Neutral condition when 1st gear commanded	DTC P1700 is a non-electrical DTC. CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.

DTC	Component	Description	Condition	Symptom	Action
P1702	T R sensor	T R sensor circuit intermittent	The PCM detected a T R sensor signal duty cycle is not out of range but is invalid.	- Wrench light illuminated - DTC P0705, P0706, P0707, P0708 and/or P0709 may set	REPAIR the more specific DTC first. GO to Pinpoint Test C.
P1705	T R sensor	T R sensor circuit did not indicate PARK/NEUTRAL during the self-test.	The T R sensor circuit did not indicate PARK/NEUTRAL during K O E O or K O E R self-test.	—	CLEAR the DTC. RERUN the K O E O and K O E R self test. If DTC returns. GO to Pinpoint Test C.
P1711	T F T sensor	T F T sensor out of self-test range	The PCM did not receive a T F T sensor input during the K O E O or K O E R self-test that was within -1.11°C to 104°C (30°F to 220°F) during the self-test.	—	CLEAR the DTC. RERUN the K O E O and K O E R self-test. If DTC returns GO to Pinpoint Test B.
P1744	T C C	T C C solenoid circuit	The PCM detected that the T C C solenoid is stuck ON or stuck OFF.	- Wrench light illuminated - DTC P0741 and/or P2758 may set	DTC P1744 is a non-electrical DTC. REPAIR the more specific DTC first. CLEAR the DTCs. TEST the system for normal operation. If the DTCs return, REFER to Diagnosis By Symptom in this section.
P1780	Transmission Control Switch (TCS)	T C S (Tow/Haul) circuit out of self-test range	The PCM did not receive a T C S input during the K O E R self-test.	Disable Tow/Haul function	CLEAR the DTC. RERUN K O E R self-test. If DTC returns, REFER to Section 307-05.
P1783	Transmission	Transmission overtemperature condition	The PCM detected a transmission temperature greater than 135°C (275°F) for more than 5 seconds.	- Wrench light illuminated TCC commanded on early	CLEAR the DTC. TEST the system for normal operation. If the DTC returns, REFER to Diagnosis By Symptom in this section.
P1921	T R sensor	T R signal	The PCM detected a T R sensor signal duty cycle out of range.	- Engine will not crank - DTCs P1705, P0706, P0707, P0708 and/or P0709 may set	REPAIR the more specific DTC first. GO to Pinpoint Test C.
P2700	Transmission	Transmission friction element A apply time range/performance	The PCM commanded S S A ON or OFF but detected a ratio error (mechanical failure).	- Wrench light illuminated - DTC P0751 and/or P0752 will set	DTC P2700 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.

DTC	Component	Description	Condition	Symptom	Action
P2701	Transmission	Transmission friction element B apply time range/performance	The PCM commanded SSB ON or OFF but detected a ratio error (mechanical failure).	- Wrench light illuminated - DTC P0756 and/or P0757 will set	DTC P2701 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2702	Transmission	Transmission friction element C apply time range/performance	The PCM commanded SSC ON or OFF but detected a ratio error (mechanical failure).	- Wrench light illuminated - DTC P0761 and/or P0762 will set	DTC P2702 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2703	Transmission	Transmission friction element D apply time range/performance	The PCM commanded SSD ON or OFF but detected a ratio error (mechanical failure).	- Wrench light illuminated - DTC P0766 and/or P2704 will set	DTC P2703 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2704	Transmission	Transmission friction element E apply time range/performance	The PCM commanded SSE ON or OFF but detected a ratio error (mechanical failure).	- Wrench light illuminated - DTC P0766 and/or P0767 will set	DTC P2704 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2705	Transmission	Transmission friction element F apply time range/performance	The One-Way Clutch (OWC) failed OFF (OWC failure).	- Wrench light illuminated - Neutral condition when 1st gear is commanded - Poor launch performance - Harsh engagements	DTC P2704 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2758	TCC	TCC pressure control solenoid stuck ON	The PCM commanded the TCC solenoid OFF but the TCC did not release (mechanical error).	- Wrench light illuminated - Engine stalls or is lugging - DTC P1744 may set	DTC P2758 is a non-electrical DTC. REPAIR the more specific DTC first. REFER to Diagnosis By Symptom in this section.
P2760	TCC	TCC pressure control solenoid intermittent	The TCC solenoid control circuit shorted to ground 3 times without setting DTC P0742.	TCC disabled - Poor launch performance - Default to 5th gear	CLEAR the DTC. TEST the system for normal operation. If the DTC returns, GO to Pinpoint Test A.