
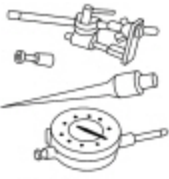


Direct Clutch Assembly

 [Ford Ecat Electronic Parts Catalog](#)


Special Tool(s)

 ST1190-A	Compressor, Clutch Spring 307-015 (T65L-77515-A)
 ST2893-A	Compressor, Clutch Spring 307-552
 ST1214-A	Dial Indicator Gauge with Holding Fixture 100-002 (TOOL-4201-C) or equivalent
 ST2892-A	End Play Gauge, Clutch 307-555

Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

Direct Clutch Assembly

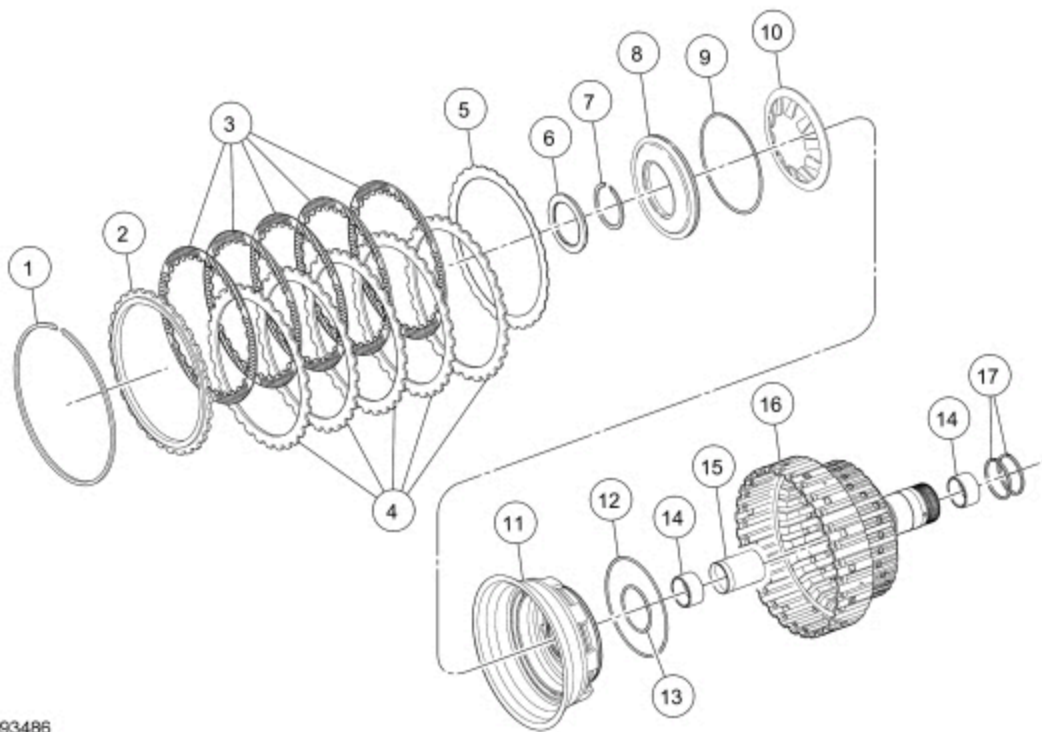

N0093486


Item	Part Number	Description
1	7D483 7D483	Direct clutch pressure plate retaining ring
2	7B066 7B066	Direct clutch pressure plate (thickness model dependant)
3	7B164 7B164	Direct clutch internal splined friction plates (quantity model dependant)
4	7B442 7B442	Direct clutch external splined steel plates (quantity model dependant)
5	—	Direct clutch cushion plate (wave spring)
6	7C096 7C096	Bearing (T5)
7	7A577 7A577	Piston retaining ring
8	7A262 7A262	Direct clutch balance piston
9	7A548 7A548	Direct clutch balance piston seal
10	7B488 7B488	Return spring
11	7A262 7A262	Direct clutch apply piston
12	7A548 7A548	Direct clutch apply piston outer seal
13	7C099 7C099	Direct clutch apply piston inner seal
14	—	Direct clutch bushing hubs (part of 7F283) (2 required)
15	—	Gear shaft tube sleeve (part of 7F283)
16	7F283 7F283	Direct clutch cylinder
17	7D020 7D020	Seal shell cylinders

Disassembly


1. Remove and discard the 2 scarf cut seals and the roller bearing.




2. Remove the T5 thrust bearing.

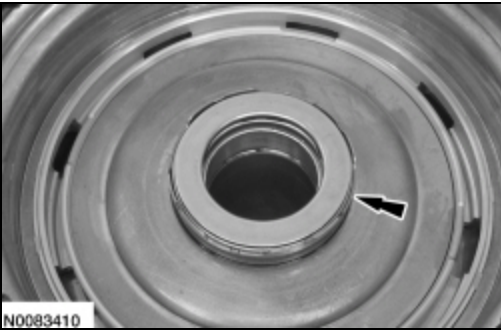


3. Remove the direct clutch snap ring.

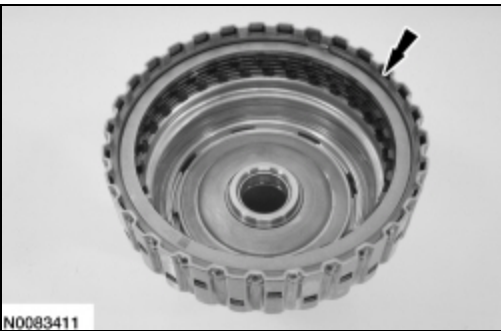


4. Remove the direct clutch steel and friction plates.

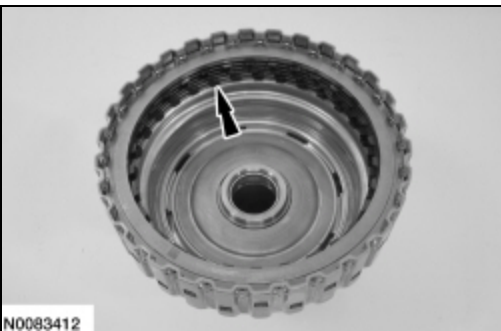


5. Install the Clutch Spring Compressors onto the direct clutch assembly.

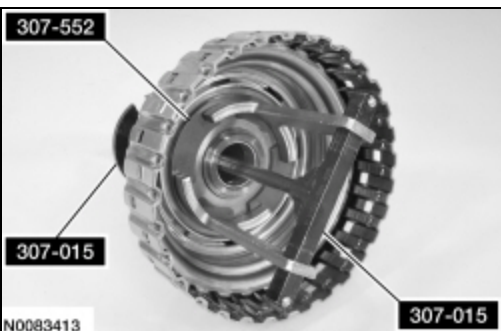


6. Using the Clutch Spring Compressors, compress the direct clutch return spring and remove the direct clutch return spring retainer.

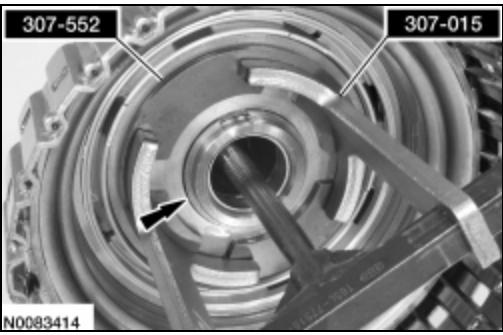


7. Remove the balance piston.

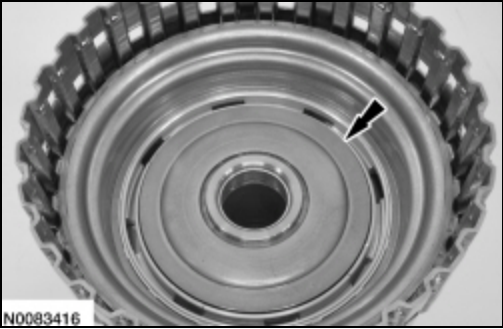

8. Remove the direct clutch return spring.

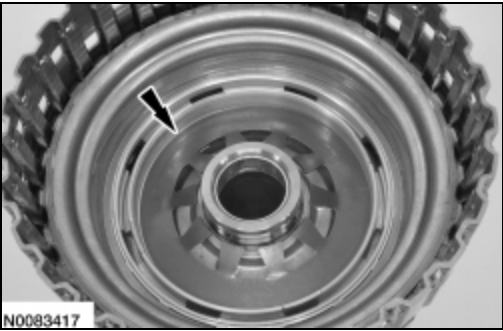

9. Remove the direct clutch piston.

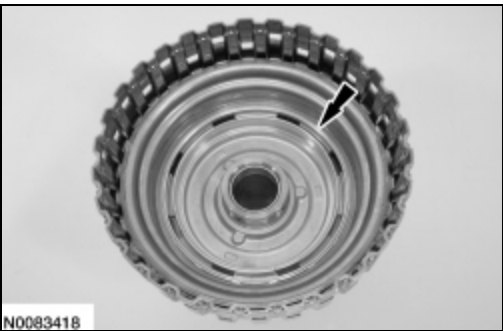

10. Remove and discard the outer O-ring seal from the balance piston.




11. Remove and discard the outer and inner O-ring seals from the apply piston.



12. Inspect the components of the direct clutch for damage. If damage is indicated, install new components as necessary.

Assembly


1. Install a new inner and outer O-ring seal on the apply piston.

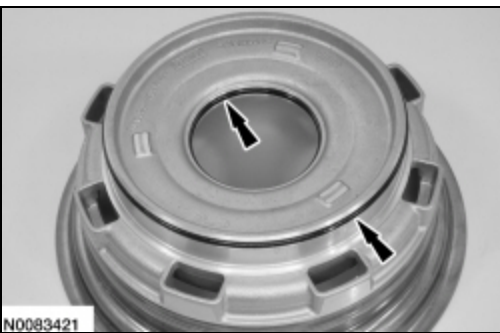


2. Install a new outer O-ring seal on the balance piston.




3. Lightly coat the O-ring seals in clean transmission fluid and install the direct clutch piston.

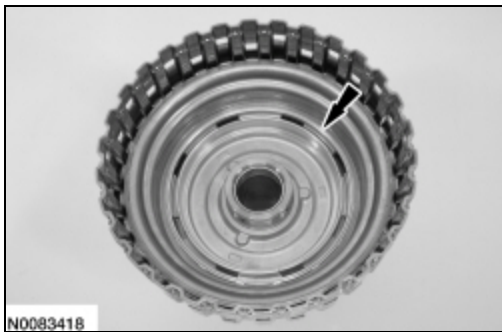


4. Install the direct clutch return spring.

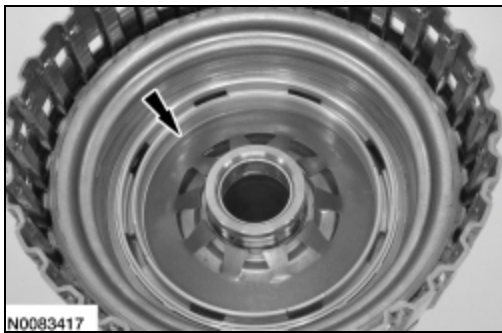


5. Install the balance piston.

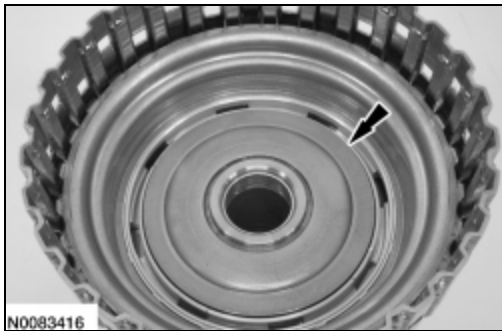

6. Install the Clutch Spring Compressors onto the direct clutch assembly.

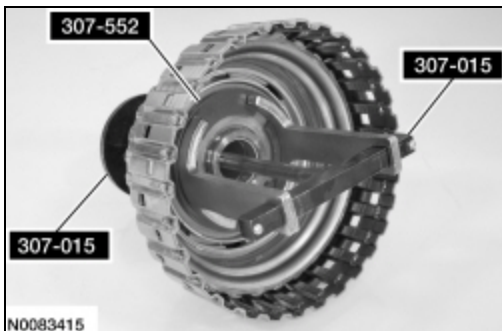

7. Using the Clutch Spring Compressors, compress the direct clutch return spring and install the direct clutch return spring retainer.

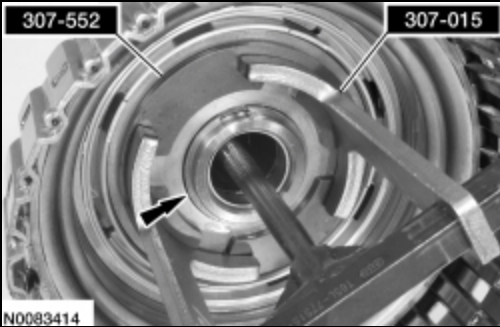


8. **NOTE:** Friction and steel plate quantity will vary based on engine displacement. For additional information, refer to the Clutch Plate Quantity Chart in the Specifications portion of this section.


Soak the new direct clutch in clean transmission fluid.



9. Install the new direct clutch plates, starting with the wave spring then a steel plate and alternating between steel and friction plates, and ending with the pressure plate on the top.

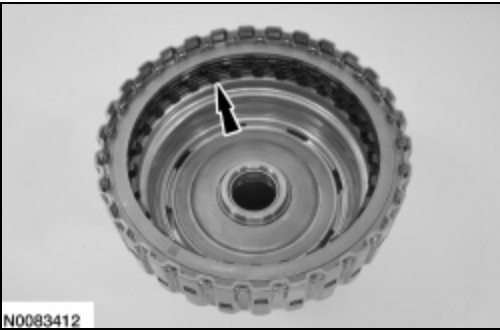


10. Install the direct clutch snap ring.

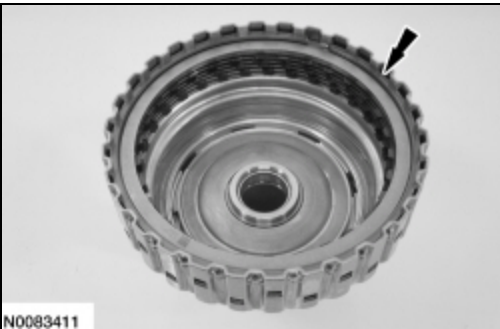


11. **NOTE:** Inspect and install a new thrust bearing as required.

Install the T5 thrust bearing.

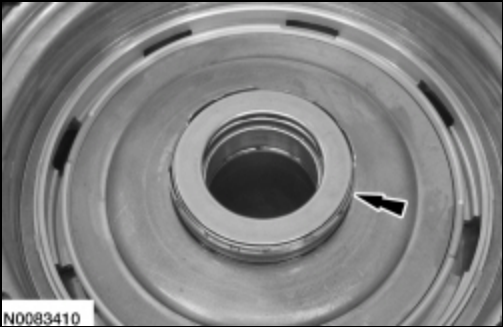


12. **NOTE:** All direct clutch plates, friction and steel are of a wave-type design.

Install the direct clutch assembly into the Clutch End Play Gauge and install the Dial Indicator Gauge with Holding Fixture and position the plunger so it fits into the opening of the snap ring.

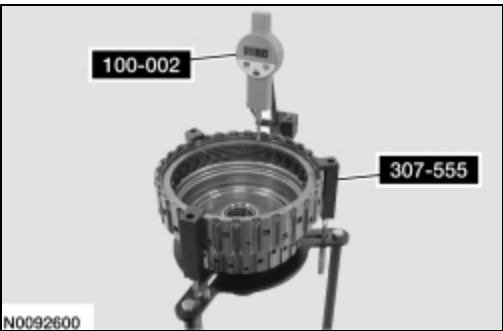

13. With the Dial Indicator Gauge set at zero, lift up on the steel pressure plate so it is against the select fit snap ring. Record this reading as reading A.

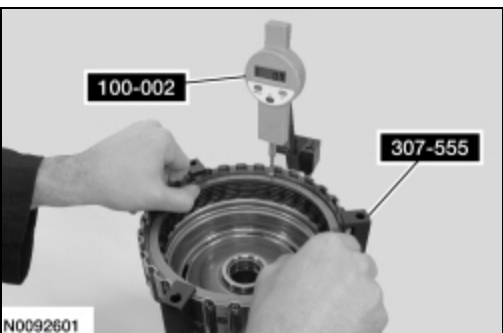

14. Rotate the direct clutch assembly 180 degrees from the opening of the snap ring, take a second reading and record this reading as reading B.

Description	Reading
Reading A	
Reading B	
Add reading A to reading B for a total end clearance	
Divide the total reading by 2 for an average end clearance	

15. **NOTE:** If the final measurement is not within specification, install a new snap ring until the correct specification is achieved.

- 0.5-1.3 mm (0.019-0.051 in).

If the free pack end clearance between the bottom of the snap ring and the top of the pressure plate is high, remeasure using a thicker select fit snap ring. If the free pack end clearance between the bottom of the snap ring and the top of

the pressure plate is low, remeasure using a thinner select fit snap ring.

16. Install 2 new scarf cut seals and the roller bearing.

