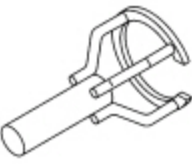
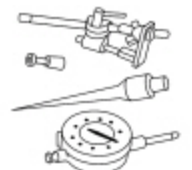


Overdrive Clutch Assembly

 [Ford Ecat Electronic Parts Catalog](#)


Special Tool(s)

 ST2497-A	Compressor, Spring Washer 307-209
 ST1214-A	Dial Indicator Gauge with Holding Fixture 100-002 (TOOL-4201-C) or equivalent
 ST2892-A	End Play Gauge, Clutch 307-555

Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

Overdrive (O/D) Clutch Assembly

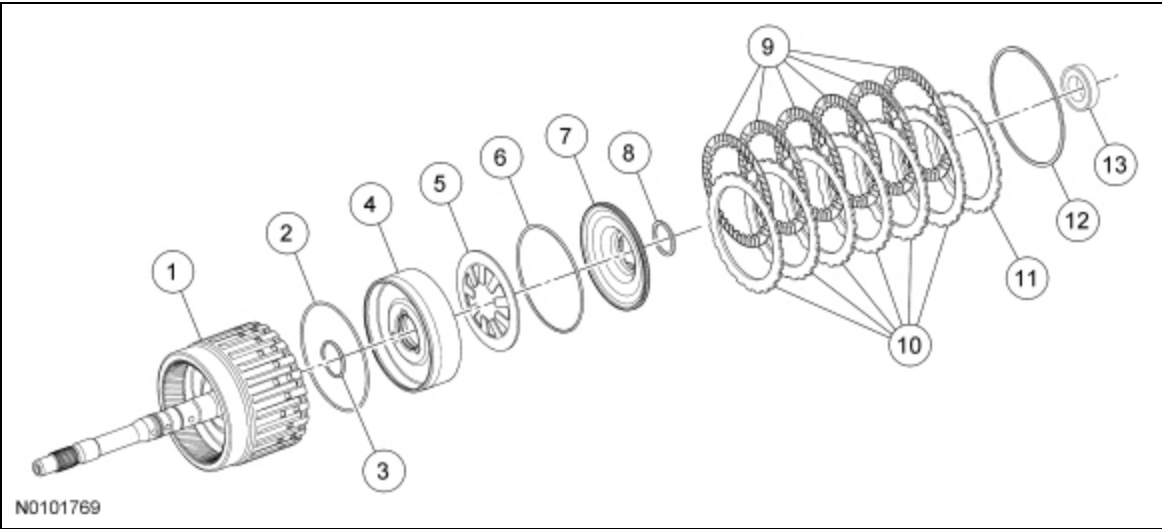


Item	Part Number	Description
------	-------------	-------------


1	7F207 7F207	Input shaft
2	7A548 7A548	Overdrive (O/D) clutch piston outer seal
3	7A548 7A548	O/D clutch piston inner seal
4	7A262 7A262	O/D clutch piston
5	7B070 7B070	O/D clutch piston spring
6	7A548 7A548	O/D balance piston outer seal
7	7H360 7H360	O/D balance piston
8	7C122 7C122	O/D balance piston snap ring
9	7B164 7B164	O/D clutch internal splined clutch friction plates (quantity model dependent)
10	7B442 7B442	O/D clutch external splined clutch steel plates (quantity model dependent)
11	7B066 7B066	O/D pressure plate
12	7D483 7D483	O/D clutch retaining ring
13	7C096 7C096	Bearing T3

Disassembly


1. Position the Overdrive (O/D) clutch assembly in the Clutch End Play Gauge and remove the T3 thrust bearing.

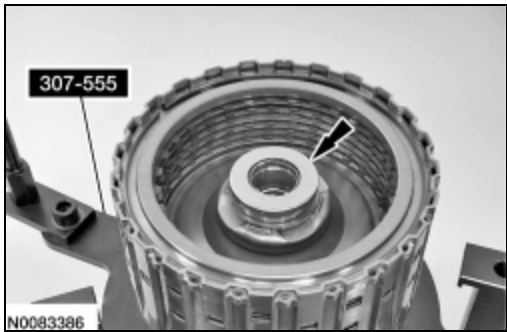

2. Remove the O/D clutch pack snap ring.

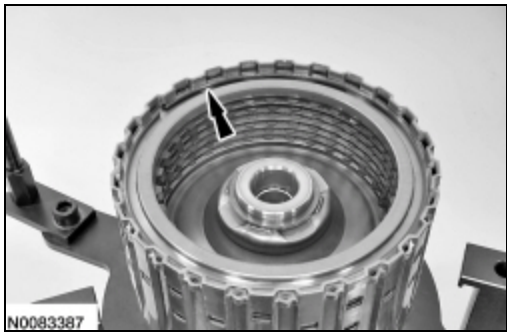


3. Remove the O/D clutch pack.

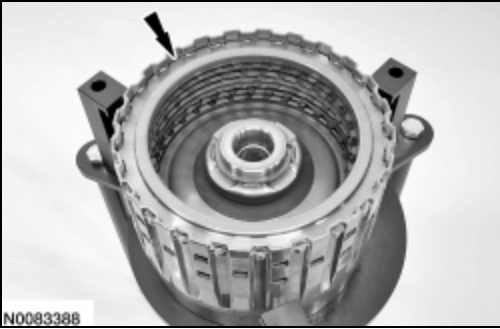


4. Using the Spring Washer Compressor and a press, remove and discard the $\Omega/\mathbb{D}$ clutch balance piston retaining ring.




5. Remove the $\Omega/\mathbb{D}$ clutch balance piston.

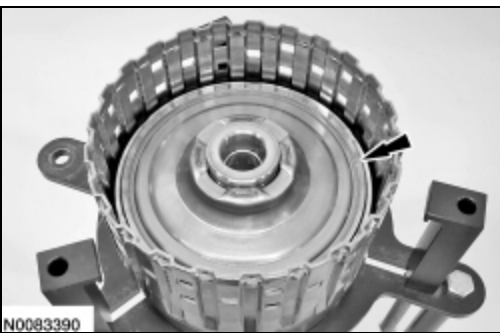

6. Remove the $\Omega/\mathbb{D}$ clutch return spring.

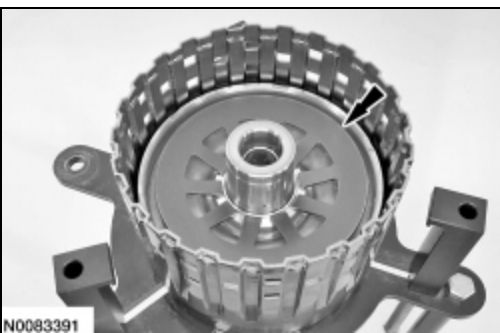

7. Remove the $\Omega/\mathbb{D}$ clutch apply piston.

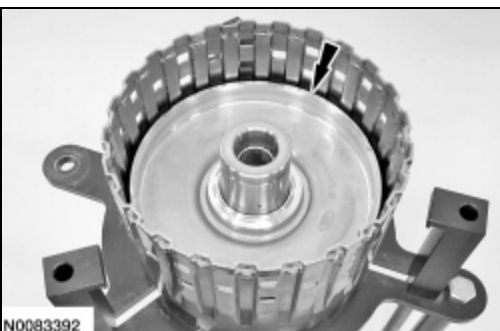


8. Remove and discard the outer O-ring seal on the $\Omega/\mathbb{D}$ clutch balance piston.



9. Remove and discard both the inner (one large and one small) O-ring seals on the $\Omega/\mathbb{D}$ clutch apply piston.




10. Remove and discard the 3 scarf cut seals.

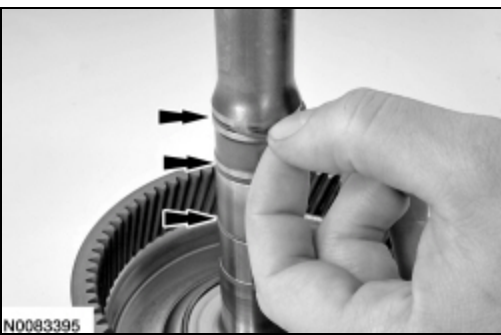


Assembly

1. Install the 3 new scarf cut seals and the roller bearing.

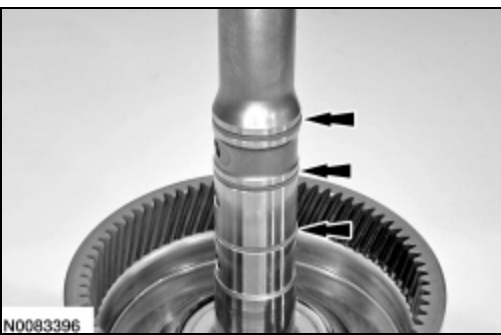


2. Install a new outer O-ring seal on the $\Omega/\mathbb{D}$ clutch balance piston.

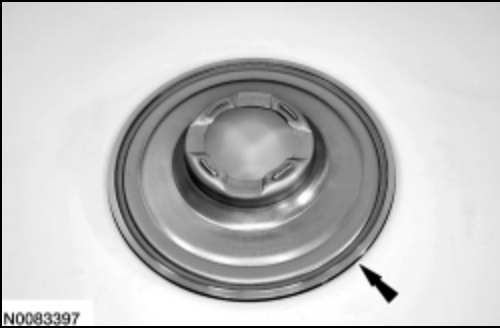

3. Install 2 new inner O-ring seals on the $\Omega/\mathbb{D}$ clutch apply piston.




4. Lubricate all the O-ring seals with clean transmission fluid. Install the $\Omega/\mathbb{D}$ clutch apply piston into the drum with the O-ring seals and the 3 pads facing down toward the drum.

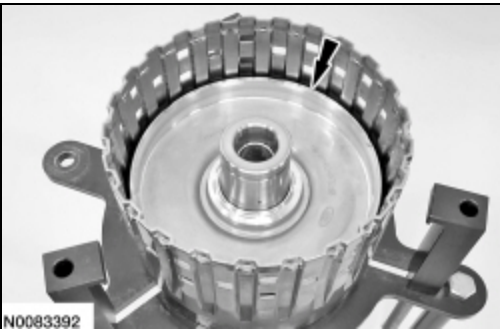


5. **NOTE:** *The fingers on the return spring are facing down toward the piston.*

Install the $\Omega/\mathbb{D}$ clutch return spring.

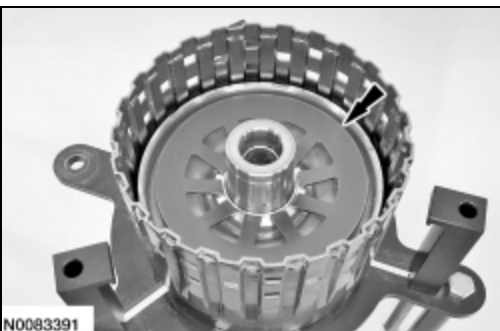


6. **NOTE:** *The cone shape of the balance piston must face up when installed correctly.*


Lubricate all the O-ring seals with clean transmission fluid. Install the $\Omega/\mathbb{D}$ clutch balance piston.

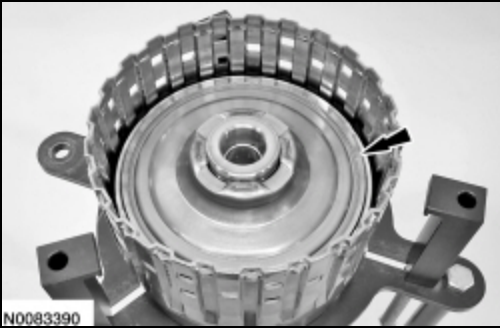

7. Using the Spring Washer Compressor, install a new $\Omega/\mathbb{D}$ clutch balance piston retaining ring.

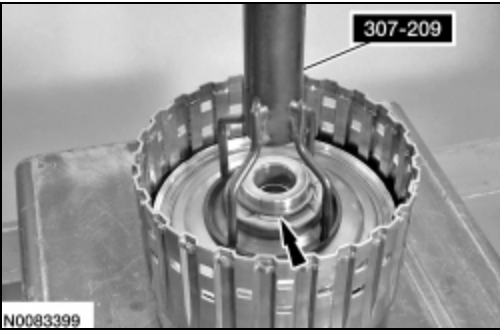


8. Soak the new $\Omega/\mathbb{D}$ clutch plates in clean transmission fluid.

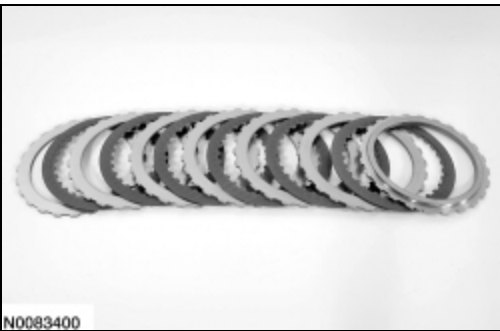

9. **NOTE:** *Friction and steel plate quantity will vary based on engine displacement. For additional information, refer to the Clutch Plate Quantity chart in the Specifications portion of this section.*

Install the new $\Omega/\mathbb{D}$ clutch plates, starting with a steel plate and alternating between friction and steel plates, and ending with the pressure plate on the top.

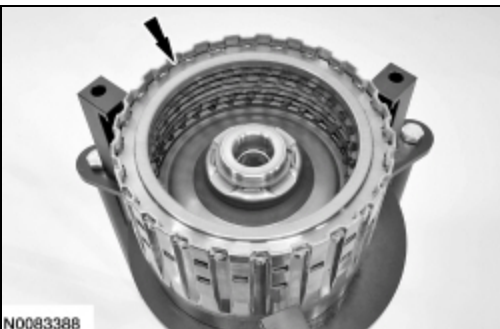


10. Install the $\Omega/\mathbb{D}$ clutch pack snap ring.



11. **NOTE:** All Q/D clutch plates, friction and steel are of a wave-type design.

Install the Q/D clutch assembly into the Clutch End Play Gauge and install the Dial Indicator Gauge with Holding Fixture and position the plunger so it fits into the opening of the snap ring.

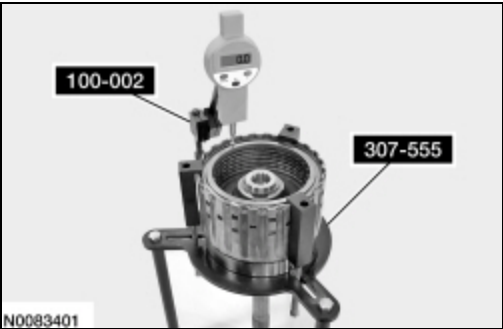

12. With the Dial Indicator Gauge set at zero, lift up on the steel pressure plate so it is against the select fit snap ring. Record this reading as reading A.



13. Rotate the Q/D clutch assembly 180 degrees from the opening of the snap ring, take a second reading and record this reading as reading B.

Description	Reading
Reading A	
Reading B	
Add reading A to reading B for a total end clearance	
Divide the total reading by 2 for an average end clearance	

14. **NOTE:** If the final measurement is not within specification, install a new snap ring until the correct specification is achieved.

- 0.5-0.9 mm (0.019-0.035 in)

If the free pack end clearance between the bottom of the snap ring and the top of the pressure plate is high, remeasure using a thicker select fit snap ring. If the free pack end clearance between the bottom of the snap ring and the top of

the pressure plate is low, remeasure using a thinner select fit snap ring.

15. **NOTE:** *Inspect and install new thrust bearings as required.*

Install the T3 thrust bearing.

