

Pump Assembly

 [Ford Ecat Electronic Parts Catalog](#)


Special Tool(s)



Installer, Fluid Pump Seal
307-556

Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

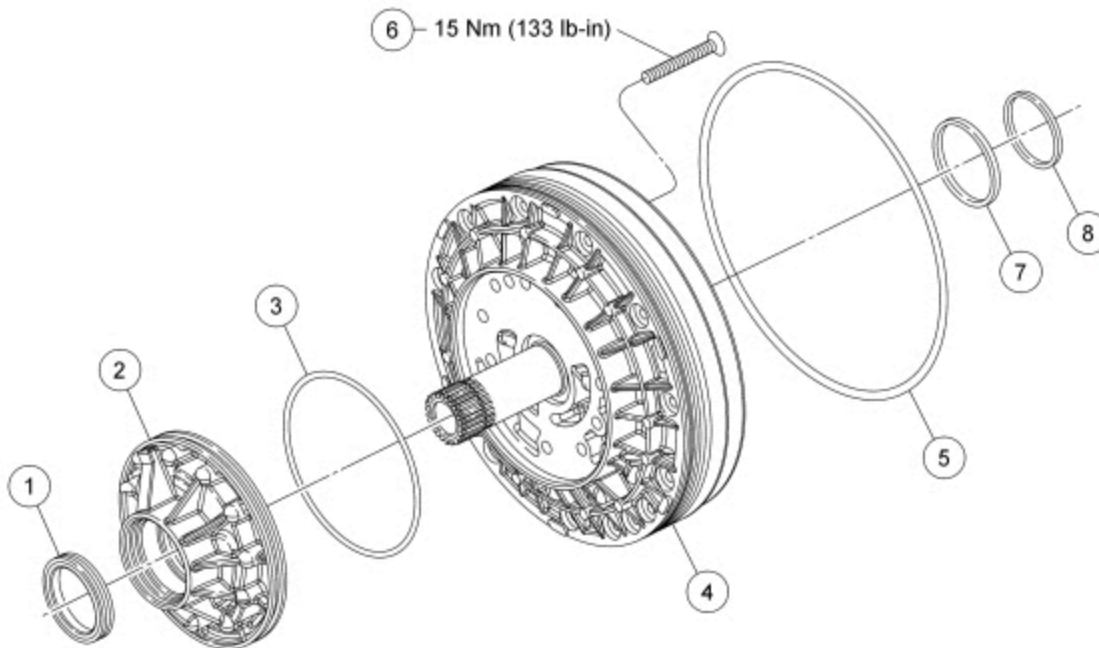


N0093529

Item	Part Number	Description
1	7A248 7A248	Front pump oil seal
2	—	Pump body (part of 7A103)
3	7A248C 7A248C	Pump body seal
4	7A103 7A103	Pump plate assembly
5	7A248A 7A248A	Pump plate assembly seal


6	W707871 W707871 -S300-S300	Pump plate assembly-to-front pump body bolt (11 required)
7	7D019 7D019	Clutch support fluid seal
8	7L323 7L323	Front pump support seal

Disassembly


1. Remove the front pump washer.

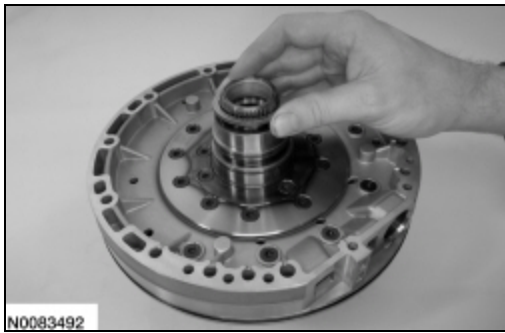


2. If the O-ring seal was not removed during disassembly, remove and discard the front pump O-ring seal from the pump assembly.

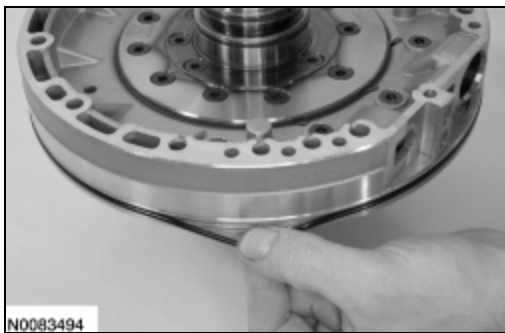


3. Remove and discard the front pump seal rings from the stator support.

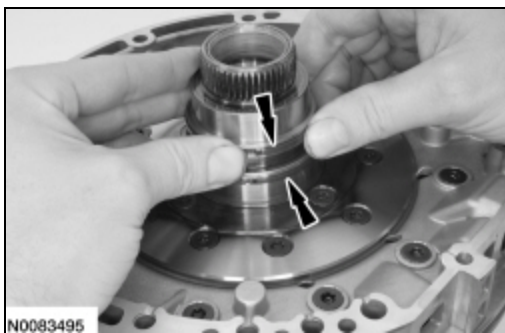


4. Index-mark the pump body to the pump plate assembly.
- 1. Pump body
 - 2. Pump plate assembly
 - 3. Index mark

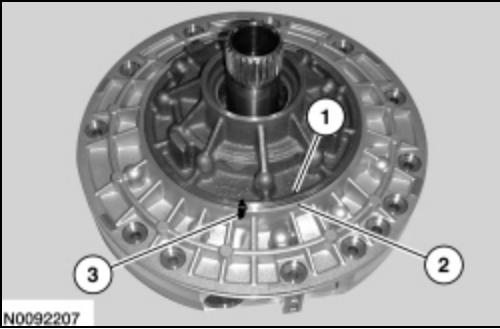


5. Remove the 11 pump plate assembly-to-pump body bolts.

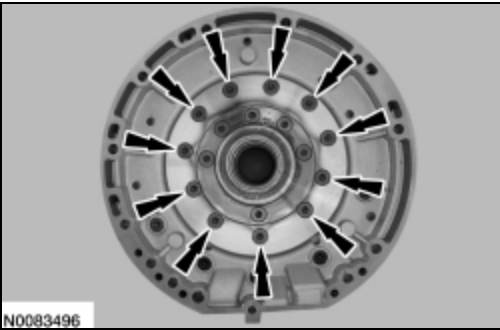



6. Push down on the loose pump plate assembly-to-pump body bolts to remove the pump body from the pump plate assembly and remove the 11 bolts.

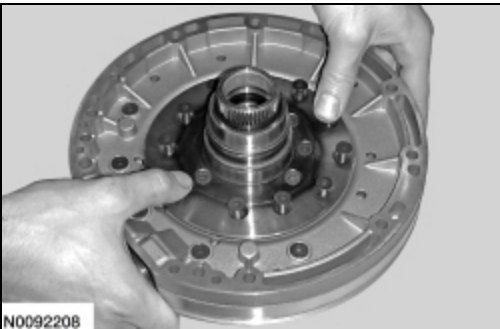

7. Remove and discard the pump body outer seal.

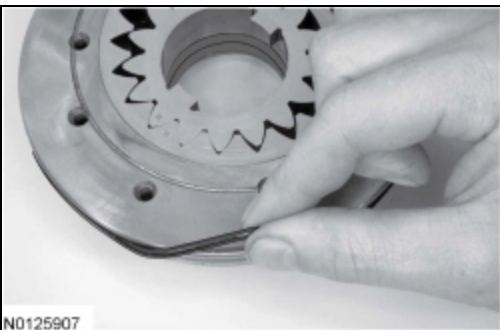


8. Remove the fluid pump gears.

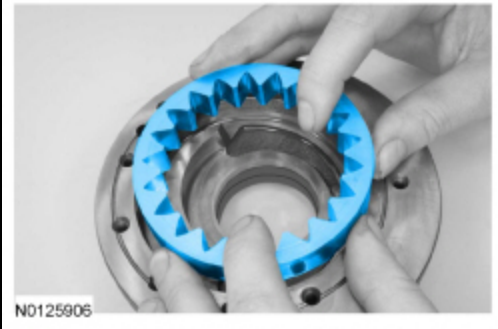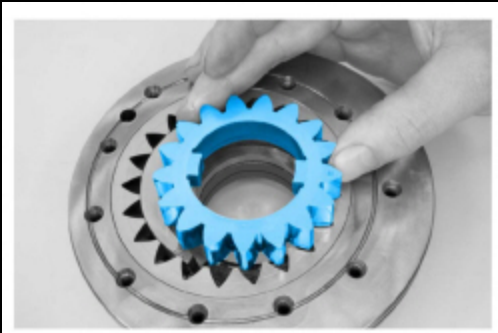



9. Inspect the inner and the outer pump gears for damage.

- Clean all pump components in solvent.
- Dry the parts with compressed air.
- Inspect the pump gears, faces, gear teeth and mating surfaces for damage or scoring.
- Install a new pump as necessary.

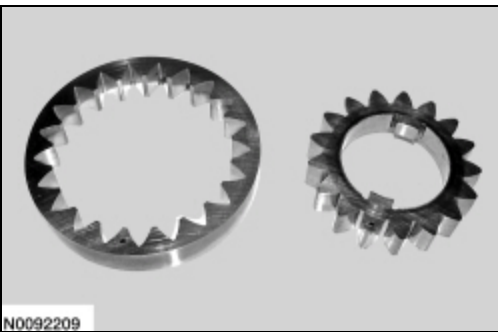


10. Inspect the pump body and pump plate thrust surfaces for damage or scoring.

1. Pump body
2. Pump plate assembly
3. Pump gear thrust surfaces

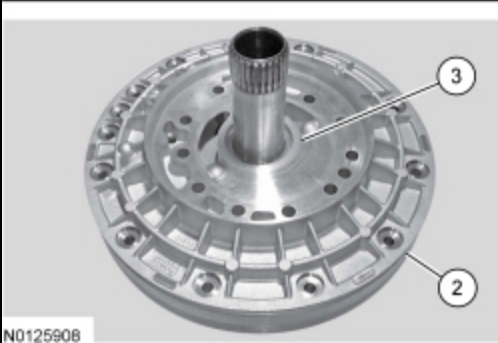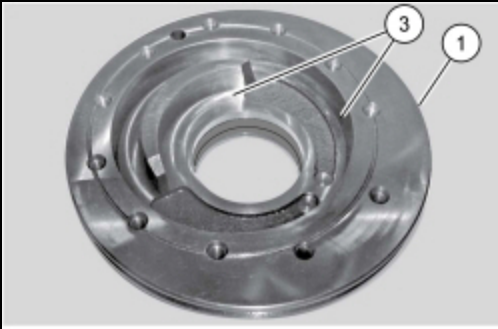

11. Inspect the input shaft bushing for damage or scoring. If the bushing is damaged, install a new pump.

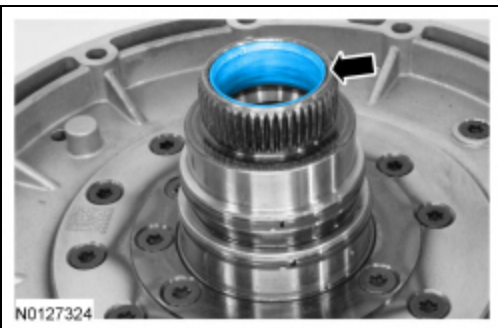


12. Inspect the torque converter hub bushing for damage or scoring. If the bushing is damaged, install a new pump.



Assembly

1. **NOTE:** *Prior to installation, lightly lubricate the pump gears with clean automatic transmission fluid.*

Install the pump gears with the dot facing the pump plate assembly.

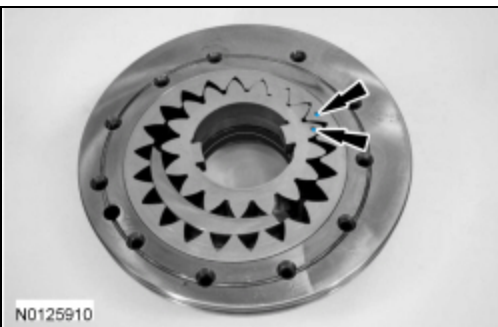


2. Install a new pump body outer seal.




3. Align the marks made during disassembly to correctly assemble the pump. Press the pump body into the pump plate assembly. Visually inspect the pump body-to-pump plate assembly bolt holes to be sure that the pump body and pump plate are correctly aligned.

1. Pump body
2. Pump plate assembly
3. Pump gear thrust surfaces

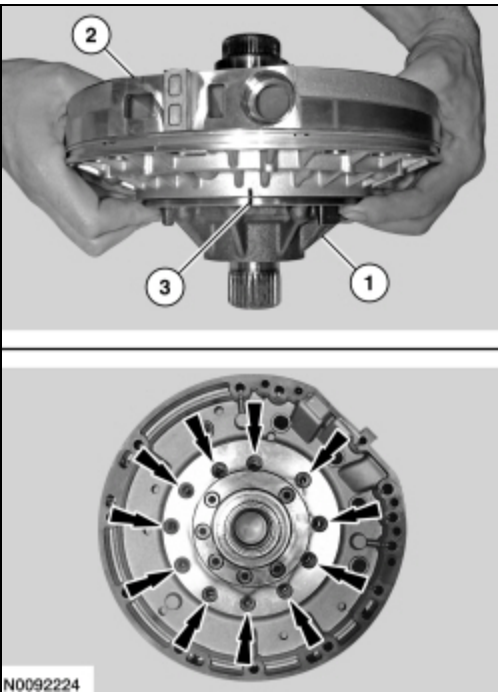

4. Install the pump plate assembly-to-front pump body bolts.

- Tighten to 15 Nm (133 lb-in).

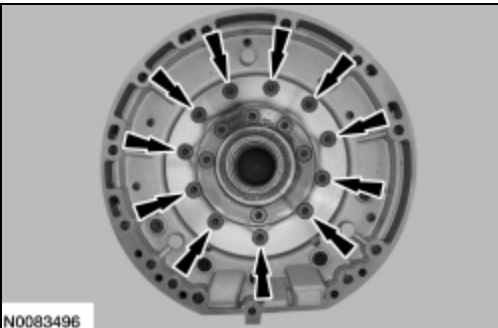


5. NOTICE: Make sure that the seal ends of each seal ring are hooked together or fluid leakage can occur.

Install the 2 front pump seal rings onto the stator support. Make sure the seals are fully seated in the stator support seal grooves and the seal ends are oriented 180 degrees apart.



6. Install the pump outer diameter front pump O-ring seal.

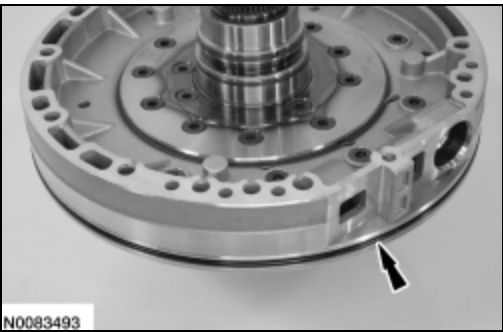

7. Install a new front pump seal on the Fluid Pump Seal Installer 307-556.



8. Using the Fluid Pump Seal Installer 307-556, install the front pump seal.



9. **NOTE:** *Lightly lubricate the thrust washer with petroleum jelly to hold it in place during assembly.*

Install the pump thrust washer.

