

Fluid Pan, Gasket and Filter




Material	
Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV


Removal

NOTICE: The use of any transmission fluid other than specified can result in the transmission failing to operate in a normal manner or transmission failure.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the transmission fluid pan and allow the transmission fluid to drain.

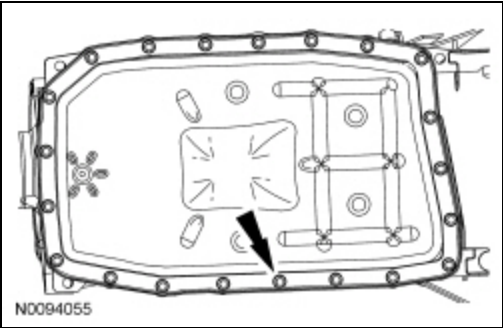


3. Remove the transmission fluid pan gasket.

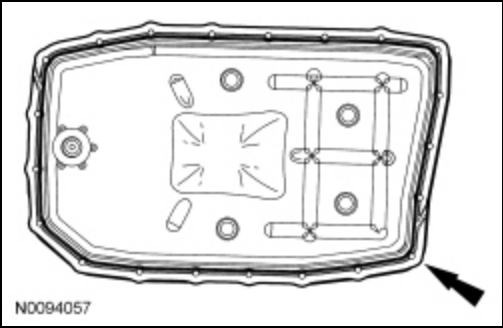


4. **NOTE:** The transmission fluid filter may be reused if no excessive contamination is indicated.

Remove and discard the transmission fluid filter.

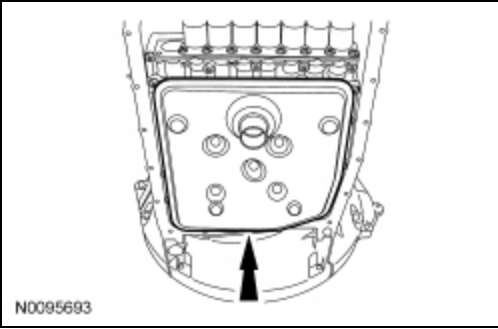


5. Clean and inspect the transmission fluid pan and magnet.

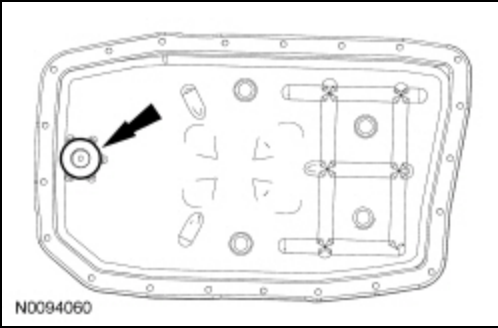


Installation

NOTE: *If the transmission is being repaired for a contamination-related failure, install a new transmission fluid filter and seal assembly. The transmission fluid filter may be reused if no excessive contamination is indicated.*

1. Inspect the transmission case for the transmission fluid filter seal. If the seal is in the case, carefully remove the seal without scratching the case.

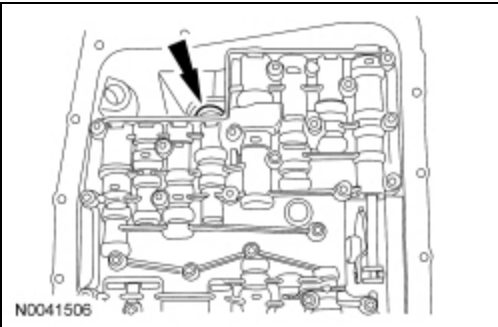


2. Make sure that the seal is on the transmission fluid filter and lubricate the seal with automatic transmission fluid.

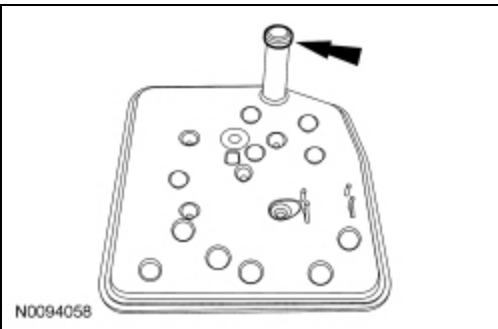


3. **NOTE:** *The transmission fluid filter may be reused if no excessive contamination is indicated.*

If required, install a new transmission fluid filter.

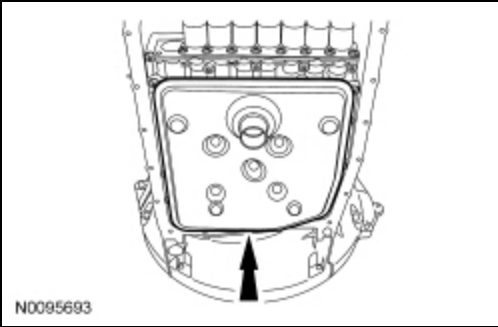


4. Position the magnet in the transmission fluid pan.

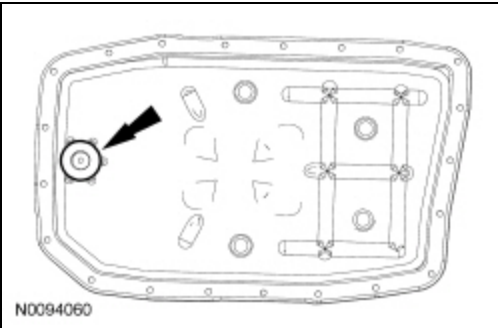


5. **NOTE:** *The transmission fluid pan gasket can be reused if not damaged.*

Install a new transmission fluid pan gasket if required.

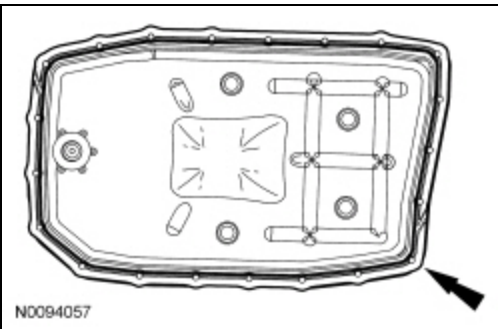

6. Install the transmission fluid pan and tighten the bolts in a crisscross pattern.

- Tighten to 11 Nm (97 lb-in).

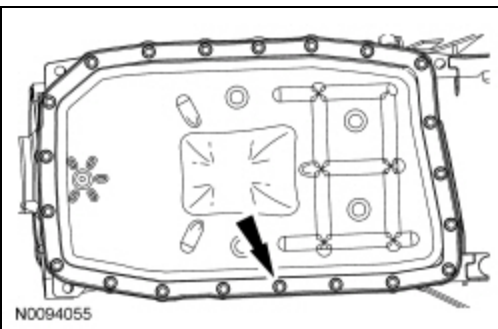

7. Using the Adding Additional Transmission Fluid procedure, fill and check the transmission fluid. For additional information, refer to Transmission Fluid Drain and Refill in this section.